

**British Gas** 

**Scottish Gas** 

---

# RD 628


---

WALL MOUNTED COMBINATION BOILERS FOR CENTRAL HEATING  
AND MAINS FED DOMESTIC HOT WATER

---

## INSTALLATION AND SERVICING INSTRUCTIONS

---

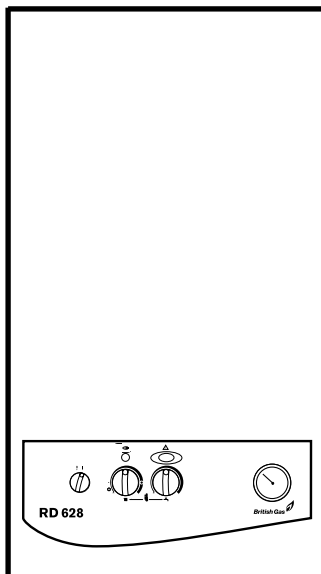

BEFORE Feb 2004

Before FD483

**benchmark**

This appliance is for use with Natural Gas GC NUMBER 47 108 14 (N.G.)

GB

### APPLIANCE OUTPUTS

	Domestic Hot Water	Central Heating
Minimum	8.1 kW	8.1 kW
Maximum	28 kW	28 kW

---

IMPORTANT: THESE INSTRUCTIONS APPLY IN THE UK ONLY

---

AND MUST BE LEFT WITH THE USER OR AT THE GAS METER

---

Read the instructions before starting work - they have been written to make  
the installation easier and prevent hold-ups.

## Contents

1. Installation Regulations .....	Page 2
2. Introduction .....	Page 2
3. Technical Data .....	Page 4
4. Siting the Appliance .....	Page 7
5. Flue Terminal Positions .....	Page 8
6. Air Supply .....	Page 9
7. Sealed System .....	Page 9
Open Vent System .....	Page 9
8. Domestic Hot Water .....	Page 10
9. Gas Supply .....	Page 10

10. Electrical .....	Page 10
11. Installing the Appliance .....	Page 13
12. Commissioning the Appliance .....	Page 21
13. Handover .....	Page 24
14. Inspection and Service .....	Page 24
15. Replacement of Parts .....	Page 27
16. Short Parts List .....	Page 32
17. Operational Flow Diagram .....	Page 34
18. Fault Finding .....	Page 36

## 1. Installation Regulations

### 1.1 Gas Safety (Installation & Use) Regulations 1998:

It is the law that a competent person in accordance with the above regulations installs all gas appliances.

Failure to install appliances correctly could lead to prosecution.

It is in your interest, and that of safety, to ensure compliance with the law.

1.2 The manufacturers notes must not be taken, in any way, as overriding statutory obligations.

1.3 The compliance with a British Standard or European Norm does not, in itself, confer immunity from legal obligations.

1.4 The installation of the appliance must be in accordance with the relevant requirements of the Gas Safety Regulations, current IEE Regulations, Building Regulations, Building Standards (Scotland) and local water by-laws.

1.5 The installation should follow the recommendations of the following British Standards unless otherwise indicated.

BS5440:1 - Flues and ventilation for gas appliances: Flues

BS5440:2 - Flues and ventilation for gas appliances: Air supply.

BS5449 - Central heating for domestic premises.

BS5482 - Domestic propane gas burning installations.

BS5546:1 - Installation of gas hot water supplies.

BS6700 - Domestic water supply in buildings.

BS6798 - Installation of gas fired hot water boilers.

BS6891 - Low pressure gas pipework installations upto 28mm (R1).

BS7593 - Water treatment.

BS7671 - Requirements for electrical installations.

1.6 The appliance does not contain any substances which are harmful to health.

1.7 In certain circumstances, the installer can be held responsible, not only for mistakes on his part but also for damage resulting from the use of faulty materials. We advise that, to avoid any risk, only quality approved branded fittings are used.

1.8 These instructions cover, as far as possible, the foreseeable situations, which may arise.

Contact Worcester Heat Systems Technical Department, Telephone: 08705 266241, for advice on specific installations.

## 2. Introduction

**2.1 *(benchmark)*** The **Benchmark** initiative is the new code of practice to encourage the correct installation, commissioning and servicing of domestic central heating boilers and system equipment.

**The 'Log-book' is a vital document that must be completed by the installer at the time of installation. It confirms that the boiler has been installed and commissioned according to the manufacturers instructions.**

Without the completion of the Log-book or a suitable document, manufacturers may refuse to respond to a call-out from a householder, who will be advised that he or she must call back the installer, who has not fulfilled his obligations to record the information required by the initiative.

### **SERVICE:**

To ensure continued efficient operation of the appliance it must be checked at regular intervals. The frequency of servicing will depend upon the particular installation conditions and usage and can be up to 2 years. The extent of the service required by the appliance is determined by the operating condition of the appliance when tested by fully qualified engineers.

Any service work must be carried out by competent engineers such as British Gas or Corgi registered personnel.

### **2.2 General Information**

The appliance is set to give the maximum output of 28 kW to the domestic hot water and to the heating system. The hot water flow rate is limited to a nominal 10 l/min at a maximum temperature rise of 40°C.

The sanitary water section of the appliance is suitable for mains water pressure of upto 10bar.

### **2.3 Electrical Supply**

230V - 50Hz. Load 180 watts. External fuse 3A (to BS 1362), Internal fuses F1 - 2A, F2 - 1.25A (20mm).

### **2.4 Gas Supply**

The appliances require a maximum of 3.25 m<sup>3</sup>/h of natural gas (G20).

The installation and the connection of the gas supply to the appliance must be in accordance with BS6891.

The meter or regulator should deliver a dynamic pressure of 20 mbar (G20) which is equivalent to about 19 mbar at the gas valve inlet pressure test point.

### **2.5 Installation**

The appliance is suitable for indoor installation only and for use with a sealed system only.

Do not place anything on top of the appliance.

This is a room sealed appliance and a separate combustion air supply is not required in any room or compartment in which the appliance is fitted.

If the appliance is fitted in a cupboard or a compartment is built around it after installation, then the structure must conform to the requirements of BS6798 and BS5440 Part 2. However, because of the low casing losses, there is no need for cooling ventilation openings in the compartment as long as increased clearances are used. See Fig. 5.

**The spaces specified for servicing must be maintained.**(See Table 8).

There is space for the service pipes to pass at the back of the appliance.

## 2.6 Flue

**implefit** Multi-Directional Horizontal Flue Kit.

**implefit** Standard Flue Kit can be adjusted from 425mm to 725mm without cutting.

The minimum length is 265 mm with cutting.

Extended flue lengths up to a maximum of 4m for natural gas appliances.

Optional 45° and 90° flue bend kits are available. **NOTE:** When using flue bends the maximum flue length is reduced (see Section 11.2.8).

If access to the flue terminal could be a problem then a kit is available to enable the horizontal flue to be fitted from inside the house.

A vertical flue system is available.


The flue terminal fitted to the outside wall must not be obstructed or damaged. A terminal guard Type K2 GC 393553 is available from Tower Flue Components, Vale Rise, Tonbridge TN9 1TB.

## 2.7 Controls

The appliance has controls for switching the appliance On or Off, [this does not electrically isolate the appliance] for adjusting the CH and DHW temperatures. The CH control knob also switches the CH off and on.

A room thermostat and/or an externally mounted programmer for mains voltage operation may be connected to the appliance.

Fig. 1. Facia controls

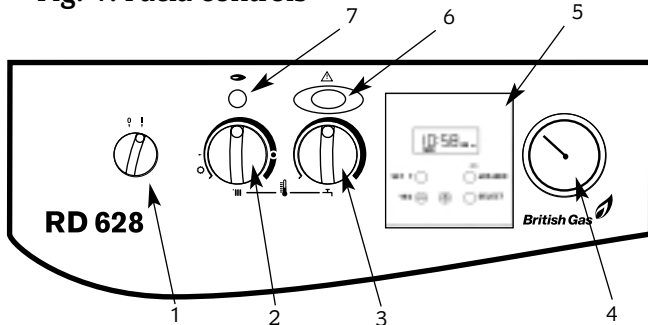

- |                            |   |
|----------------------------|---|
| 1. Mains On/Off control    | 5. Optional programmer                      |
| 2. CH temperature control  | 6. Lockout indicator light and reset button |
| 3. DHW temperature control | 7. Burner indicator light                   |
| 4. System pressure gauge   |   |

## 2.8 System

**enchmark** All dirt must be flushed from the system before connecting the appliance. The system can be pre-piped and flushed before the appliance is fitted.

The connections in the system must withstand an operating pressure of up to 3 bar.

Radiator valves must conform to BS2767: 10:1977.

Table 3 gives the pump head available for the system and the required temperature differential.

A drain cock must be fitted to the lowest point and an air vent to the highest point of the system.

## 2.9 Showers, Bidets, Taps and Mixing Valves

All taps and mixing valves must be suitable for the available mains pressure and temperatures upto 65°C.

It may be necessary to fit a pressure reducing valve.

Hot and cold mains fed water can be supplied to override bidets but is subject to local water company requirements.

The flow of water from individual outlets varies on all mains fed systems that are not fitted with flow balancing valves.

Thermostatically controlled or pressure equalising shower valves give extra comfort and protection.

If a pressure equalising valve is fitted then the domestic hot water temperature should be set to maximum.

## 2.10 Safety

**The appliance must not be operated with the inner casing cover removed or without being full of water and pressurised. The gas and electricity supplies must be turned off before working on the appliance.**

Temperature monitoring controls are fitted to prevent overheating. Automatic frost protection is provided together with automatic pump seizure protection.

The gas valve solenoids are automatically checked for gas soundness. **IMPORTANT: Where back-flow prevention devices, including water meters, are fitted the expansion of hot water into cold water main can be prevented. This can result in a pressure build-up that may cause damage to the boiler and household devices such as showers, washing machines etc.**

**In these cases we recommend that a mini-expansion vessel be fitted adjacent to the boiler in the cold water pipe.**

## 2.11 Operation

### 2.11.1 Central Heating:

A demand for heat will ignite the burner.

It will operate at minimum pressure for 15 seconds before increasing to the maximum pressure over a period of 1 minute and then automatically match the system requirements. At the end of the demand the burner will go out, the pump will continue to run for upto 4 minutes or the fan for 15 seconds. There is an anti-cycle time of 3 minutes.


### 2.11.2 Domestic Hot Water:

A demand for hot water will light the burner. The pressure will immediately rise to maximum. At the end of the demand the fan will continue to run for 15 seconds if there is no heating demand. There is an anti-cycle time of 10 seconds.

### 2.11.3 Domestic hot water & Central Heating mode

\*\*The demand for hot water will override the CH function when the appliance is in the heating and hot water mode of operation. In winter it may be necessary to reduce the flow at the taps to maintain the delivery temperature.

Fig. 2. Water flow diagram.

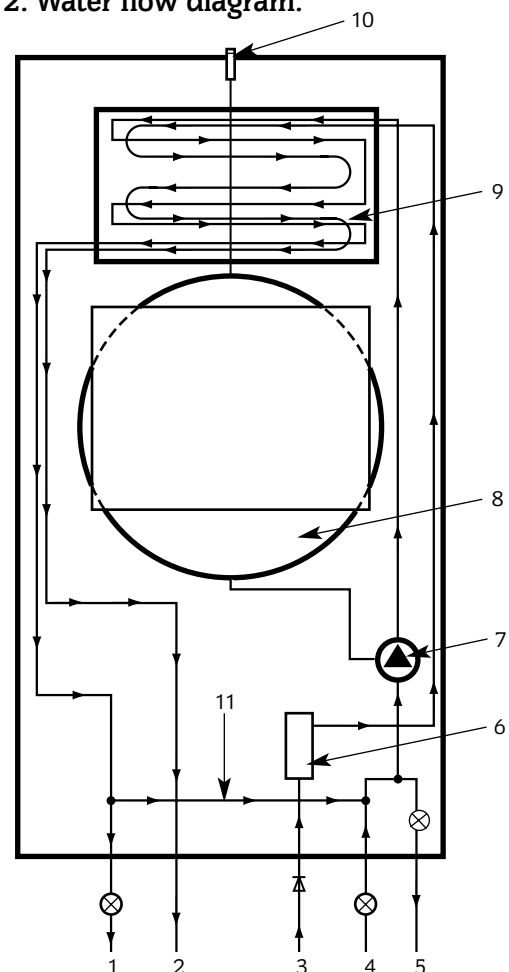

- |                                    |                           |
|------------------------------------|---------------------------|
| 1. CH flow                         | 7. Circulating pump       |
| 2. Domestic hot water flow         | 8. Expansion vessel       |
| 3. Domestic hot water supply       | 9. Primary heat exchanger |
| 4. CH return                       | 10. Automatic air vent    |
| 5. Pressure relief valve discharge | 11. By pass               |
| 6. Domestic water flow turbine     |                           |

### 3. Technical Data

Table 1.

NOMINAL BOILER RATINGS (10 Minutes After Lighting)			
BOILER ADJUSTED FOR G20 (Natural Gas)			
OUTPUT	INPUT (Net)	BURNER PRESSURE	GAS RATE
kW	kW	m bar.	m <sup>3</sup> /h
8.1	9.2	0.7	0.97
28	30.7	13.1	3.25

Natural Gas: Net Input = Gross Input x 0.901

**NOTE:** With longer flue lengths, not using a restrictor, the minimum burner pressure will rise to 1.1mbar on G20 appliances.

Table 2.

FLUE DETAILS			
<b>HORIZONTAL FLUE</b>			
WALL HOLE DIAMETER	EXTERNAL FIX	mm	110
	INTERNAL FIX	mm	130
STANDARD FLUE	MINIMUM LENGTH	mm	275/*425
	MAXIMUM LENGTH	mm	725
EXTENDED FLUE	MAXIMUM LENGTH	mm	4000
FLUE ASSEMBLY DIAMETER		mm	100

\* NOTE : Minimum uncut length

Table 3

MAXIMUM AVAILABLE PUMP HEAD			
BOILER OUTPUT kW	HEAD Metres	MIN. FLOW RATE L/min.	FLOW/RETURN DIFFERENTIAL °C
6.9	5.2	9	11
12	3.8	15.6	11
18	1.8	22	11.7
28	1.8	22	18

Table 4

MECHANICAL SPECIFICATIONS	
CENTRAL HEATING FLOW - COMPRESSION	22mm
RETURN - COMPRESSION	22mm
COLD WATER INLET - COMPRESSION	15mm
DOMESTIC WATER FLOW - COMPRESSION	15mm
GAS INLET	Rp <sup>3</sup> / <sub>4</sub>
RELIEF VALVE DISCHARGE (PUSH-IN)	15mm
CASING HEIGHT	740mm
CASING WIDTH	440mm
CASING DEPTH	360mm
WEIGHT - LIFT (2 person lift)	36kg
WEIGHT - PACKAGED	50kg
WEIGHT - DRY	40kg

**Table 5**

PERFORMANCE SPECIFICATIONS			
PRIMARY WATER CAPACITY	litres		2.0
IP RATING (WHOLE OF BOILER) - WITH/WITHOUT PROGRAMMER FITTED			IP 20
MAXIMUM MAINS INLET PRESSURE	bar		10
MINIMUM MAINS INLET PRESSURE (WORKING) FOR MAXIMUM FLOW	bar		1.0
MINIMUM MAINS INLET PRESSURE (WORKING) FOR OPERATION	bar		0.25
DOMESTIC HOT WATER TEMPERATURE RANGE	°C		40 - 60
MAXIMUM CENTRAL HEATING FLOW TEMPERATURE	°C		82 (nom)
MAXIMUM CENTRAL HEATING SYSTEM SET PRESSURE	bar		2.65
MINIMUM CENTRAL HEATING SYSTEM PRESSURE	bar		0.5
OUTPUT TO CENTRAL HEATING & DHW	kW	NATURAL GAS (G20)	28
DOMESTIC HOT WATER SPECIFIC RATE -		30°C RISE l/min	13.5
MAXIMUM DOMESTIC HOT WATER FLOW RATE -		40°C RISE l/min	10
FLUE GAS MASS FLOW RATE			17.4
FLUE GAS TEMPERATURE °C			146.0
NO <sub>x</sub> CLASSIFICATION			Class 3
SEDBUK NUMBER			78.2
SEDBUK BAND*			D

\* The value is used in the UK Government Standard Assessment Procedure [SAP] for the energy rating of dwellings. The test data from which it has been calculated have been certified by the GASTEC notified body.

**Table 6**

DOMESTIC HOT WATER TEMPERATURE RISE				
DISCHARGE RATE l/min	7	8	9	10
TEMPERATURE RISE °C	57	50	45	40

**Table 7**

GAS SUPPLY SYSTEM - BASED ON NG (G20)				
TOTAL LENGTH OF GAS SUPPLY PIPE (COPPER) metres				
3	6	9	12	
GAS DISCHARGE RATE - PRESSURE DROP mbar. m <sup>3</sup> /h				PIPE DIAMETER mm
8.7	5.8	4.6	3.9	22
18.0	12.0	9.4	8.0	28

**Table 8**

	CLEARANCES (mm)		
	INSTALLATION	SERVICE	UNVENTILATED COMPARTMENT
ABOVE FLUE ELBOW	30	30	150
IN FRONT OF APPLIANCE	600	600	*240
BENEATH APPLIANCE	200	200	200
RIGHT AND LEFT HAND SIDE	10	10	80


Refer to Section 6.

\* Front clearance is to a removable panel (eg. door)


**Table 9**

SYSTEM CAPACITY			
TOTAL SYSTEM VOLUME litres			
INITIAL PRESSURE bar	INITIAL CHARGE PRESSURE bar		
	0.5	1.0	1.5
1.0	57	75	N/A
1.5	31	42	52


**Fig. 3. Appliance casing dimensions and required clearances for installation/servicing**

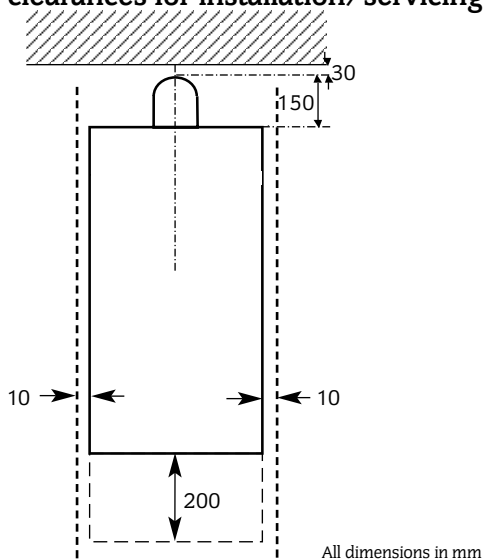


**Fig. 4. Appliance casing dimensions and required clearances (side view).**

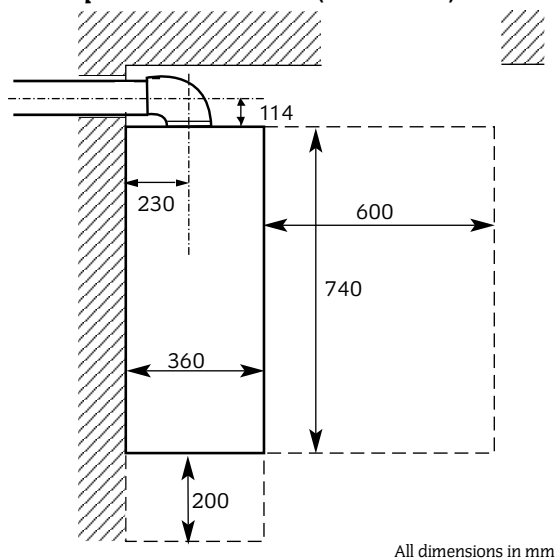


**Fig. 5. Unventilated compartment clearances**

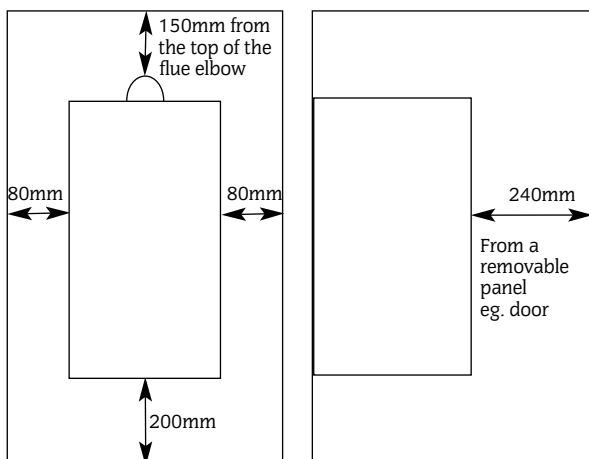

**Fig. 6. Side flue opening**

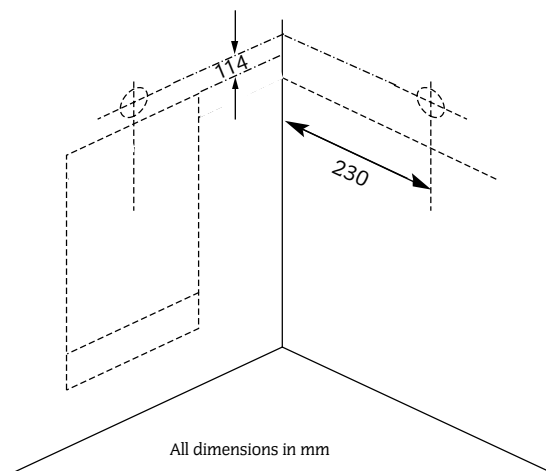

**Fig. 7. Pipework connections**

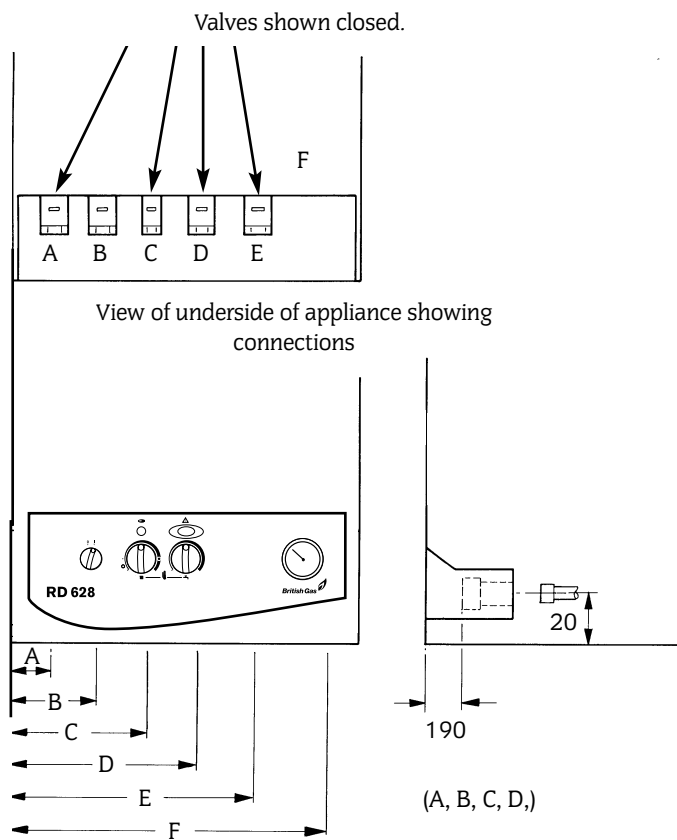

A	CH Flow	=	75
B	DHW Flow	=	140
C	Gas	=	205
D	Cold Water Inlet	=	270
E	CH Return	=	335
F	Relief Valve Discharge	=	395

All dimensions in mm

## 4. Siting The Appliance

The appliance may be installed in any room but refer to the requirements of the current IEE Regulations and, in Scotland, the relevant electrical provisions of the Building Regulations with respect to the installation of appliances in rooms containing baths or showers.

Where a room sealed appliance is installed in a room containing a bath or shower, any switch or appliance control using mains electricity must NOT be able to be touched by a person using the bath or shower. The IP rating of the appliance does not allow the appliance to be fitted in the shaded areas as shown in fig. A.

The appliance is NOT suitable for external installation

No special wall protection is required. The wall must be able to support the weight of the appliance. Refer to Table 4.


The specified clearances must be available for installation and servicing. Refer to Table 8 and Fig.3, 4.

The appliance can be installed in a cupboard/compartment to be used for airing clothes providing that the requirements of BS6798 and BS5440 Part 2 are followed. Refer to Section 2.5.

The airing space must be separated from the boiler space by a perforated non-combustible partition. Expanded metal or rigid wire mesh is acceptable provided that the major dimension is less than 13mm. The clearance between the front of the appliance and the cupboard or compartment door should be not less than 75mm.

Fig. A. IP Zones.

Do not fit appliance in shaded areas.

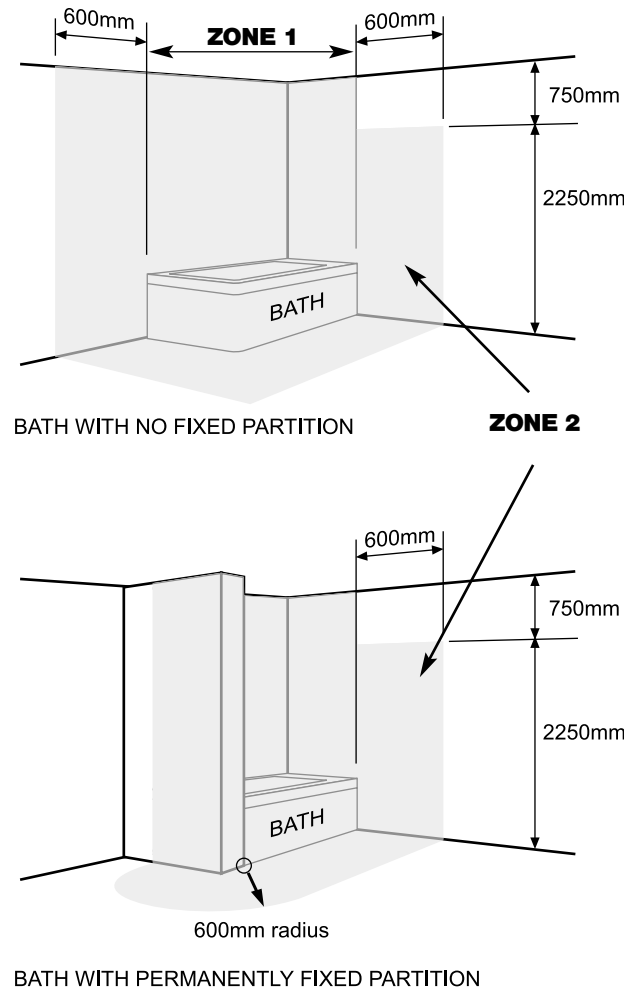

**NOTE: ZONE 1**

If a demountable shower is installed within ZONE 1, then the start of ZONE 2 will be 1.2m away from the shower outlet at the wall.

## 5. Flue terminal positions

The flue system must be installed following the requirements of BS5440: 1.

Standard horizontal flue kit length is 330 – 725mm with extension kits for flues upto 4m for natural gas.


The terminal must not cause an obstruction or the combustion products a nuisance. Under some conditions the terminal might steam and positions where this might be a nuisance should be avoided. Refer to Fig. 8 and Fig. B.

If the terminal is less than 2m above a surface to which people have access then a guard must be fitted. The guard must be evenly spaced about the terminal and fixed with plated screws.

A flue terminal guard is available from Tower Flue Components, Vale Rise, Tonbridge, TN9 1TB.

### Fig. B. Siting a vertical flue terminal

Terminal position for a flat roof.

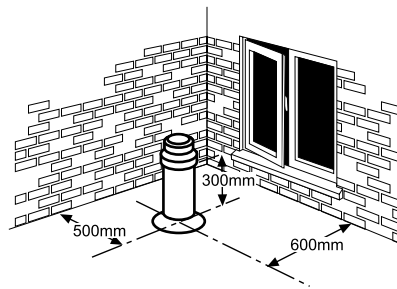

Terminal position for a pitched roof.


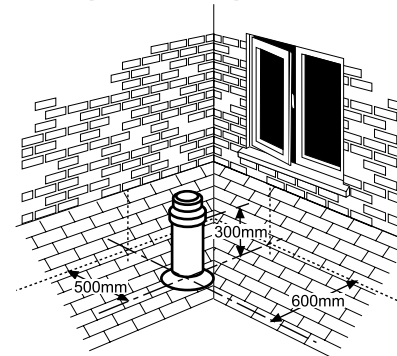


Fig. 8. Siting of the flue terminal.

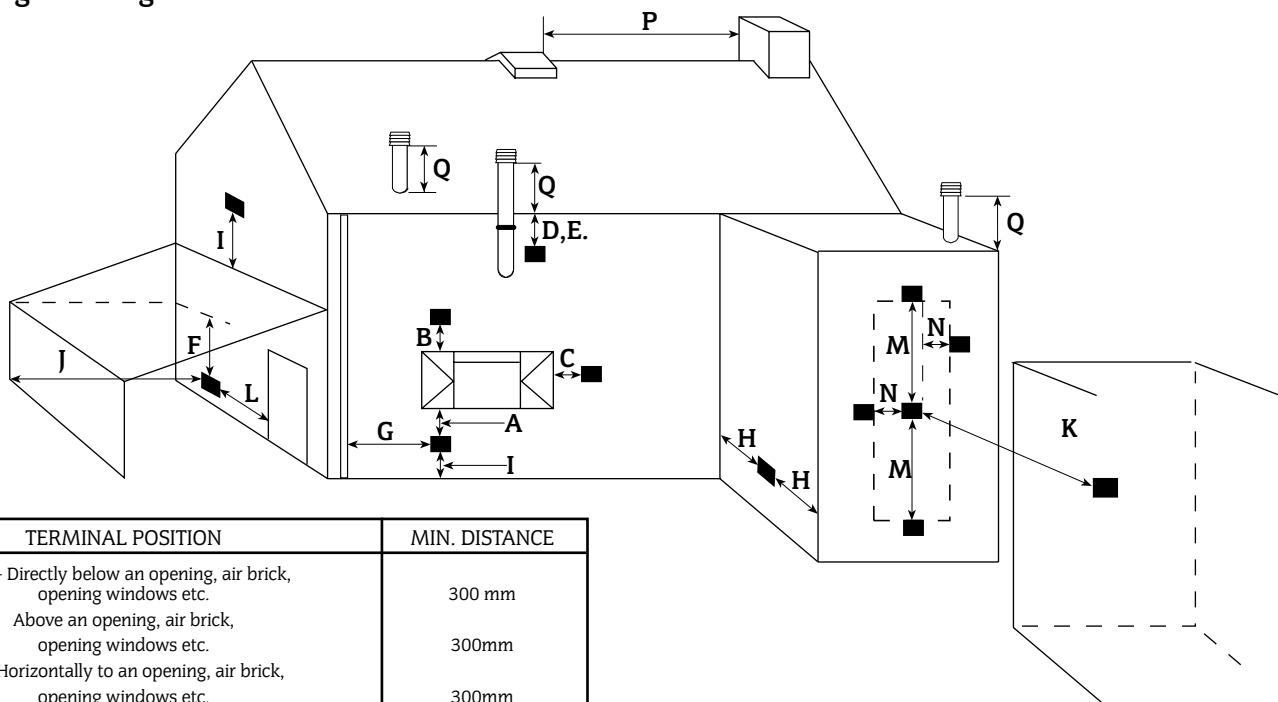

TERMINAL POSITION	MIN. DISTANCE
A <sup>3</sup> - Directly below an opening, air brick, opening windows etc.	300 mm
B- Above an opening, air brick, opening windows etc.	300mm
C-Horizontally to an opening, air brick, opening windows etc.	300mm
D-Below gutters, soil pipes or drain pipes.	75mm
E- Below eaves.	200 mm
F-Below balconies or car port roof. (lowest point)	200 mm
G-From a vertical drain pipe or soil pipe.	150 mm
H-From an internal or external corner.	300 mm
I-Above ground, roof or balcony level.	300 mm
J-From a surface facing the terminal.	600 mm
K-From a terminal facing the terminal	1200 mm
L-From an opening in a car port (e.g. door window) into dwelling.	1200 mm
M-Vertically from a terminal on the same wall.	1500 mm
N-Horizontally from a terminal on the same wall.	300 mm
O-From the wall on which the terminal is mounted	N/A
P-From a vertical structure on the roof	N/A
Q- Above intersection with roof	N/A

NOTE N/A = Not applicable

<sup>3</sup>In addition, the terminal should be not nearer than 150mm (fanned draught) to an opening in the building fabric formed for the purpose of accommodating a built-in element such as a window frame.

Do not fit the flue terminal less than 300mm from a neighbouring property, including party walls and boundary lines.



## 6. Air Supply

6.1 A separate vent for combustion air is not required. Refer to BS5440:2.

If the appliance is in a cupboard or compartment then, because of the low casing losses, it is not necessary to have any cooling ventilation for the boiler. Refer to Section 2.5. There must be increased clearance around the appliance to allow the free movement of the air.

Refer to Table 8 and Fig 3, 4 and 5.

6.2 If the appliance is to be fitted in a cupboard or compartments with less clearance than the minimum clearances given in Section 4. (Siting The Appliance) then permanent vents for cooling are required. One at high level and one at low level, either direct to outside air or to a room. Both vents must pass to the same room or be on the same wall to the outside air.

6.4 The minimum free areas required are:

POSITION OF AIR VENTS	AIR FROM THE ROOM	AIR DIRECT FROM OUTSIDE
HIGH LEVEL	307cm <sup>2</sup>	154cm <sup>2</sup>
LOW LEVEL	307cm <sup>2</sup>	154cm <sup>2</sup>

## 7. Sealed System

The system must comply with requirements of BS6798 and BS5449 and must not be operated without being full of water and correctly pressurised. Refer to Fig 8.

The pressure relief valve will operate at 3 bar. The discharge pipe, of 15mm diameter, must be directed as such that the discharge of water or steam is visible, will not discharge onto the occupants of the premises or cause any damage to the premises, in particular any electrical components or wiring.

The expansion vessel, to BS4814, has a capacity of 8 litres charged to 0.5 bar, which is suitable for a static head of 5 metres. A schraider type valve allows the pressure to be increased if the static head is greater than 5 metres.

If the expansion vessel fails then it must be replaced with the designated spare part.

Refer to BS 7074:1, BS5449 and Table 9 for a guide to the available system capacity. The maximum system design pressure is 1.5 bar. If the pressure is above 2.65 bar when the appliance is at maximum temperature then an additional expansion vessel must be fitted as near to the appliance as possible in the return pipe. The pressure gauge shows the system pressure.

Fill and pressurise the system through the filling loop supplied.

**The system and the appliance must be fully vented.** Repeated venting loses water from the system, which must be replaced. The make-up connection must be close to the appliance in the heating return pipe through an approved non-return valve.

Refer to current building regulations or Good Practice Guide 302 which lists the requirements.

Plastic pipes must not be directly connected to the boiler. A copper to plastic transition piece should be positioned a minimum of 600mm from the boiler. Some plastic pipes are permeable to oxygen and must be avoided. A plastic pipe with a polymeric barrier should be used.

The connection to the mains water supply must have the approval of the local Water Company.

The pump is set at maximum and should not be adjusted.


All connections in the system must withstand a working pressure of up to 3 bar.

The radiator valves must conform to BS 2767:10 and other valves to BS1010.


### Open Vent System

**This appliance is NOT suitable for connection to an open vent system.**


Fig. 9. Sealed primary water system.

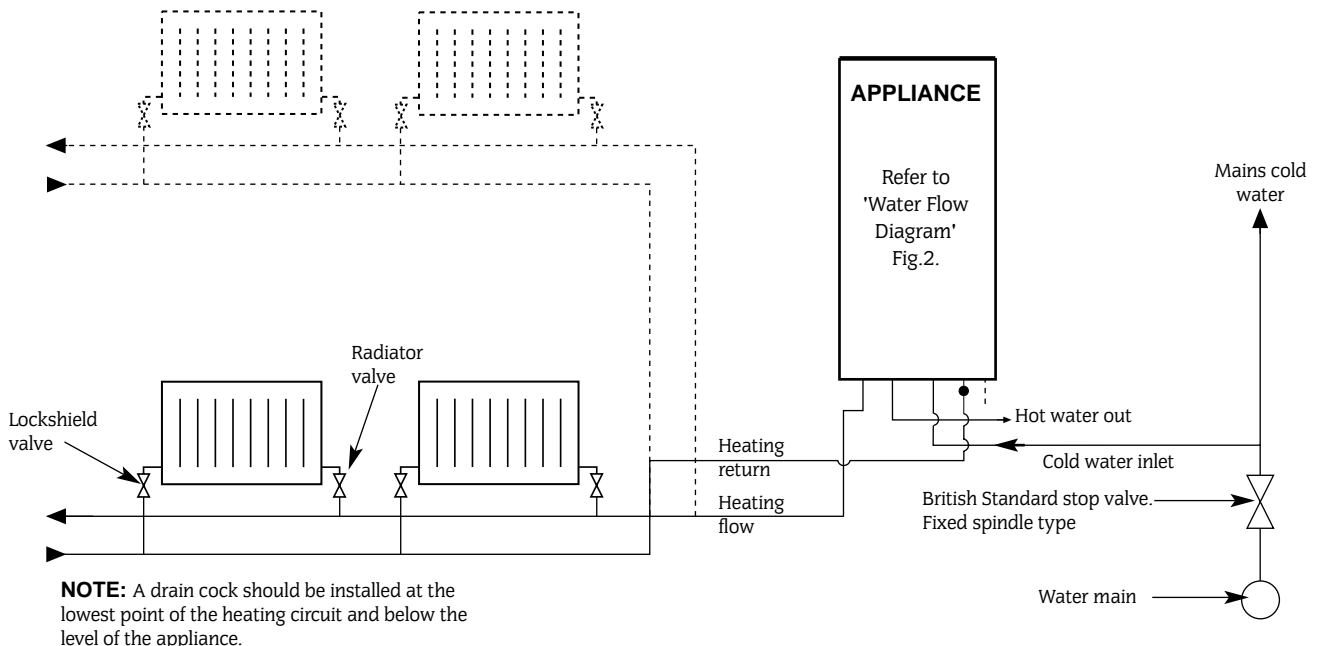

**Fig 10 - System Fill**

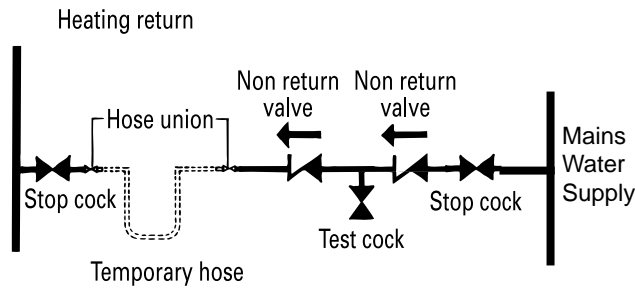

**Fig 11 - System make up**

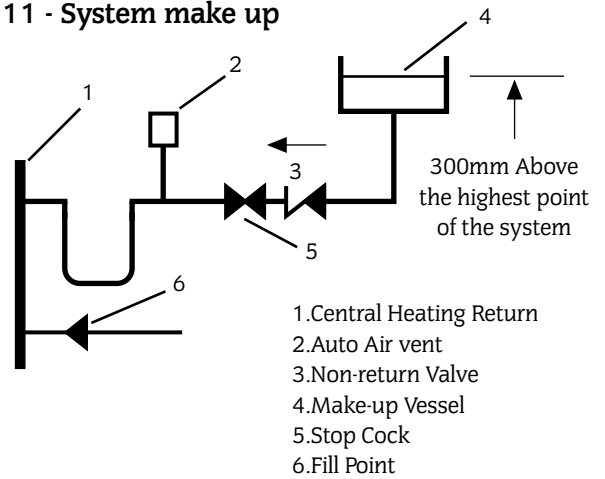

1. Central Heating Return
2. Auto Air vent
3. Non-return Valve
4. Make-up Vessel
5. Stop Cock
6. Fill Point

## 8. Domestic Hot Water

It may be necessary to contact the local Water Company before connecting the appliance. Where back-flow prevention devices, including water meters, are fitted the expansion of hot water into cold water main can be prevented. This can result in a pressure build-up that may cause damage to the boiler and household devices such as showers, washing machines etc.

In these cases we recommend that a mini-expansion vessel be fitted adjacent to the boiler in the cold water pipe.

The last 600mm of mains water pipe before the appliance must be in copper.

The domestic hot water circuit of the appliance is suitable for a mains pressure of upto 10bar. A pressure reducing valve must be fitted if necessary.

A mains water supply isolating valve is fitted.

The maximum hot water flow rate is set at the factory to 10 l/mi giving a nominal temperature rise of 40°C with the temperature control at maximum. This rate is equivalent to a Specific Rate of 12.9 l/min at a rise of 30°C. Refer to Table 6. The temperature rise, upto the maximum set by the user, is maintained by the automatic modulation of the heat input.

In winter when the mains inlet water temperature is lower it may be necessary to reduce the water flow at the tap or shower to maintain the maximum delivery temperature.

It is recommended that long pipe runs to taps or showers are insulated to prevent the rapid cooling of the water.

Hot and cold taps and mixing valves must be suitable for the available mains pressure.

No anti-syphonage arrangements are necessary for fixed head showers. The hose of a loose-head shower must be fixed so that the shower head cannot get closer than 25mm to the top edge of the bath to prevent its immersion in the water. Alternatively the shower can be fitted with an anti-syphonage device at the flexible hose connection. Thermostatically controlled or pressure balancing shower valves will give extra comfort and guard against extreme temperature.

Hot and cold mains water direct to a bidet is, subject to the approval of the local water company, permissible provided that the bidet is of the overrim flushing type. The outlets must be shrouded and unable to be fitted with a hand-held spray. No anti-syphon arrangements are needed.

**LIME SCALE:** In areas of temporary hardness [ $>200$ ppm of calcium carbonate] it is suggested that a proprietary scale reducer is fitted in the mains cold water connection to the appliance. Installation of a scale inhibitor assembly must be in accordance with the requirements of the local Water Company. The water hardness can be determined by reference to the local Water Company. An isolating valve should be fitted to allow servicing.

## 9. Gas Supply

The appliance requires a maximum of 3.25m<sup>3</sup>/h of natural gas (G20).

A natural gas appliance must be connected to a governed meter. The installation and connection of the gas supply to the appliance must be in accordance with BS6891.

The meter and the pipework to the appliance must be checked, preferably by the gas supplier, to ensure that a dynamic pressure of 20mbar for natural gas is available at the appliance isolation valve (contact gas supplier if in doubt) equivalent to about 19mbar at the gas valve inlet pressure test point and that the gas flow is adequate for all the installed gas appliances operating together.

## 10. Electrical

Mains supply: 230V ~ 50 Hz 180watts.

External fuse 3A to BS1362. Internal fuses F1-T2A, F2-TI.25A (20mm). Spare internal fuses are supplied with the appliance.

The appliance must be earthed and it must be possible to completely isolate the appliance.

The mains cable must be 0.75mm<sup>2</sup> (24x0.20 mm) to BS6500 - Table 15 or 16 and must be connected to the terminal ST12 marked L (red or brown lead), N (black or blue lead) and the Earth stud (green or green/yellow lead) and secured with the cable clamp. The Earth lead must still be slack when the other leads are taut. Refer to Fig 14 and 15.

**The appliance must be earthed**

The wiring between the appliance and the electrical supply shall comply with current IEE wiring regulations (and any local regulations which apply) for fixed wiring to a stationary appliance. NB It must be possible to completely isolate the appliance with at least 3mm contact separation in both poles.

A room thermostat or externally mounted programmer must be suitable for mains voltage operation. The leads must be securely fixed in the cable clamps. See fig. 35.

A fascia mounted digital programmer or mechanical timer or receiver for wireless programmable room thermostat is available as an optional extra. Instructions are supplied with the product.

Fig. 12. Wiring diagram.



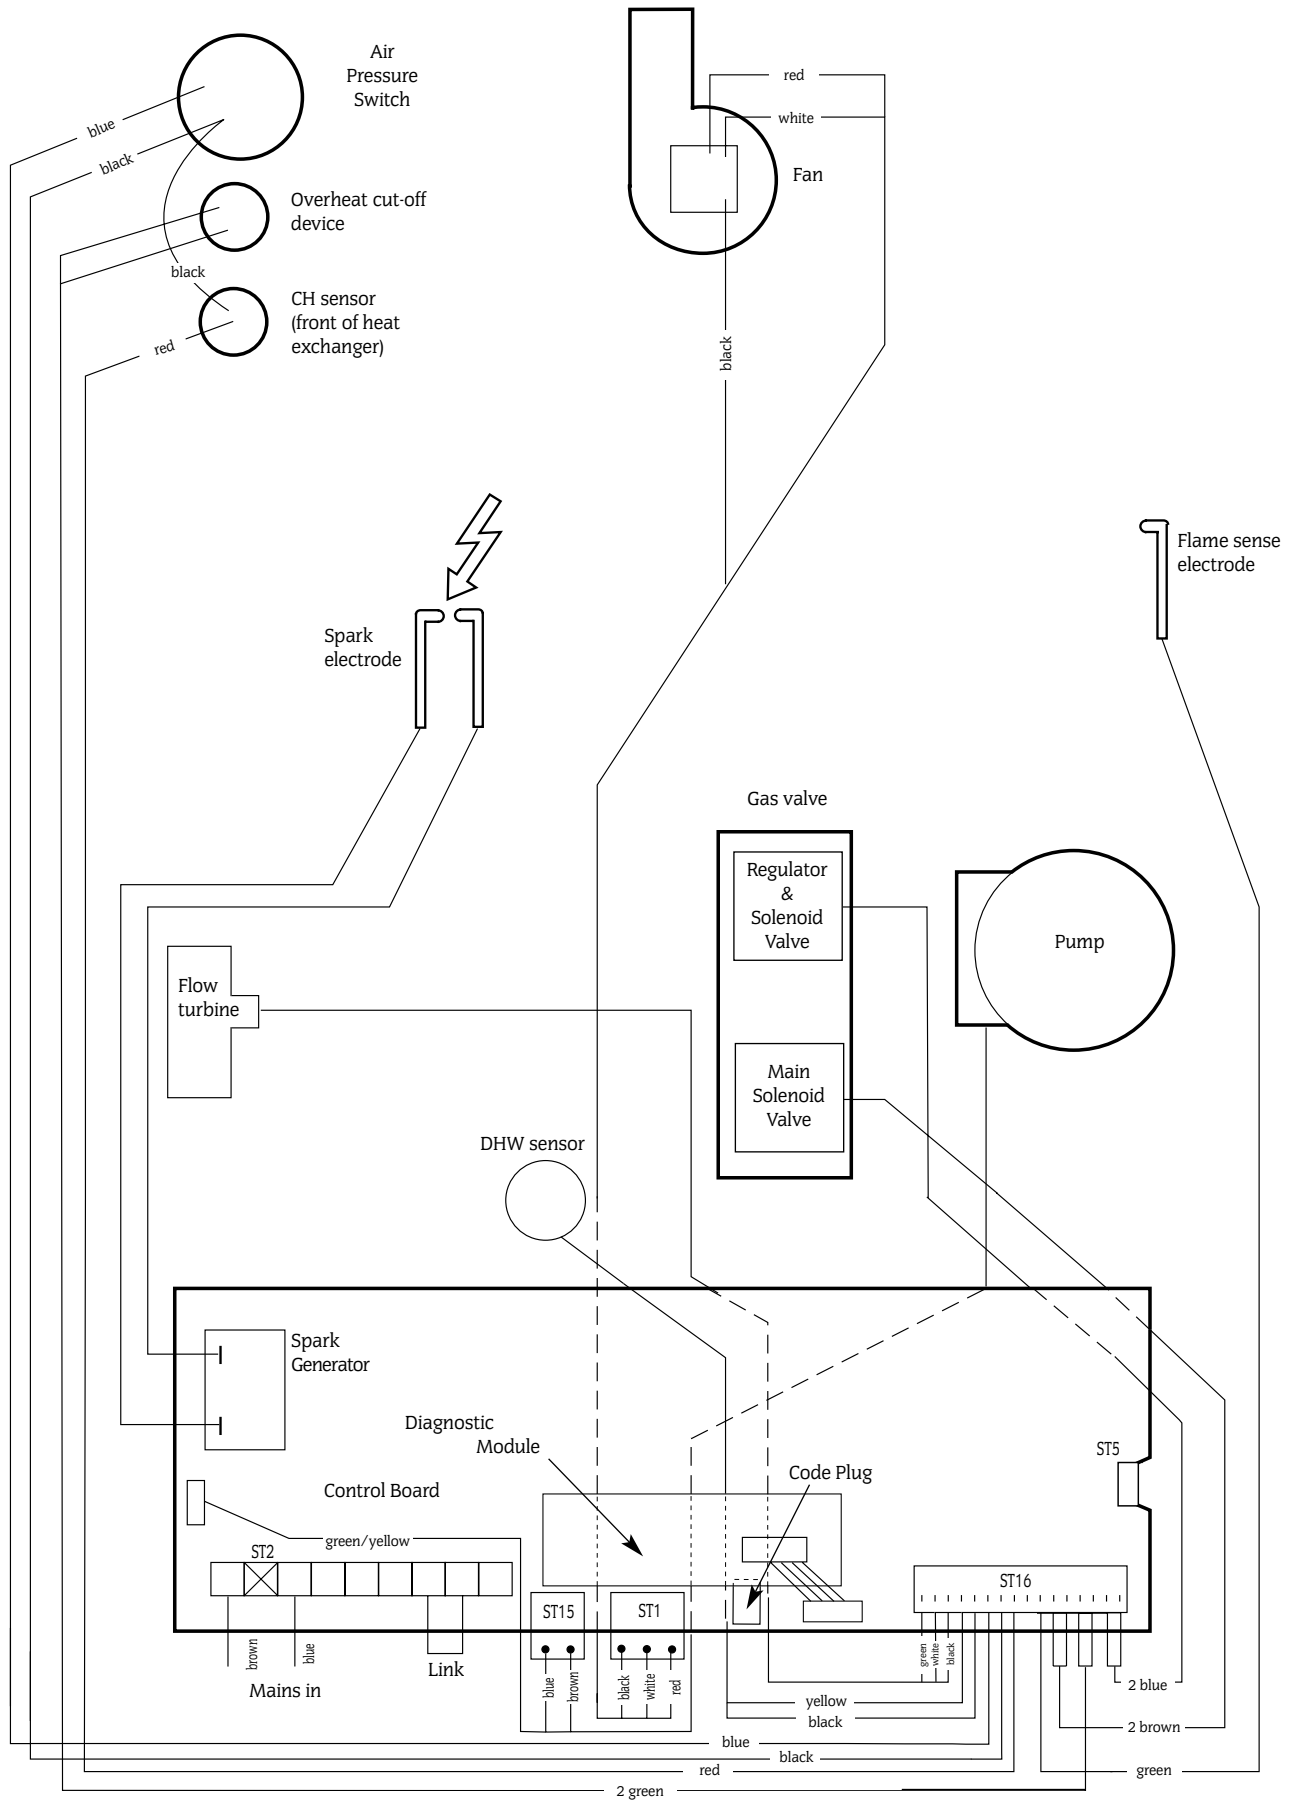


Fig. 13. Functional flow diagram.

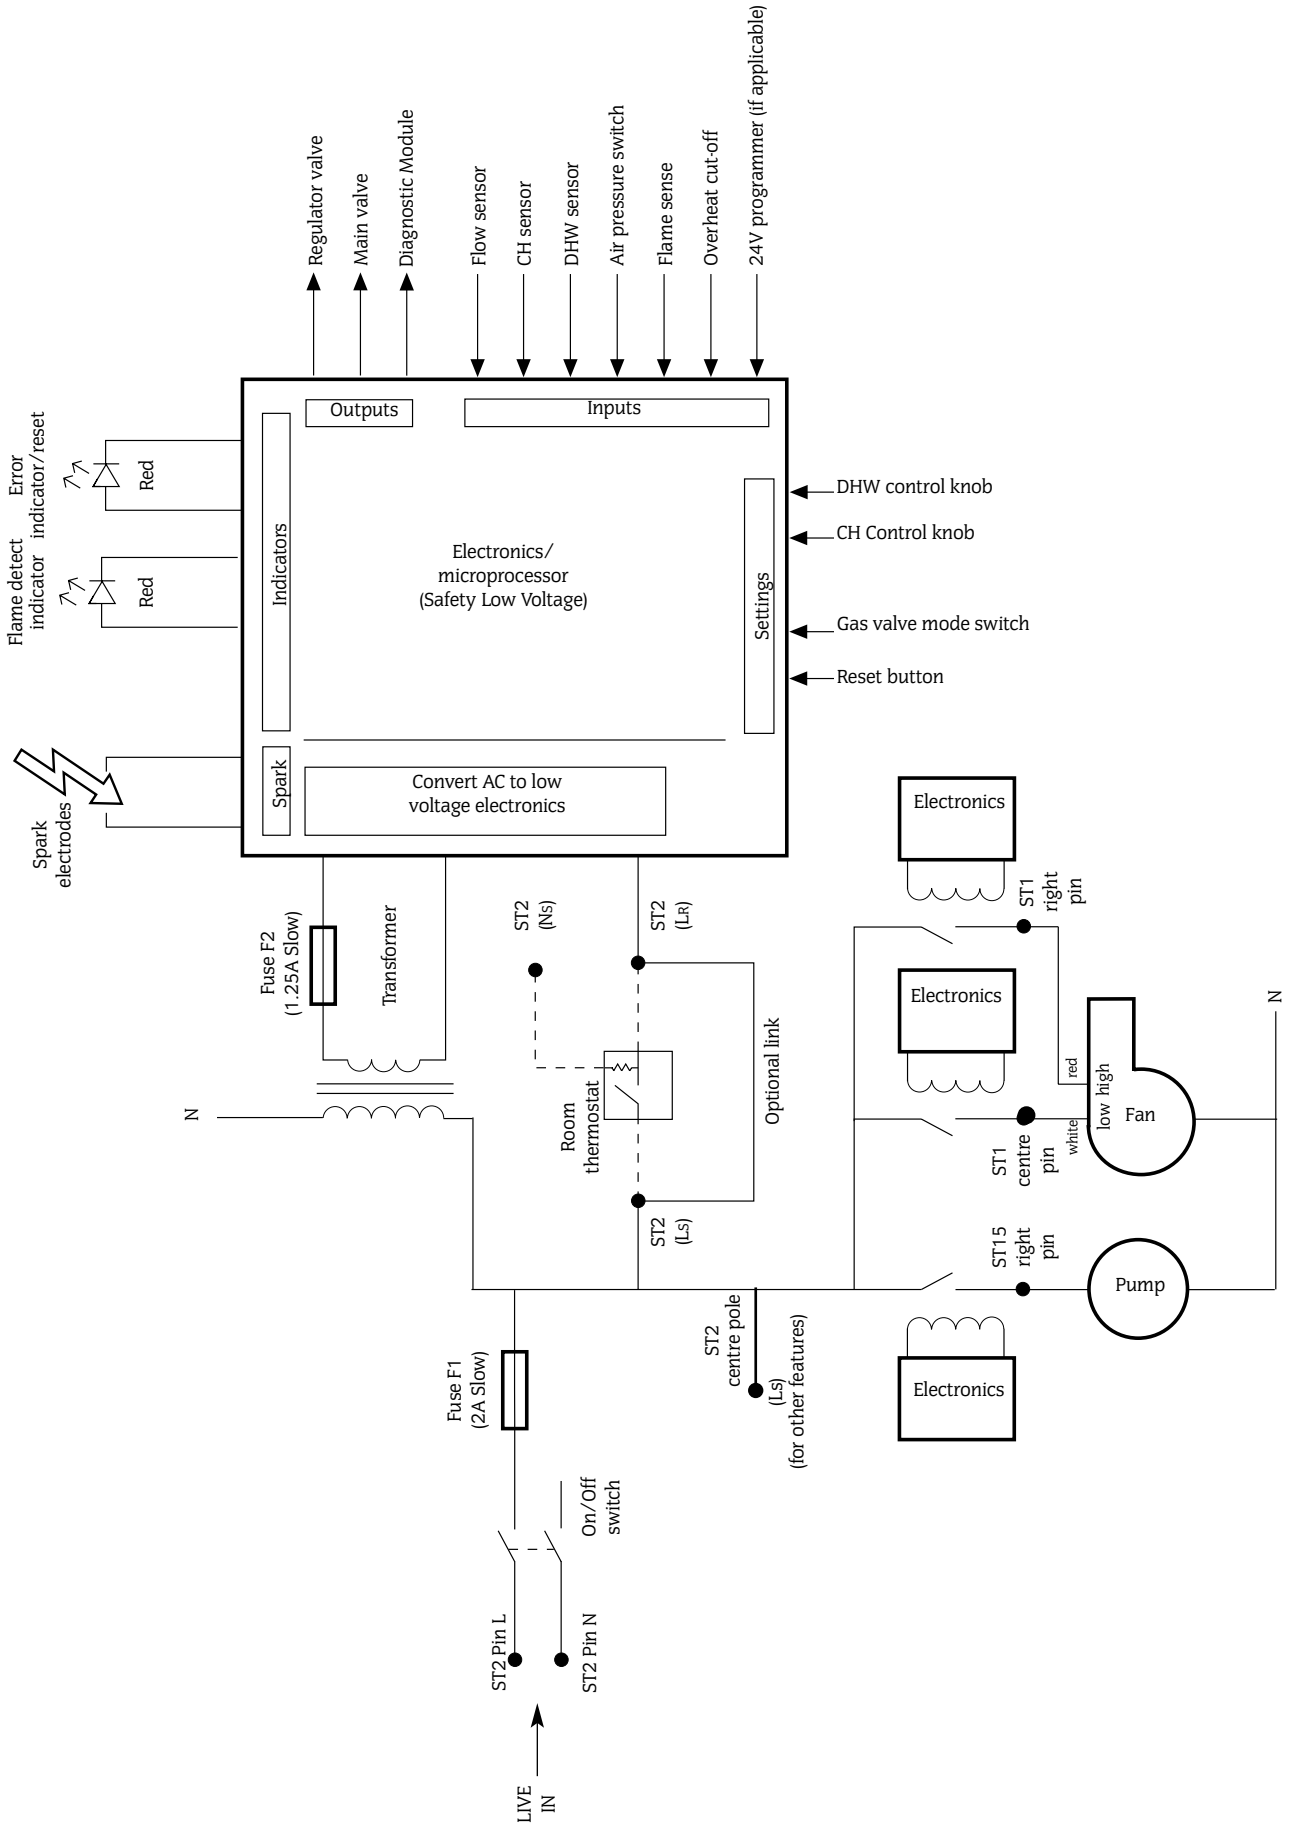


**Fig. 14. Access to internal fuses and electrical connections.**

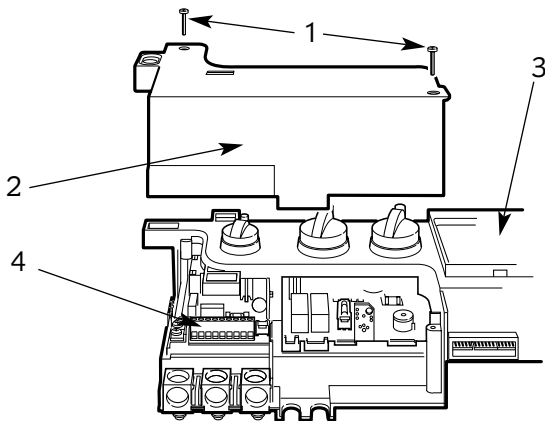

- 1. Connection cover fixing screws
- 2. Connection cover
- 3. Control panel
- 4. Connections

**Fig. 15 . Mains electricity connections.**

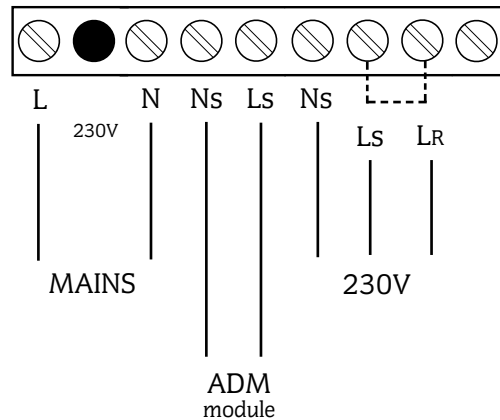

## 11. Installing The Appliance

**Note: READ THIS SECTION FULLY BEFORE COMMENCING THE INSTALLATION.**

### 11.1 General

The appliance is only suitable for fitting to a sealed system. The flue must be installed as specified in BS5440:1 and the current Building Regulations.

### 11.2 Unpacking

#### IMPORTANT HANDLING INSTRUCTIONS

1. It is advised that two people are used to carry the carton from the van to the point of installation.
2. Once the outer carton has been removed and the ancillary components placed to one side, the boiler now stands in its base. The boiler is laid down, whilst one person straddles the boiler and lifts, tilting up the base, the companion removes the base and places it to one side.
- Additional requirements for roof space installation:**
3. The boiler should be first unpacked before ascending ladder to loft space.
4. Two sets of steps should be used.
5. Two people should share the lifting of the boiler up to the loft hatch, where the boiler is entered into the loft space tilted and slid on its back into the loft.

Once the appliance is removed from its packaging and check the contents against the packing list.

Unscrew the service connections and remove the wall mounting assembly.

**NOTE:** The wall mounting assembly can be removed from the carton **without** having to remove the boiler.

### 11.3 Site Preparation

Check that the correct position for the appliance has been chosen. Refer to Section 4 and Table 8.

Check that the wall is flat and will support the weight of the appliance. Refer to Table 4.

### 11.4 Fixing Holes and Flue Opening

Hold the wall mounting assembly or template against the wall. Check that the assembly or template is level. Mark the position of the fixing holes and the flue opening. Refer to Fig 16.

The diamond cut-out indicates the centre line of the appliance.

Mark the centrelines of the pipe connections to aid the pre-plumbing of the system pipework.

Pre-plumbing is not recommended if no movement in the pipes is available.

Check the position of the fixing points and flue opening before drilling the fixing holes 60mm deep for the No. 12 size plugs and cutting the flue duct hole at 110mm diameter [150mm diameter

for internally fitted flues].

### 11.5 Wall Mounting and Manifold Assembly

Fit the plugs and insert the bottom screws.

Check that all service valves are closed.

Offer the assembly to the wall utilising the keyhole slots on the manifold assembly and fix to the wall. Refer to Fig 16 and 17.

Check that the assembly is properly aligned before tightening the screws.


### 11.6 Gas and Water Pipes

Remove the gas cock and fix the appropriate fitting to connect the inlet pipe and refit. Refer Fig 16.


If it is necessary for any of the pipes to run up the back of the appliance then they must be arranged to avoid the flue outlet. Pipework must not run horizontally within the limits of the casing. It is important that the pipes are not fixed near the appliance using clips that put a strain on the connections.

**Before the appliance is fitted to the wall thoroughly flush the system and mains water supply.**


**Fig. 16. Wall mounting assembly**

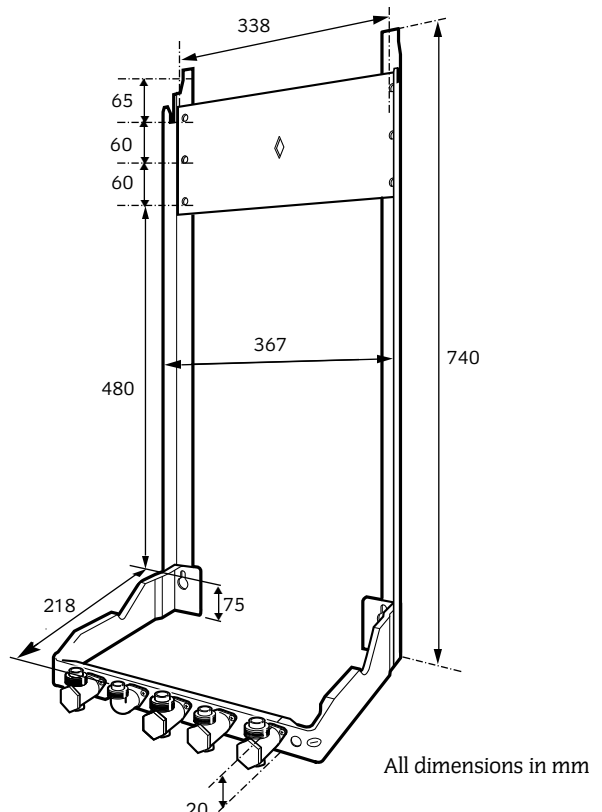

**Fig. 17 . Manifold assembly**

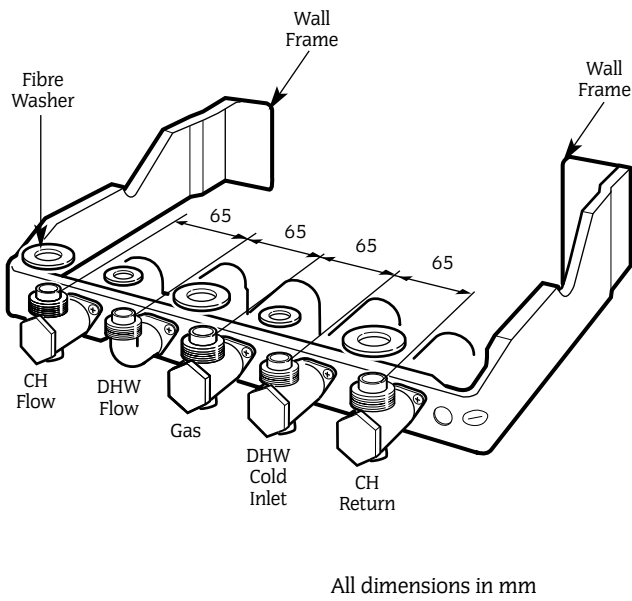

**Fig. 18 . Facia cover**

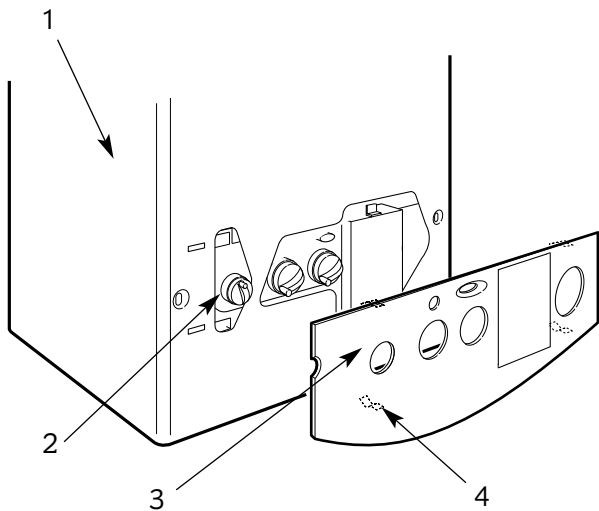


1. Appliance
2. Controls
3. Facia cover
4. Facia cover clips (4)

**11.7 Install the Boiler**

Pull off the clip on facia cover and remove the cabinet by unscrewing the two fixing screws, releasing the sides and lifting from the top location. Check that the gas and water valves are closed. Refer to Fig 17. Fit the new seals, in the hardware pack, to the service valves on the manifold.

**Fig. 19 . Wall mounting frame**

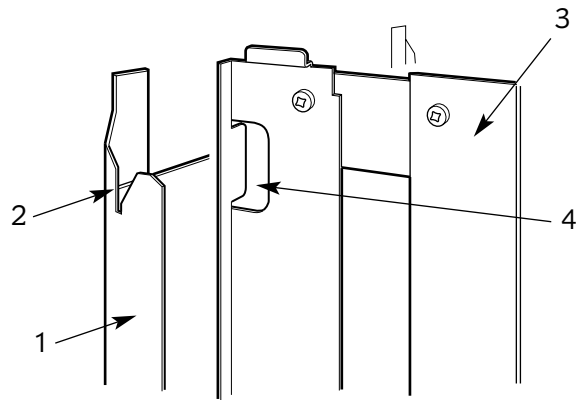


1. Wall mounting frame
2. Hanging bracket
3. Appliance
4. Support hook

Lift the appliance to the wall, engage in the top support and lower onto the manifold assembly. Tighten the gas and water connections.


Fit a discharge pipe to the relief valve leading it away from any electrics or where it might be a hazard. Lower the facia to gain access. The pipe must not be less than 15mm in diameter and must run continuously downward outside the appliance. Refer to Fig 20.

**Fig. 20 . Relief valve drain connection**

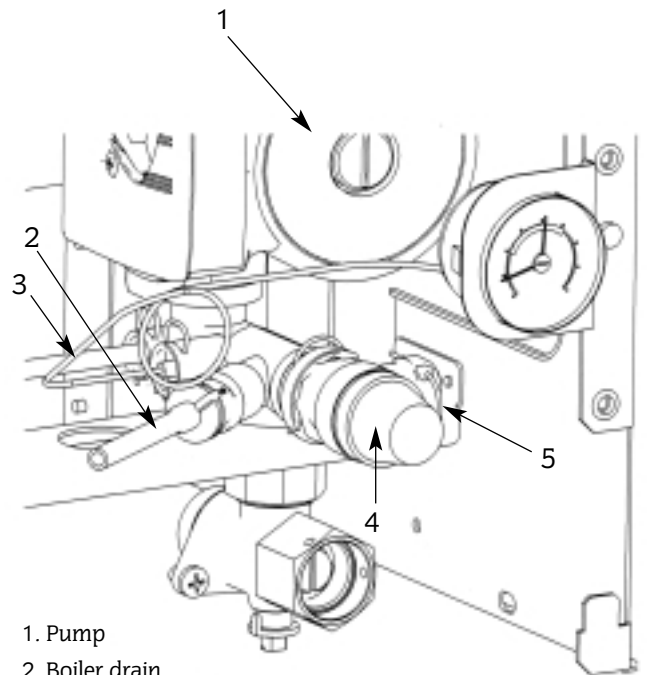

1. Pump
2. Boiler drain
3. Pressure gauge capillary
4. Relief valve
5. Relief valve drain connection (push fit)

**Fig. 21. Inner case and facia fixing**

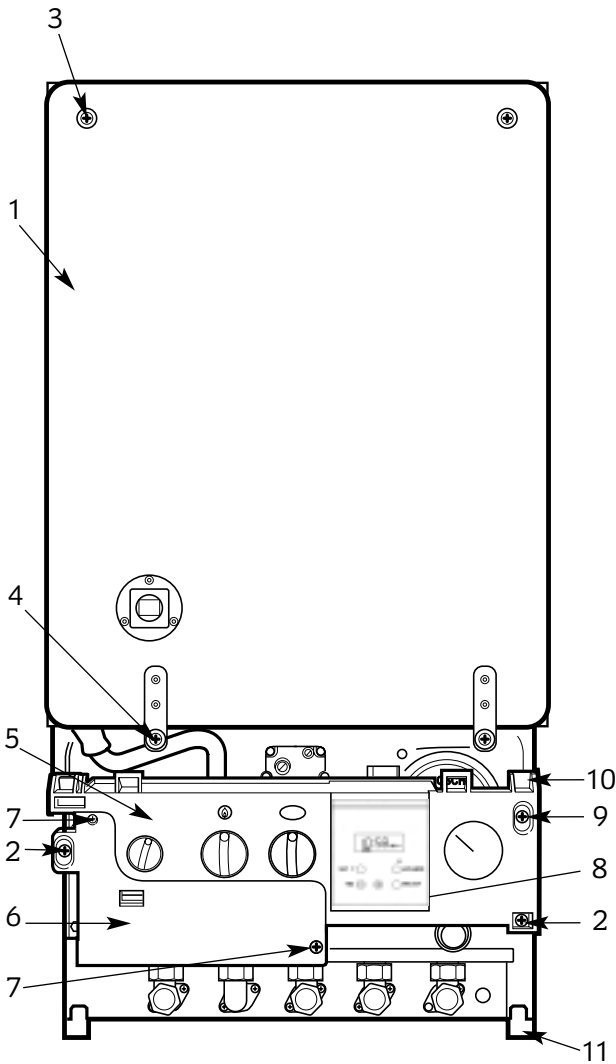

1. Inner casing cover
2. Cabinet fixing screws (4)
3. Inner casing cover fixing screws (2)
4. Inner casing cover fixing screws (2)
5. Facia control panel
6. Controls connector cover
7. Controls connector cover fixing screws (2)
8. Programmer (optional)
9. Facia control panel fixing screw
10. Top support lug (2)
11. Bottom support lug (2)


**11.8 Air and Flue Duct Preparation**

The method of installation of the flue system may be varied to suit the actual site conditions. The instructions for connecting and fixing the ducts must, however, be strictly followed.

Remove all packing material from the flue components.


RESTRICTOR RINGS	
<b>Flue length</b>	
Horizontal up to 725mm	78mm
Horizontal above 725mm	None
Vertical terminal length only 1200mm	82mm
Vertical flue greater than 1200mm	None

**Fig. 22. Flue spigot and restrictor**

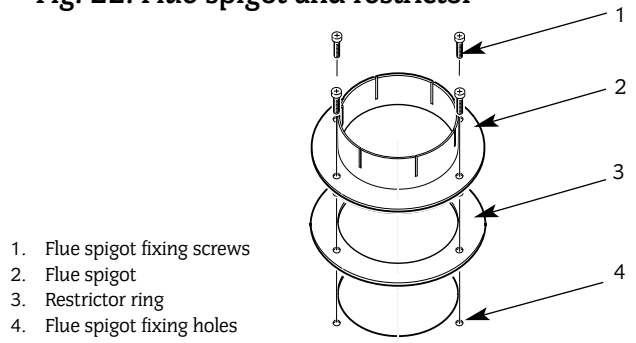

1. Flue spigot fixing screws
2. Flue spigot
3. Restrictor ring
4. Flue spigot fixing holes

**Fig.23. Standard flue assembly**

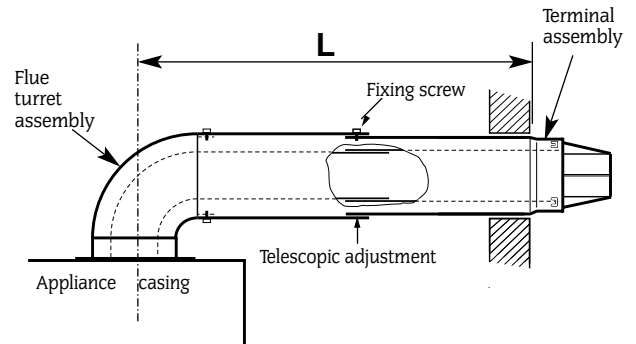

Fit the flue restrictor ring by unscrewing the flue spigot from the boiler. Refer to Fig. 22.

The standard telescopic flue assembly is suitable (without cutting) for flues from 425mm up to 725mm measured from the centre-line of the boiler flue outlet to the outer face of the wall. Refer to Fig.23.

The minimum length of the standard flue, after cutting is 275mm.

If L is greater than 725mm then extension duct kit/s will be required - each kit extends the flue by 750mm up to a maximum of 4000 mm for natural gas boilers. See table below.

EXTENSION	MAXIMUM FLUE LENGTH mm
1	1475
2	2225
3	2975
4	3725
5	4000

**11.9 Measure and Cut the Ducts.**

**General:** Cut the ducts as necessary, ensuring that the cuts are square and free from burrs. Always check the dimensions before cutting.


Measure the distance L. Refer to Fig. 23, 24, 25 and 26.

The standard flue can be telescopically adjusted to any length between 425mm and 725mm measured from the centre of the turret without the need to cut the ducts.


Fix the flue assembly together using the self-tapping screws provided. Refer to Fig. 23.

It will only be necessary to cut the standard assembly if L is less than 425mm. Cut the flue turret assembly and the terminal assembly by the same amount eg. if L= 350 – remove 75mm (425-350) from each assembly.


**Fig. 24. Extension duct**

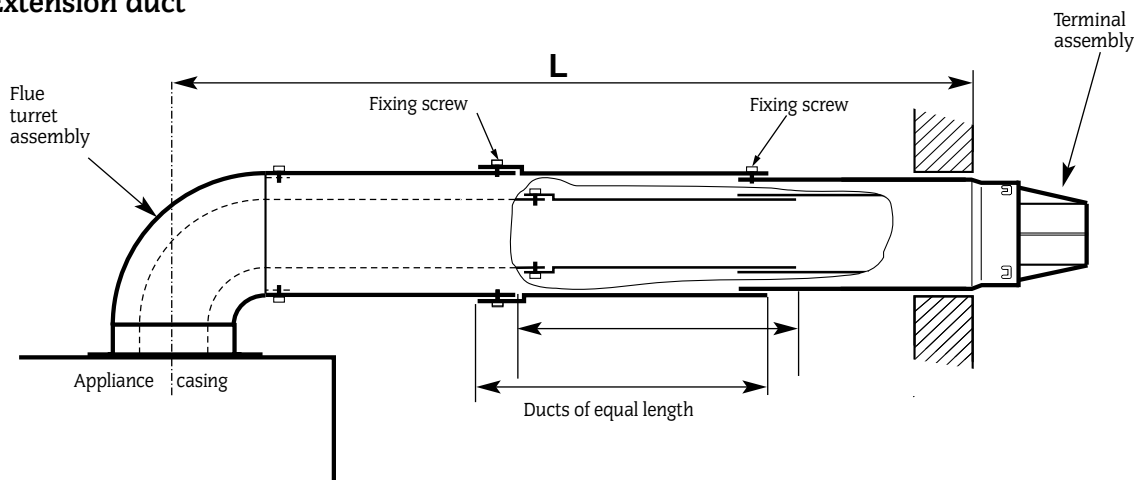

**Fig. 25. Flue duct length - side**

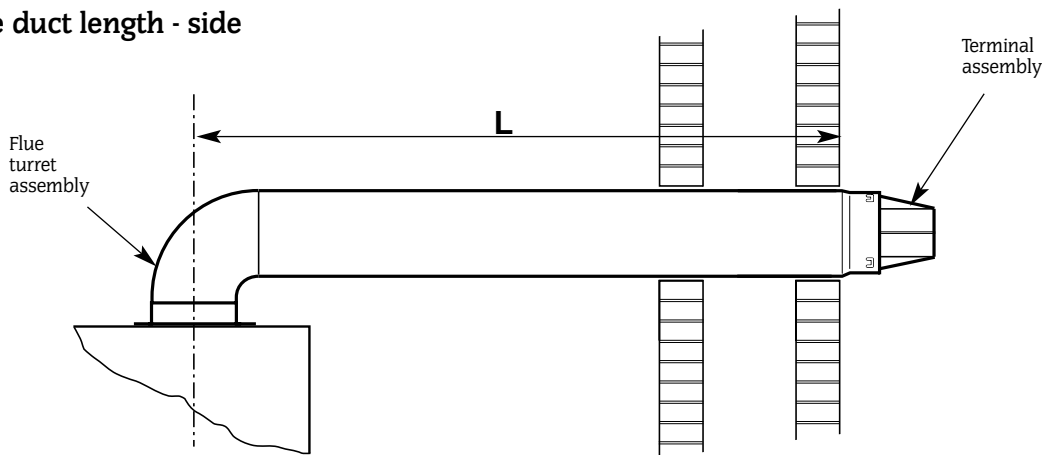

**Fig. 26. Flue duct length - rear**

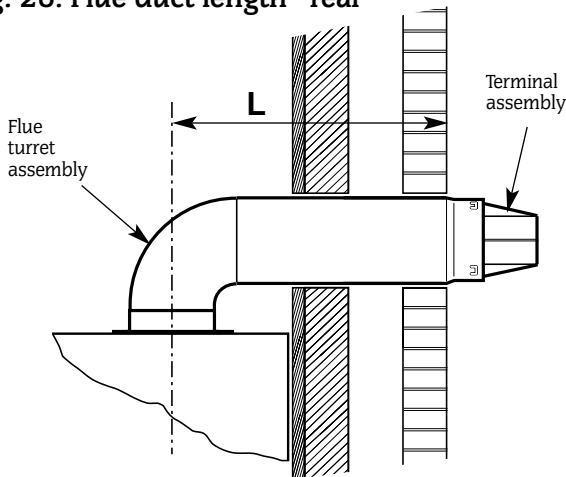

**It is not necessary to cut the ducts**

If L is between	1175 - 1475mm	(1 extension)
	1925 - 2225mm	(2 extension)
	2675 - 2975mm	(3 extension)
	3425 - 3725mm	(4 extension)

**It will be necessary to cut the ducts**

If L is between	725 - 1175mm	(1 extension)
	1475 - 1925mm	(2 extension)
	2225 - 2675mm	(3 extension)
	2975 - 3425mm	(4 extension)
	3725 - 4000mm	(5 extension)

It is necessary to shorten the assembly by cutting the first extension duct assembly eg.  $L = 1000\text{mm}$  - remove 175mm from the air and flue ducts ( $1175 - 1000 = 175\text{mm}$ ).

**NOTE:** Extension duct measurements do not include the socketed end. Unless specifically instructed the socketed end must not be removed.

Fix the flue ducts together before fixing the surrounding air duct, the cut ducts fit into the terminal assembly.

**11.10 Fitting the Flue Assembly with Access to the Terminal.**

Prepare the flue duct assembly as described in Section 11.8. Apply the plastic tape to the air duct to be in contact with the external brickwork.

From inside push the assembly through the wall. Align the flue turret and push fully onto the spigot on the appliance. Tighten the clamping ring. Refer to Fig.27.


Make good the internal wall face and the external brickwork or rendering.

**11.11 Fitting of the Flue Assembly without access to the Terminal.**


The rubber gasket kit is available from Worcester Heat Systems. **NOTE:** A larger diameter opening in the wall is required. Refer to Table 2.




**Fig. 27 . Flue Turret Fixing**

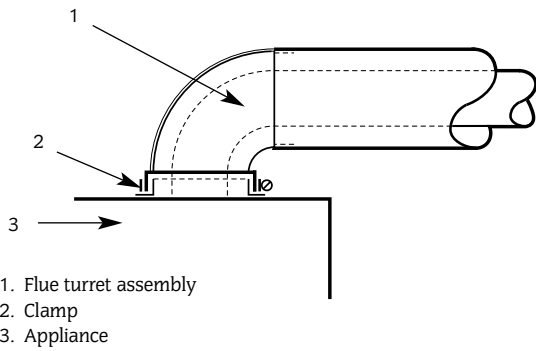

**Fig. 28 . Terminal assembly for internal fitting of the flue.**

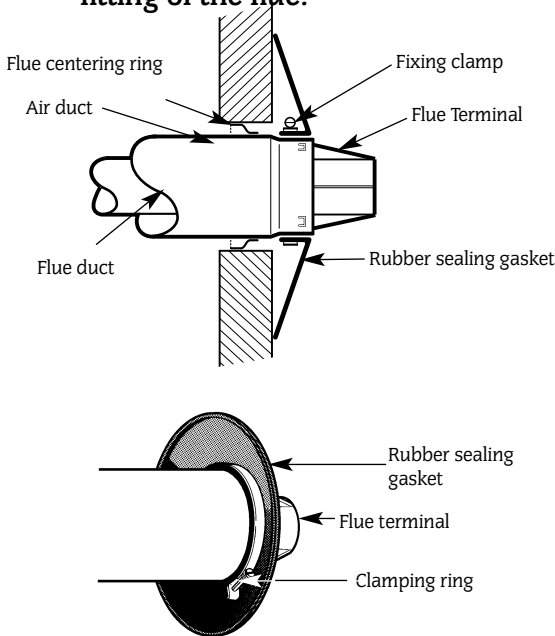

**Fig. 29. Flue bends**

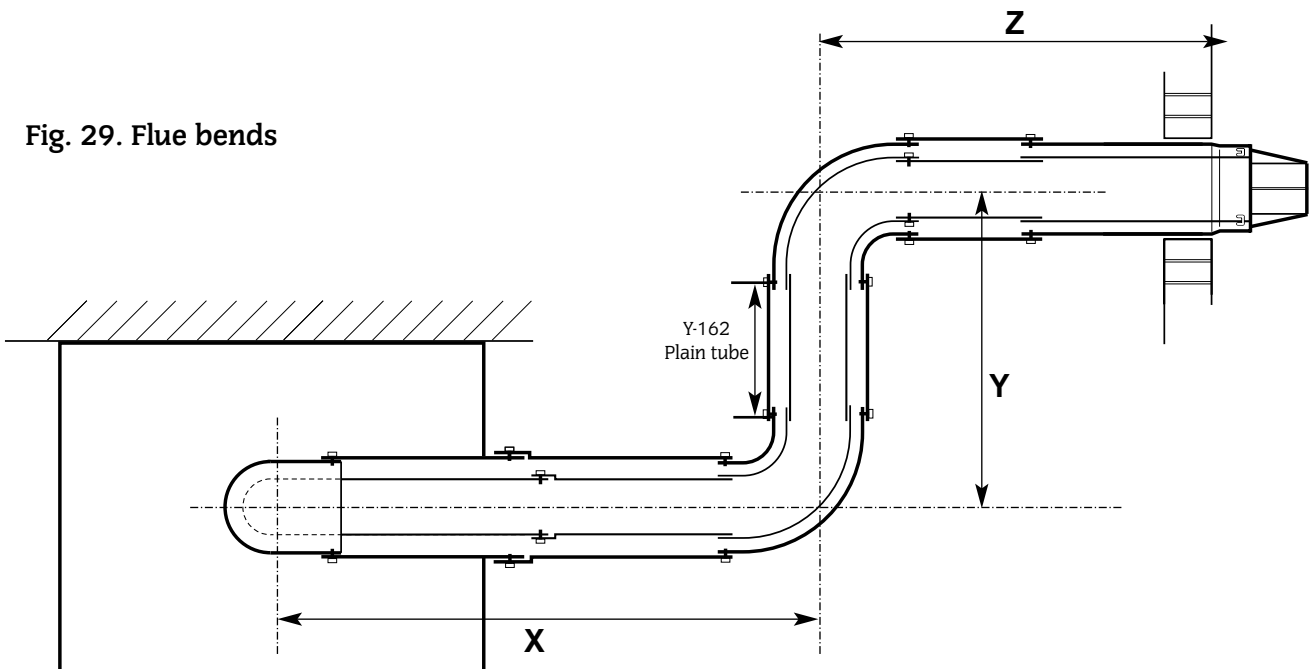

Prepare the flue assembly as described in Section 11.8.

Fit the rubber sealing gasket centrally onto the terminal assembly and tighten the clamp. Refer to Fig. 28.

Apply the plastic tape to the air duct to be in contact with the external brickwork.

From inside push the assembly through the wall so that the gasket flange is against the outer face. Refer to Fig. 28. It may be necessary to adjust the legs of the flue centering ring. Align the flue turret and push fully onto the socket on the appliance. Tighten the clamping ring. Refer to Fig 27. Seal the gap around the duct at the inner wall face with the flexible seal provided and make good.

**11.12 Flue Bends.**

90° and 45° bends are available. A maximum of two bends may be used in addition to the first bend on the flue turret. A 90° bend is equivalent to 750mm of straight duct. A 45° bend is equivalent to 375mm of straight duct.

A maximum flue assembly of 3250mm for natural gas is possible with 1 X 90° bend and 2500mm with 2 X 90° bends. Measure the lengths X,Y and Z. Refer to Fig.29. The maximum value of X using the turret assembly only is 506mm. Reduce the ducts to the appropriate length eg. X = 406mm, cut 100mm from the air duct and 120mm (to cover the entry into the 45° or 90° elbow) from the flue duct. Refer to Fig.30.

**NOTE:** The flue system ducts between the elbows, dimension Y, requires the socketed ends (of the first extension if two or more are used) to be removed and the air and flue tubes to be cut to the same length.

Cut the ducts to a length Y – 162mm. Refer to Fig.29. The final section, dimension Z, of the flue system must include a section of plain duct assembly eg. an extension assembly with the sockets removed. Reduce the final section, including the terminal assembly, by the appropriate amount eg: Air duct Z - 81mm and the flue duct Z – 51mm. Refer to Fig.29.

If Z is less than 425mm it will be necessary to cut the air and flue ducts of the extension to a plain length of 100mm and reduce the length of the terminal assembly eg. Z=350mm - remove 75mm from the terminal assembly.

If Z is between 425 - 725mm it is not necessary to cut the terminal assembly or use a second extension duct as the length can be set telescopically.

If Z is greater than 725mm then two extension duct assemblies will be required, the first assembly being cut to length as plain tubes.

If more than two extension ducts are needed in any section to achieve the required length then the final section of the assembly must not be less than 275mm without cutting the terminal assembly.

NOTE: The flue duct of the final extension must be 30mm longer than the air duct.

Each section must be connected to the previous section of the flue bend by fixing the flue ducts together and then similarly fixing the air ducts which engage the elbows.

Fit the assembly as described in Section 11.9, 11.10 as appropriate.

Make good the internal and external brickwork or rendering.

### 11.13 Vertical Adaptor for Horizontal Flues

An adaptor is available for an initial short section of vertical flue. Refer to Fig. 31.

Measure and cut the flue as described in Section 11.11.

The first, vertical, section (equivalent to dimension X) is measured from the top of the boiler casing. Cut the vertical section of the extension duct to 167mm less than the measured distance. Do not remove the socketed ends.

The minimum measured distance is 167mm.


Seal the air duct to the spigot using silicone sealant.

### 11.14 Completion of the Installation


Check that all the gas and water connections on the manifold have been tightened.

Undo the two screws and remove the connections cover panel. Refer to Fig 32.

**Fig. 30 - Elbow to Flue Turret Assembly.**

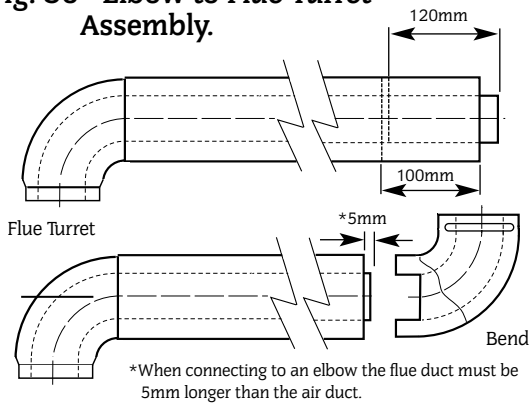

**Fig. 31 Vertical Adaptor.**

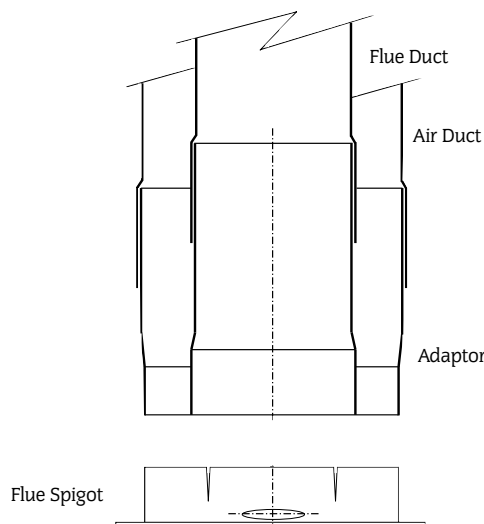

Connect the mains supply lead to the appliance and secure in the cable clamp. Make sure the lead is isolated before connection. Refer to section 10.

Check that there is sufficient loose lead to allow the release of the fascia panel assembly and that the earth lead of the mains supply is longer than the live and neutral leads.

Fit the fascia-mounted clock or programmer. Full instructions are sent with the control. Refer to Fig 33 and 34.


Connect any external controls ensuring that the leads pass through the appropriate cable clamp. Refer to Section 10 and Fig 35 and 36.

Test for gas soundness as described in BS6891.

If the appliance is not to be commissioned immediately, replace the connection cover panel and the cabinet.


Check that the gas and electricity services have been turned off.

**Fig. 32. Facia connections cover**

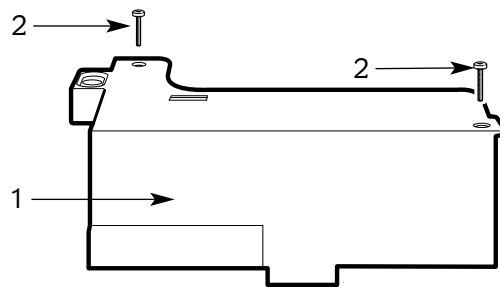


1. Controls connector cover
2. Controls connector cover fixing screws (2)

**Fig. 33. Programmer connection**

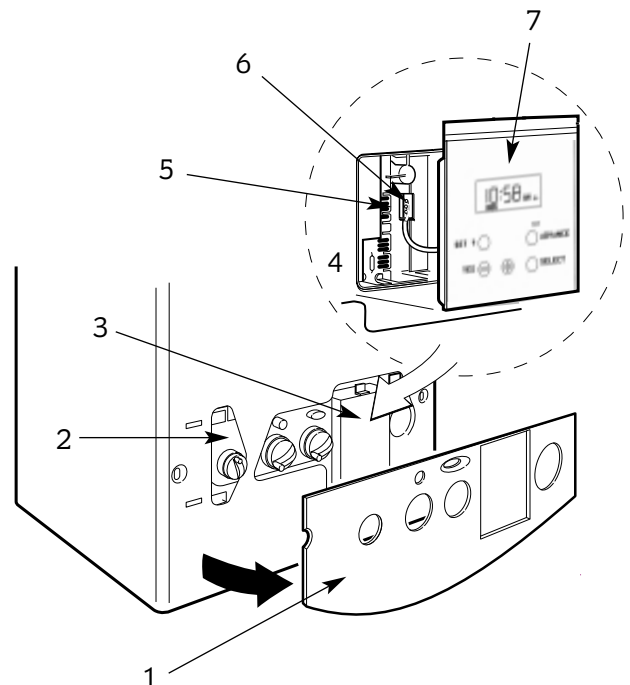


1. Facia (gently pull forward to un-clip and remove)
2. Control panel (boiler outer casing in place)
3. Programmer cover (un-clip to remove. See Fig. 34)
4. Programmer location in detail
5. Programmer connections (See Fig. 34)
6. Programmer connector plug
7. Programmer

**Fig. 34. Programmer cover**

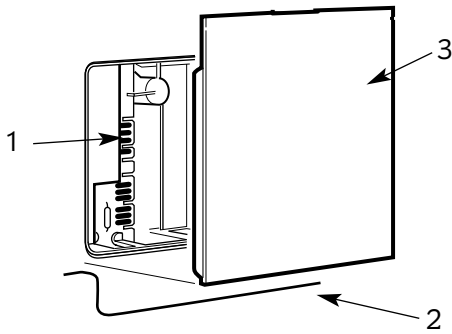


1. Programmer connections
2. Boiler outer casing
3. Cover panel


**Fig 36 - Mains Voltage External Controls Connections**

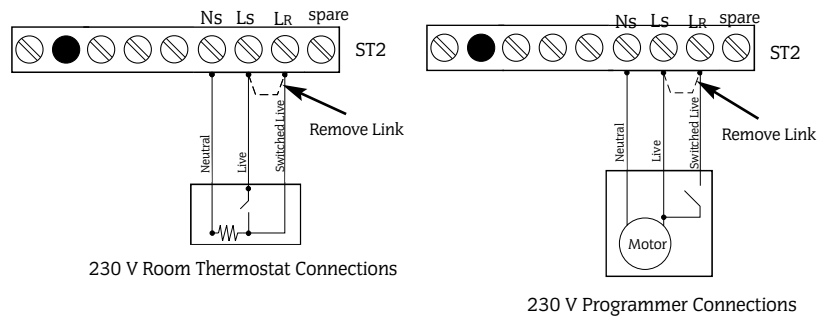

230 V room thermostat and Programmer Connections

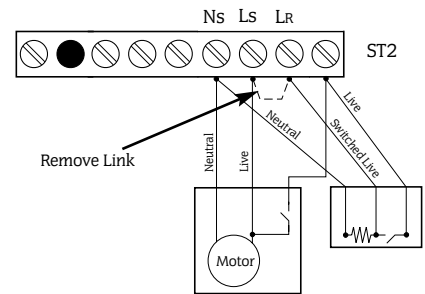

**Fig. 35. Facia connections**

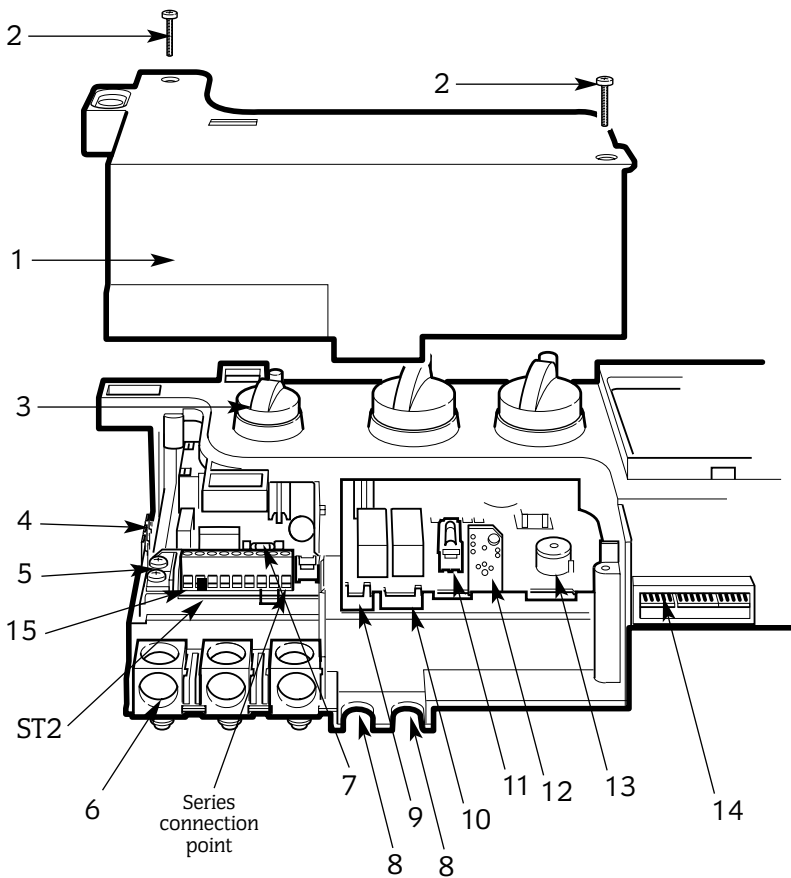

1. Controls connector cover
2. Controls connector cover fixing screws (2)
3. Facia control panel
4. Earth connection (tags)
5. Earth connection (screws)
6. Cable clamp
7. Fuse F1 2A (slow)
8. Cable clamp
9. ST15 Pump
10. ST1 Fan
11. Fuse F2 1.25A (slow)
12. Code plug
13. Commissioning switch (gas valve mode switch)
14. Internal controls connectors
15. Mains and external controls connectors (230 Volt)

## FILLING LOOP ASSEMBLY CONNECTION

The filling loop assembly is packed in a box with the installation instructions and screw pack.


Parts list of pack:

Charging Link Assembly.....	8 716 104 592
Charging Key Assembly.....	8 716 104 591
Filter $\frac{3}{8}$ " Thimble.....	8 716 104 618
4 x Socket Head Cap Screw M4x 6mm.....	2 910 141 116
4 x M4 Lock Washer.....	2 916 699 130
2 x O Ring.....	8 716 140 806

1. Fully close the isolating valves on both the DHW inlet and CH return connections.
2. Check that the boiler or Pre-filling Kit (7 716 192 282) is installed correctly onto the Manifold Assembly and the gas and water connections are tight.
3. Unscrew the blanking plugs from both the DHW inlet and CH return connections.
4. Place the filter inside the inlet side of the Charging Link ensuring that the filter mesh is inside the inlet.
5. Fit the Charging Link assembly onto the DHW inlet and CH return connections ( see Fig. 37).


**Do not insert the Charging Key at this stage.**

Fig. 37.

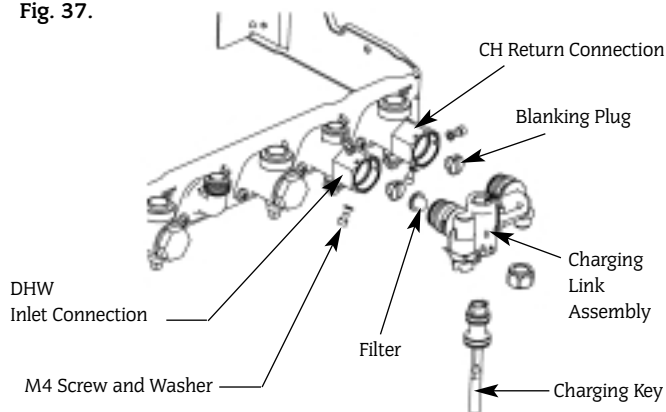

Ensure that the Charging Link is pushed in fully to the stop tabs on both sides of the Charging Link (see Fig. 38).

Fig. 38.

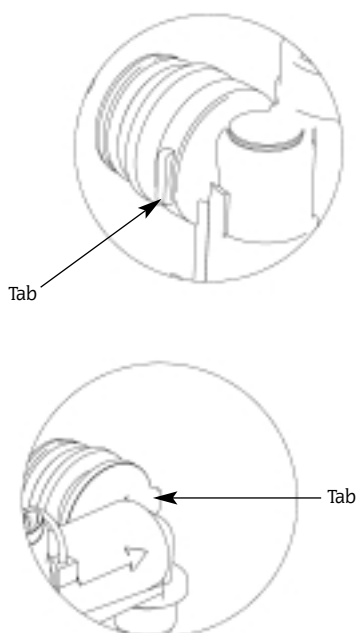

6. Fit two M4 screws complete with washers to each of the two connections. NB. It is not possible to access the third screw hole so this can be left.

**Do not attempt to turn the brass hexagon connectors.**

7. Ensure that the white plastic Control Screw on the Charging Link is turned fully into its closed position (see Fig. 39).

8. Open the isolating valves on both the DHW inlet and CH return connections.

9. Insert the Charging Key by initially aligning the arrow on the key with the "unlock" symbol on the Charging Link body. Ensure that the key is inserted fully and turn to the "lock" position.


Check that the key is secure (see Fig. 39).

10. To fill the system from the DHW inlet turn the white plastic Control Screw on the Charging Link to the fully out position.

11. Once the system has been filled turn the white Control Screw to its closed position and then remove the Charging Key by turning back to its "unlock" position and withdrawing.

Store the Charging Key in the clip provided on the inside of the bottom panel. Fit the bottom panel in position.

Fig. 39.

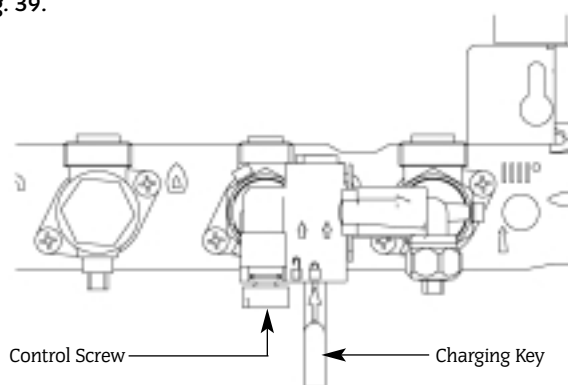

## 12. Commissioning The Appliance

**12.1 Water Treatment:** For optimum performance after installation, this boiler and its associated central heating system should be flushed in accordance with the guidelines given in BS7593: 1992 – Treatment of water in domestic hot water heating systems. Full instructions are supplied with proprietary cleansers sold for this purpose. If an inhibitor is to be used after flushing, it should be used in accordance with the manufacturers instructions. Remove all system cleanser before adding any inhibitor. Suitable flushing agents and inhibitors are available from Betz Dearborn on 0151 4209563, Fernox on 01799 550811 and Salamandor on 0121 378 0952.


Remove the cabinet by pulling off the clip-on fascia cover. Unscrew the two fixing screws, release the sides and lift from the top location.

Check that the electrical supply and the gas supply to the appliance are turned off and that all the water connections throughout the system are tight.

Open the system valves at the appliance. Refer to Fig 17.

Open all the radiator valves. Remove the automatic air vent cap. Refer to Fig 40.

**Fig. 40. Automatic air vent and combustion test point**

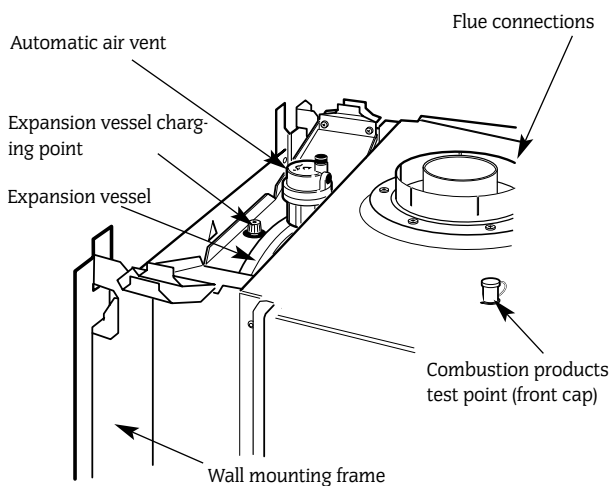

Fill the system through the Worcester Filling Link and Key. Refer to Section 7, Sealed System.

Vent each radiator in turn. The automatic air vent, cap removed, will vent the appliance. Refer to Fig 40.

It is very important that the appliance and system are fully vented and that all air pockets are removed.

Remove the cap from the pump and turn the shaft about half a turn. Replace the cap. Refer to Fig 41.


Check that the pressure relief valve operates by turning the knob anti-clockwise until it releases. Lower the fascia to gain access to the relief valve. Refer to Fig 20. Water should be expelled from the discharge pipe.

The appliance [as dispatched] can accommodate a system volume of 100 litres. Refer to BS7074 Part 1, BS5449 and Table 8. If the system volume is greater then an extra vessel must be fitted as close as possible to the appliance central heating return connection and pressurised to the same figure as the integral vessel.

### 12.2 Set the Expansion Vessel Pressure

The charge pressure of the expansion vessel as dispatched is 0.5bar, which is equivalent to a static head of 5m [17ft]. The charge pressure must not be less than the static head at the point of connection. A Schraeder type valve is fitted to the

**Fig. 41. Pump venting.**

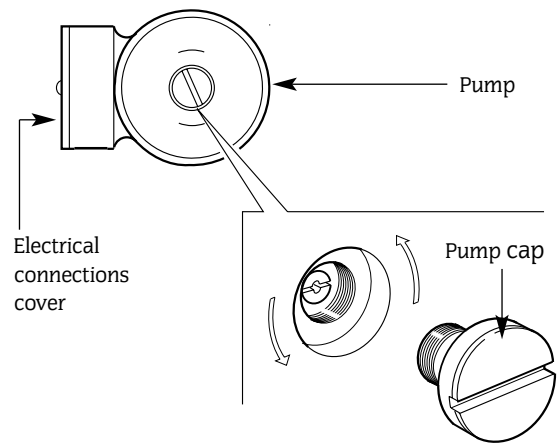

expansion vessel to allow the charge pressure to be increased if necessary. Refer to Fig 40.

The expansion vessel must be charged to 0.35bar less than the initial system design pressure.

Note: 1bar = 10.2m = 33.5ft of water.

### 12.3 Set the System Pressure

Fill the system until the pressure gauge is at 2.5bar and check for leaks. Release water from the system using the relief valve test knob until the required system pressure is obtained, upto a maximum of 1.5bar. Set the pointer on the pressure gauge to record the set system pressure.

If the pressure indicated on the gauge is greater than 2.65bar when operating at the maximum central heating temperature then an extra expansion vessel must be fitted to the system as close as possible to the appliance central heating return connection.


### 12.4 Clock/Programmer

The controls fitted to the appliance should be set up at this stage using the instructions supplied with the clock/programmer.

### 12.5 Checking the Burner Pressure


12.5 Check that the gas and electricity supplies are turned off. Connect a pressure gauge to the gas valve to measure the inlet and burner pressure. Refer to Fig 42.

**Fig. 42. Gas valve.**

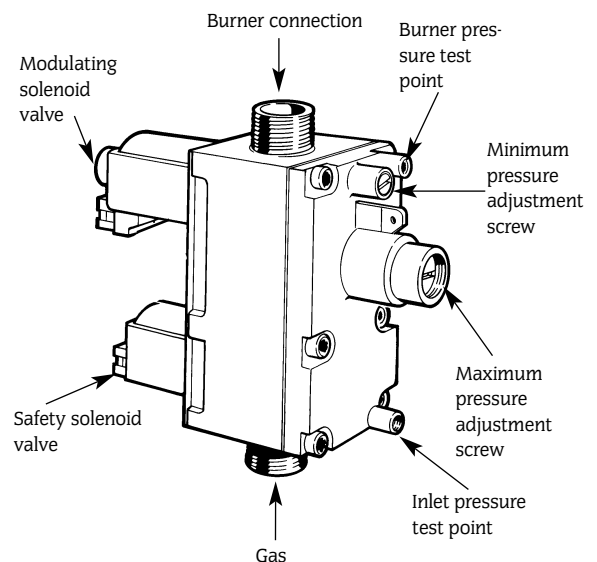

Unscrew and remove the control connector cover to display the mode switch. Refer to Fig 42.  
 Check that all the radiator valves are open. Check that the system is fully vented, pressurised and set to the required pressure as indicated on the gauge.  
 Set the temperature control knobs to maximum and the clock/programmer to operate continuously.  
 Fully open a hot tap.

**Fig.43. Mode adjustment**

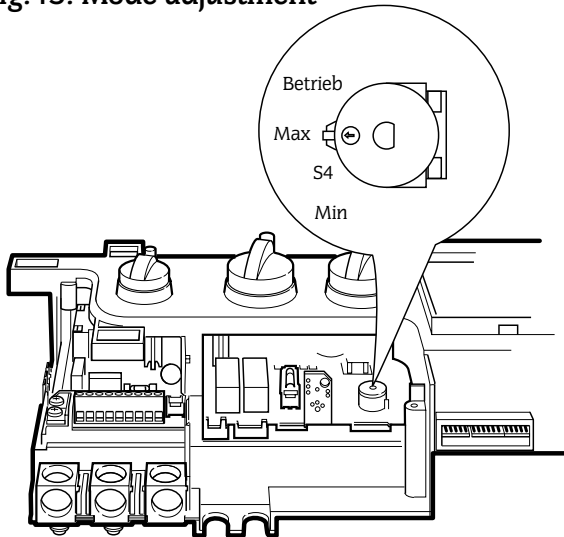

Set the mode switch to MAX. Refer to Fig 43.  
 Turn on the gas and electricity supplies.  
 A continuous spark will occur until the burner is alight and sensed by the control circuit. The burner will remain at its maximum domestic hot water pressure for 1 minute. Refer to Table 1. It should not be necessary for the gas valve to be adjusted.  
**Note:** The burner pressure is factory set and if, after checking that the dynamic (working) supply pressure is sufficient i.e. 18.5mb approx. at the gas valve inlet pressure test point, the correct pressure cannot be obtained then Worcester Heat Systems Service Department should be contacted.  
 If the appliance does not light then check that it is not in the 'lock-out' state by gently pressing the reset button for 5 seconds. Refer to Fig 46.  
 Set the mode switch to Normal (BETRIEB).  
 Turn off the hot tap.  
 The burner pressure will drop to the minimum setting and will ramp up to the maximum central heating pressure appropriate to the appliance and the gas. Refer to Table 1.  
 Set the mode switch to MIN.  
 The burner pressure will drop to the minimum burner pressure appropriate to the appliance and the gas for both the central heating and domestic hot water modes. Refer to Table 1.  
 Test for gas soundness at the joint between the burner and the gas valve with leak detection fluid.  
 Set the mode switch back to Normal.  
 Turn the electricity supply off and then back on to reset the controls.  
 Replace the controls connector panel.

**12.6 Operation of the appliance**

**Domestic Hot Water**  
 Turn the central heating temperature control knob fully anti-clockwise.  
 Open a hot tap near the appliance. The burner will light and go to the maximum burner pressure appropriate to the appliance and the gas. Refer to Table 1. Gradually close the tap and check that the burner pressure falls. Fully open the tap and check that the pressure rises. Close the tap and check that the burner goes out.  
 The fan and pump may continue running until the appliance has

cooled to a pre-set temperature.

**12.7 Central Heating**

Check that all the radiator valves are open.  
 Check that the system is fully vented, pressurised and set to the required pressure as indicated on the gauge.  
 Check that the clock/programmer is set to operate continuously.  
 Set the room thermostat and the central heating temperature control to maximum.  
 The burner will light and the appliance will modulate its output from minimum to maximum over a period of about two minutes. Check that all the radiators are heating up evenly. Shut down all but one of the radiators and observe the burner pressure fall. Open all the radiators and check that the burner pressure rises.

Balance the system to give the required temperature differential. Refer to Table 3.

Set the room thermostat to minimum and check that the burner goes out.  
 Reset the room thermostat to maximum and the burner will re-light and follow the normal operating procedure.

**12.8 Check flame failure device**

Turn off the gas service cock. The burner will go out but sparking from the electrode will continue for 10 seconds when the appliance will 'lock-out'. After 60 seconds carefully open the gas service cock, press the reset button and observe the burner re-light and follow the normal sequence of operation. Refer to Fig 17 and 46.  
 Turn off the gas service cock and the electricity supply to the appliance.

Drain the system while the appliance is hot.  
 Refill, vent and re-pressurise the system as described in Section 12.1 preceding, adding, if necessary, a suitable proprietary inhibitor.  
 Further information is available from Betz Dearborn on 0151 4209563.

**12.9 Domestic Hot Water and Central Heating**

Set all controls to maximum. Turn on the electricity supply to the appliance and open the gas service cock at the appliance. The burner will light and heat will pass into the system.  
 Turn on a hot tap and check that hot water is soon discharged from the tap. Close the tap and the burner will go off. The appliance will then return to the central heating mode and automatically balance with the system requirements.

**12.10 Completion of Commissioning**

Turn off the appliance and disconnect the pressure gauge and tighten the test point screw.  
 Restart the appliance and check for gas soundness around the test point screw.  
 Refit the cabinet.  
 If the appliance is to be passed over to the user immediately then set the controls to the users requirements.  
 If the appliance is to be left inoperative in frosty conditions then set the programmer, if fitted, to off. Do not turn the electricity or gas supplies off. The appliance will operate under the control of the integral frost protection facility.  
 If there is any possibility of the appliance being left totally unused in freezing conditions then switch off the gas and electricity and drain the appliance and the system. The appliance must be fully recommissioned when it is returned to service. The venting of the system is very important.

### Appliance Data Monitoring


If the external Gateway module is fitted, then the operating system must be commissioned at this stage.

### Commissioning of ADM and Gateway

Check if Gateway is plugged into the telephone line and mains.

1. Remove the cover from the Gateway.
2. Unplug the power connector from the side of the Gateway.

**Fig. 44. Gateway module**

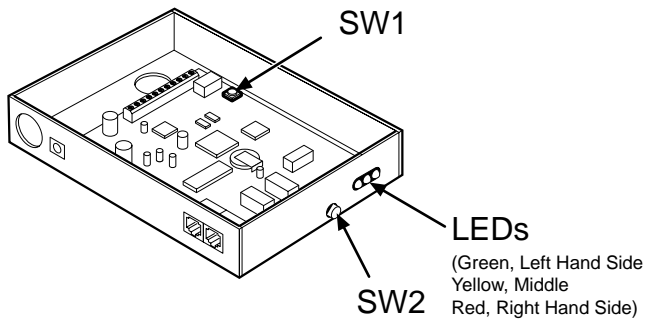

3. Reconnect the power to the Gateway. Press and hold **SW1** and **SW2** within 5 seconds of powering up, see Fig. 44.
4. Observe 2 distinct 'clicks' from the relays on the Gateway.
5. Release the switches. Note only RED LED (RHS) ON. The Gateway is now reset.
6. Press **SW1**, observe 0.5 Hz flashing of green LED. The Gateway is now in "House Address Creation mode" which lasts for approx. 1 minute.
7. Wait until GREEN LED (LHS) flashes 3 seconds ON and 1 second OFF - the Gateway has now created the "House Address".

8. Push the switch **SW1** on the ADM while powering up the appliance, see Fig. 45.

Observe LED on ADM flashing. The flashing rate is 0.5 Hz, the ADM is now in "House Address Acquisition mode".

9. Return to the Gateway and press **SW1**. Observe GREEN LED (LHS) through the side of the box flashing at about 3,4 Hz. The Gateway is now in "House Address Distribution mode"

*"House address Acquisition mode" on the ADM and "House Address Distribution mode" on the Gateway must overlap. Note the times are as follows, the ADM will stay in "House address Acquisition mode" for 100 seconds and the Gateway will stay in "House address Distribution mode" for 60 seconds.*

10. After 100 seconds from step 8 observe ADM LED flashing at 2 Hz.


11. After 60 seconds from step 9 observe GREEN LED (LHS) on Gateway ON.

12. The Gateway will now cause the Gateway to dial into BG. A click of the relay will be heard from the Gateway at each end of the dialling in.

13. Now power down the Heatronic, remove JP1, replace all covers and power up again.


The system is now set up.

**Fig. 45. ADM module**

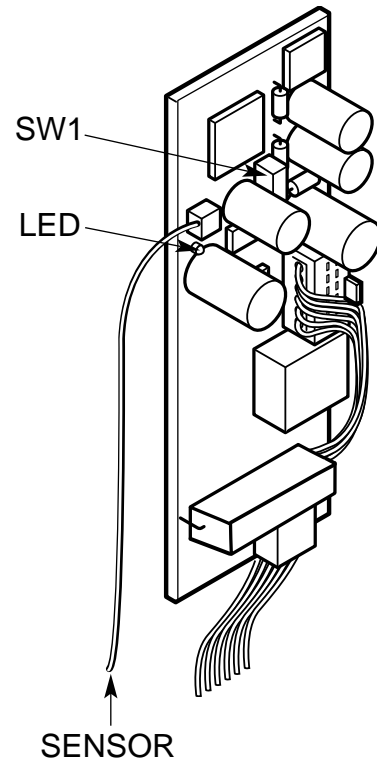

## 13. Handover

Fig. 46. Facia controls

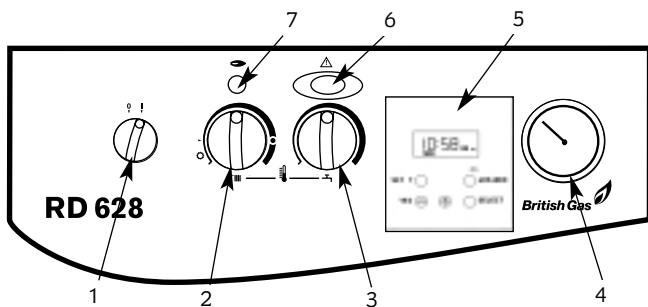

1. Mains On/Off control
2. CH temperature control
3. DHW temperature control
4. System pressure gauge
5. Optional programmer
6. Lockout indicator lamp and reset button
7. Burner indicator lamp

Hand over the User Booklet.

Explain how to operate the appliance safely and efficiently.

Tell the user what to do if the appliance is not to be used in very cold conditions.

Tell the user what to do if the system pressure falls.

Explain that regular servicing will maintain the safe and efficient operation and extend the life of the appliance.

Tell the user that any work on the appliance must only be carried-out by a competent, CORGI registered, person.

## 14. Inspection And Service

### 14.1

To ensure the continued efficient operation of the appliance it must be checked at regular intervals. The frequency of servicing will depend upon the particular installation conditions and usage and can be up to 2 years. The extent of the service required by the appliance is determined by the operating condition of the appliance when tested by fully qualified engineers.

Any service work must be carried out by competent registered engineers such as British Gas or Corgi registered personnel.

### 14.2 Inspection

**Ensure that the appliance is switched off and electrically isolated before commencing inspection.**

Check that the terminal and the terminal guard, if fitted, are clear and undamaged.

If the appliance is in a compartment or cupboard check that the specified service space around the appliance is clear. Refer to Table 8. Check all the joints and connections in the system and remake any that show signs of leakage. Refill and re-pressurise as described in Section 12-Commissioning.

Operate the appliance and take note of any irregularities. Refer to Section 18-Fault Finding for rectification procedures.

Check the combustion performance

Remove the cap from the sample point on the top of the appliance. Refer to Fig 40.

Connect the sampling meter.

With the appliance at maximum rate and stable in the DHW mode expect readings of:

CO<sub>2</sub> 5.6—6.4% CO 0.006—0.010%

NB For flues greater than 725mm without a restrictor the CO<sub>2</sub> may be up to 0.5% lower.


These figures cover all flue conditions.

Refit the cap after the test.

Disconnect the electrical supply at the mains and turn off the gas supply at the gas service cock on the appliance before starting any service procedures.


Always test for gas soundness after the service has been completed.

Fig. 47. Inner case and facia fixing

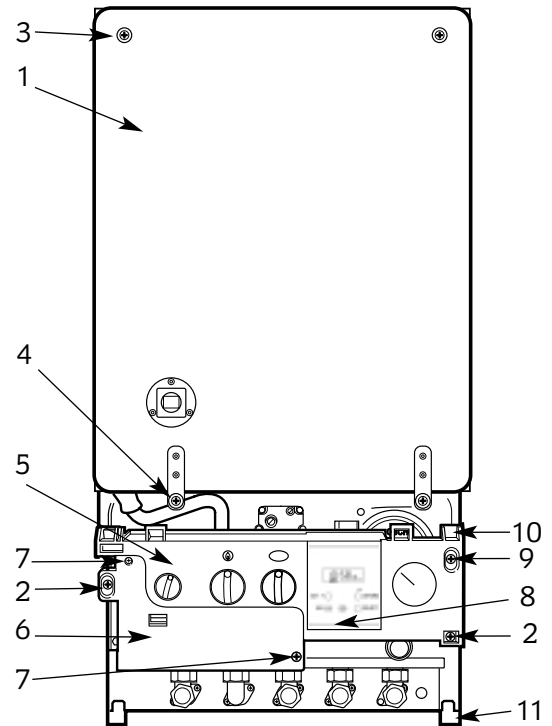

1. Inner casing cover
2. Cabinet fixing screws (4)
3. Inner casing cover fixing screws (2)
4. Inner casing cover fixing screws (2)
5. Facia control panel
6. Controls connector cover
7. Controls connector cover fixing screws (2)
8. Programmer (optional)
9. Facia control panel fixing screw
10. Top support lug (2)
11. Bottom support lug (2)

Fig. 48. Facia in service position

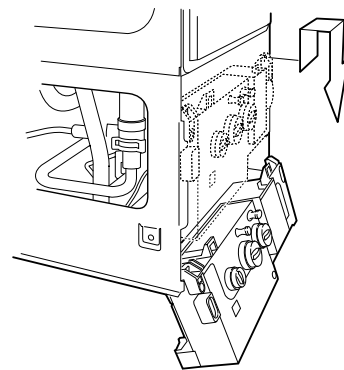

### 14.3 Component Access


To service the appliance it may be necessary to remove some or all of the following parts to gain access to components which may need to be checked or replaced.

**Cabinet** Pull off the clip-on facia cover. Unscrew the two screws and release the sides. Lift up and away from the top locating pegs.

**Facia Panel** Unscrew the single screw, lift off and lower onto the lower support lugs. Refer to Fig 42 & 43.



Fig. 49. Inner case components

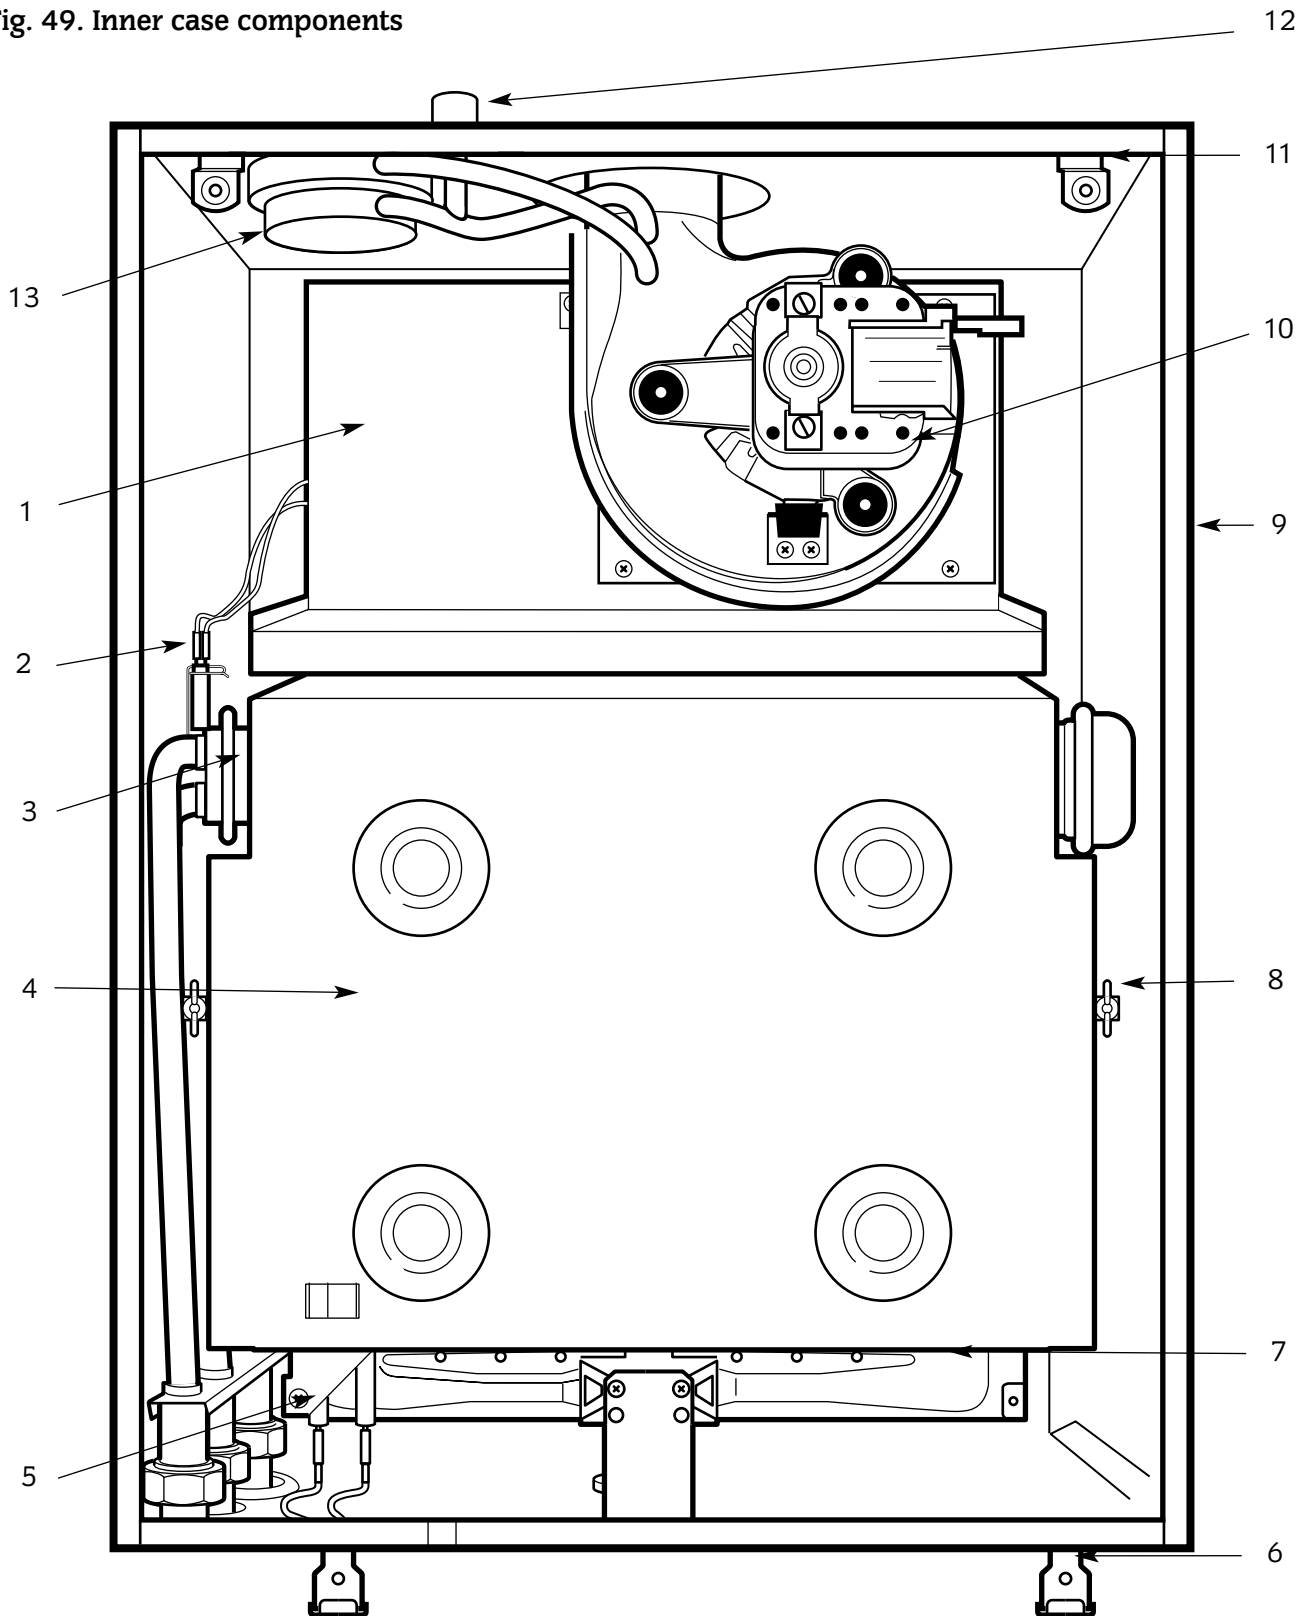


- |                                     |                                    |
|-------------------------------------|------------------------------------|
| 1. Flue hood                        | 8. Combustion chamber fixing screw |
| 2. Primary sensor                   | 9. Inner case                      |
| 3. Heat exchanger                   | 10. Fan assembly                   |
| 4. Combustion chamber assembly      | 11. Inner case cover fixing (top)  |
| 5. Spark electrode assembly         | 12. Combustion sensor point        |
| 6. Inner case cover fixing (bottom) | 13. Air pressure switch            |
| 7. Burner assembly                  |                                    |

- Inner Case Cover** Unscrew the four screws and remove. Refer to Fig 47.
- Combustion Chamber** Unscrew the two screws at the top and the two wing nut extended screws at the sides, pull forward and remove. Refer to Fig 49.
- Fan** Carefully pull off the electrical connections and the tubes from the airflow-sensing device. Unscrew the four screws and remove the fan assembly. Refer to Fig 50.
- Flue Hood** Remove the fan. Unscrew the four screws and slide out the hood. Refer to Fig 52.
- Burner** Remove the combustion chamber. Carefully pull-off the connections to the spark electrodes. Pull off the connection to the flame sense electrode. Unscrew the support bracket. Release the union nut beneath the burner and carefully remove the burner. Refer to Fig 51.

#### 14.4 Component Cleaning


Only use a non-metallic brush to clean components. Do not use a metal probe to clean the injectors. Clean the fan taking care not to block air flow detector. Clean the burner to ensure that the blades and injectors are clear. Clean the electrodes, replace if there is any sign of deterioration. Clean the heat exchanger. **Cover the gas inlet tube** and remove any deposits from the heat exchanger from the top and bottom. Carefully straighten any distorted fins on the heat exchanger. Check the combustion chamber insulation and replace if there is any sign of damage or deterioration. Refer to Section 15.5. Clean the controls in-situ using a non-metallic brush. Carefully refit any components removed in the reverse order. Check that all screws are tight and the connections properly remade with the appropriate gaskets/O-rings. Re-commission, as necessary, for correct operation to the users requirements. Refer to Section 12 Commissioning.

Fig. 50. Fan assembly

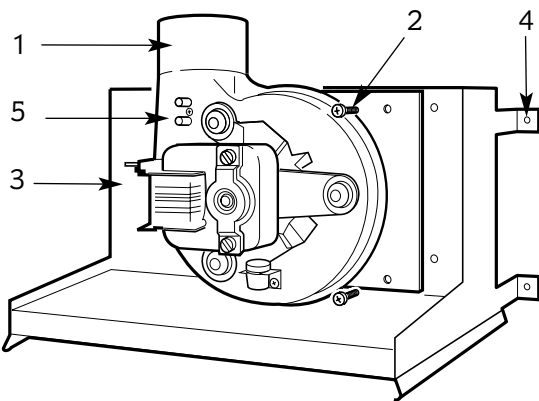


1. Fan assembly
2. Fan assembly fixing screws (4)
3. Flue hood
4. Flue hood fixing screws (4)
5. Air Flow detector

Fig. 52. Flue hood

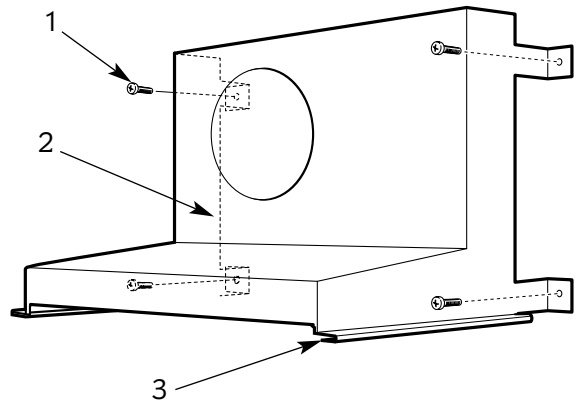

1. Flue hood fixing screws (4)
2. Flue hood
3. Flue hood/Heat exchanger guide

Fig. 51. Burner assembly

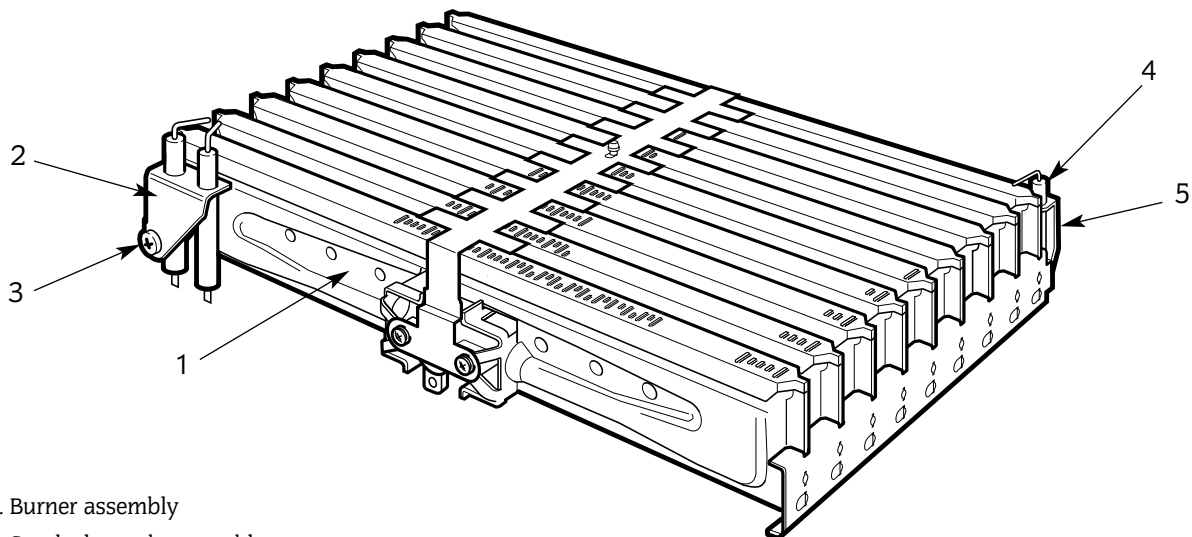

1. Burner assembly
2. Spark electrode assembly
3. Spark electrode assembly fixing screw
4. Flame sense electrode
5. Flame sense electrode fixing screw

## 15. Replacement Of Parts

**IMPORTANT:** Turn off the gas supply and electrically isolate the appliance before replacing any components.

After the replacement of any components always check for gas soundness where relevant and carry out functional checks as described in Section 12-Commissioning.

Any O-ring or gasket that appears damaged must be replaced. Complete gasket and O-ring packs are available for gas and water connections on the appliance.

### Component Access

Refer to Section 14, Inspection and Servicing for access to components.

### Draining the Appliance

Primary System: Turn off the heating flow and return valves at the appliance. Refer to Fig 17.

Open the drain tap a short tube is already connected to the drain point. Refer to Fig. 20. Close the drain tap when the flow from the appliance has stopped.

### 15.1 Gas Valve

Unscrew the union connections above and below the gas valve and remove the assembly. Disconnect/unplug the electrical connections from the valve.

Use new gaskets when replacing the valve. Refer to Fig 53.

Set the Gas Valve:

Connect a pressure gauge to the burner and inlet pressure test points on the valve. Refer to Fig 42.

Switch on the gas and electricity supplies.

Check for gas tightness at the gas valve inlet.


Refer to Section 12-Commissioning for the method of checking the pressures.

Check for gas soundness at the gas valve outlet.

Adjust the maximum and start pressure [minimum], as necessary, to obtain the required pressures. Switch off the appliance and disconnect the pressure gauge. and tighten the screw. Refer to section 12.5

Check for gas soundness at the test point.

**Fig. 53 . Lower casing - gas and water controls.**

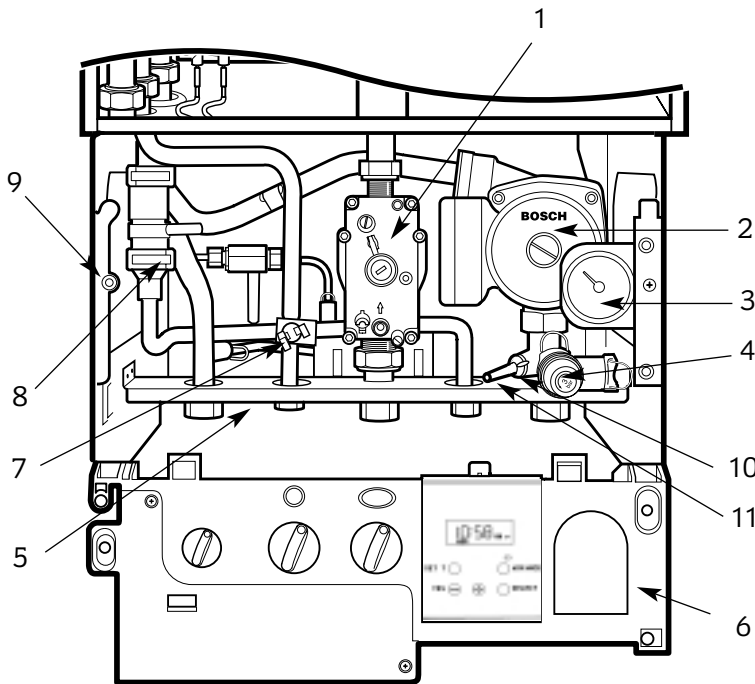

1. Gas valve
2. Pump
3. Pressure gauge
4. Relief valve
5. Manifold assembly
6. Control panel in lowered position
7. DHW sensor
8. DHW flow turbine
9. Control panel top support
10. Drain tap
11. Drain tube

**DHW Circuit:** Turn off the mains cold water supply at the appliance. Refer to Fig 16. Open a hot tap below the level of the appliance to drain the domestic hot water from the appliance.

**Important:** A small quantity of water will remain in some components even after the appliance has been drained. Protect any electrical components when removing items from the water circuits.


### Component Replacement

Refer to Fig 47 and 49 for an indication of the location of the various components.

Replace any components removed from the appliance in the reverse order using new gaskets/O-rings/sealant/heat transfer paste where necessary. Always check that any electrical connections are correctly made and that all screws are tight.


Remove casing and cover panels and lower the facia onto lower lugs, as necessary, to gain access to the components. Refer to Section 14, Inspection and Servicing.

**Fig. 54. Spark electrode assembly**

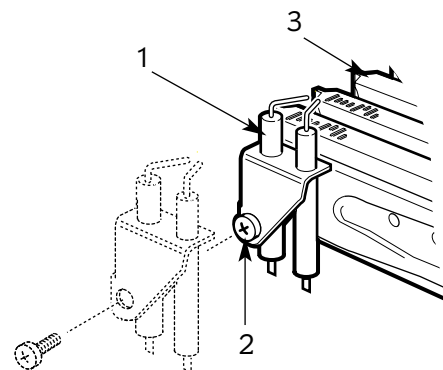

1. Spark electrode assembly
2. Fixing screw
3. Burner blade assembly (LH)

**Fig. 55. Flame sense electrode**

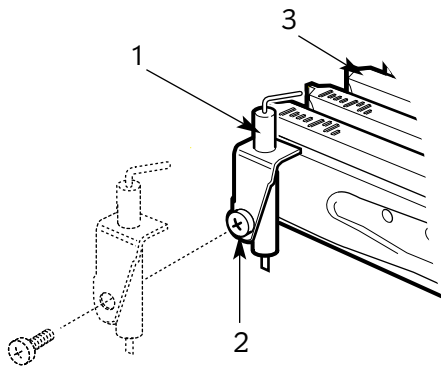

- 1. Flame sense electrode
- 2. Fixing screw
- 3. Burner blade assembly (RH)

**15.2 Spark Electrode**

Remove the inner casing cover and the combustion chamber. Carefully pull off the lead from the electrode. Unscrew the screw and remove the assembly. Refer to Fig 54. Ensure that the electrode is at the correct height above the burner blade.


**15.3 Flame Sense Electrode**

Remove the inner casing cover and the combustion chamber. Remove burner as in 15.4. Carefully pull off the leads from the electrode assembly. Unscrew the screw and remove the assembly. Refer to Fig 55.

**15.4 Burner**

Remove the inner casing cover and the combustion chamber. Remove the spark electrode connections. Unscrew the two burner bracket fixing screws. Release the union connection beneath the burner and remove the burner from the appliance. Refer to Fig. 51. and 56. Do not omit the gasket when fitting the new burner.

**Fig. 56. Burner**

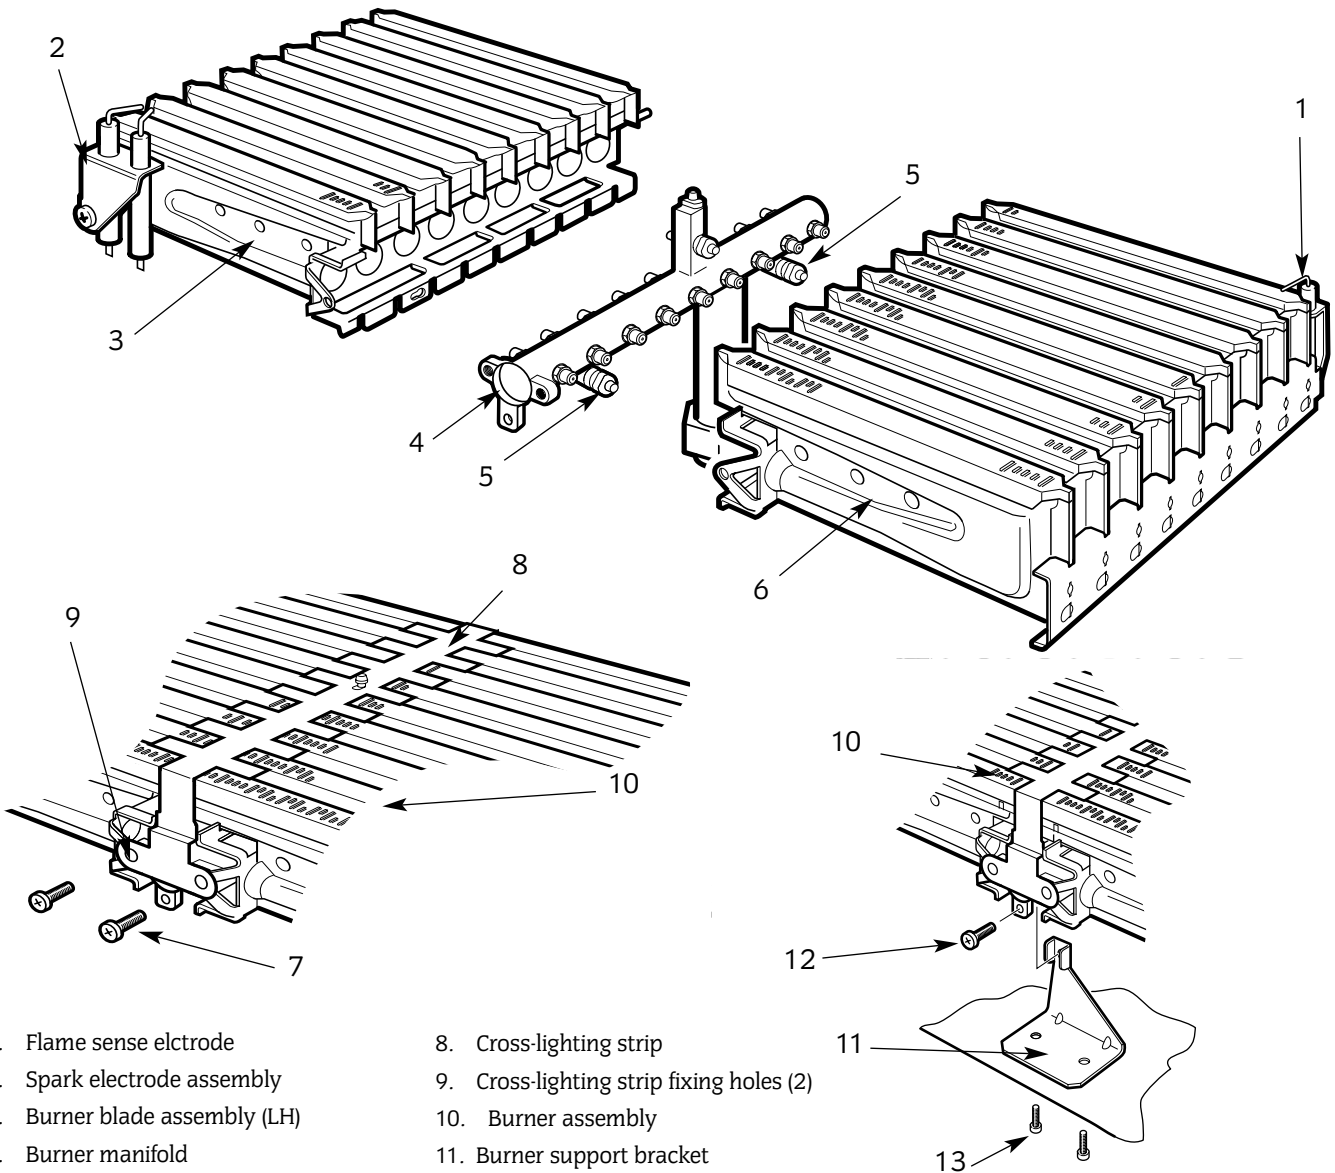

- 1. Flame sense electrode
- 2. Spark electrode assembly
- 3. Burner blade assembly (LH)
- 4. Burner manifold
- 5. Burner blade assembly location points
- 6. Burner blade assembly (RH)
- 7. Cross-lighting strip fixing screws (2)
- 8. Cross-lighting strip
- 9. Cross-lighting strip fixing holes (2)
- 10. Burner assembly
- 11. Burner support bracket
- 12. Burner fixing screw
- 13. Bracket fixing screws (2)

### 15.5 Combustion Chamber Insulation, Front & Sides

Remove inner casing door and combustion chamber. Remove damaged insulation, replacement is the reverse of removal. See Fig 57. Removal must be by sliding panels.


### Combustion Chamber Insulation, Rear

**Remove side panels before removing** heat exchanger as described in 15.21.

Pull insulation forward and up to remove.

Replacement is the reverse of removal. Refer to Fig 57.

**Fig. 54. Combustion Chamber Insulation.**

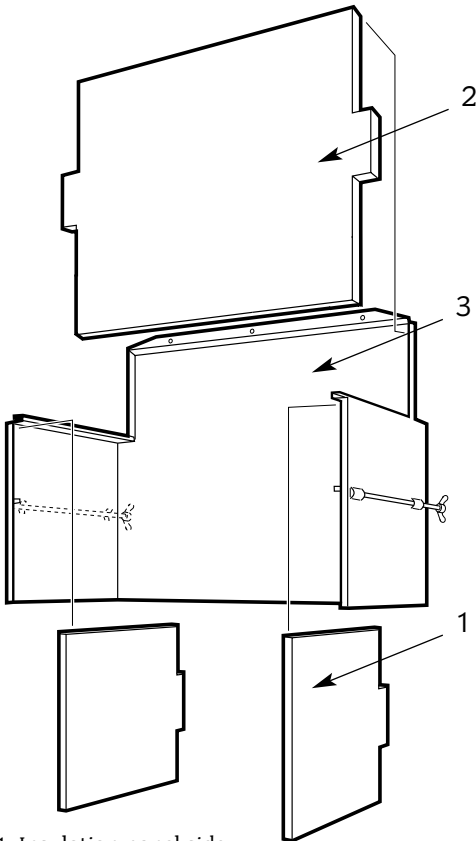

1. Insulation panel-side
2. Insulation panel-front
3. Combustion chamber assembly


### 15.6 Pressure Gauge

Remove the clip-on facia cover, cabinet and lower the facia panel onto the lower support lugs. Refer to Fig 48. Check that the appliance has been fully drained. Withdraw the clip and remove the pressure-sensing head. Refer to Fig 58.

Unclip the gauge head from its mounting bracket and remove. Refer to Fig 58.


Do not omit the washer from the pressure capillary when fitting the replacement gauge.

**Fig. 58. Pressure Gauge head**

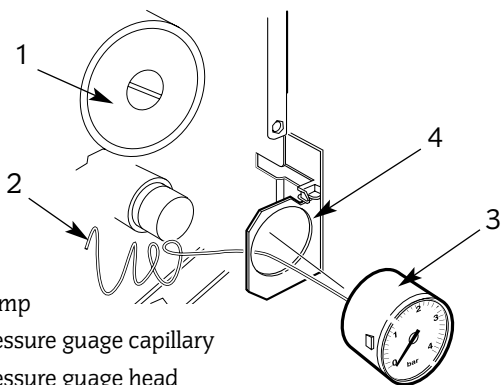

1. Pump
2. Pressure gauge capillary
3. Pressure gauge head
4. Mounting bracket

**Fig. 59. Relief valve boiler drain connection**

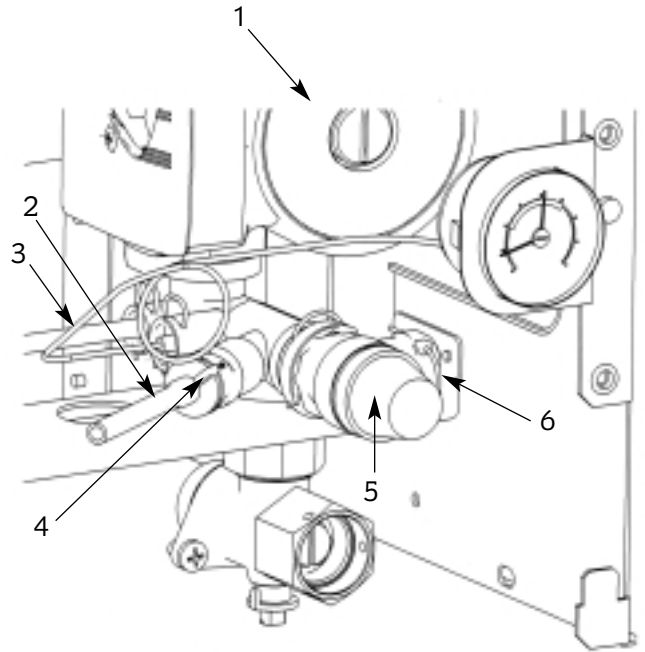

1. Pump
2. Boiler drain
3. Pressure gauge capillary
4. Boiler Drain ON/OFF
5. Relief valve
6. Relief valve drain connection (push fit)


### 15.7 Relief Valve

Remove the clip-on facia cover, cabinet and lower the facia onto the lower support lugs.

Check that the appliance has been fully drained.

Unclip and pull-out the valve body. Refer to Fig 59

**Fig. 60. Water flow turbine.**

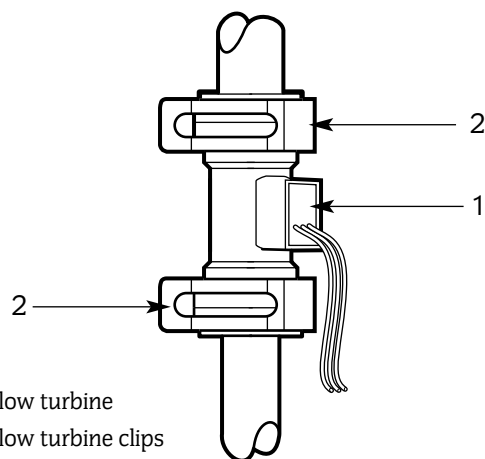

1. Flow turbine
2. Flow turbine clips

### 15.8 Flow Switch


Drain the DHW circuit as described at the start of Section 15 preceding.

Remove the clip on facia cover, cabinet and lower the facia panel onto the lower support lugs. Separate the in-line connector. Remove the two fixing clips and withdraw the turbine. Refer to Fig 60. Do not omit the gaskets when fitting the replacement turbine.

### 15.9 Inlet Water Filter

Remove the flow switch as described in 15.8 preceding. Taking care, remove flow restrictor assembly from the flow turbine. Carefully clean wire mesh by back flushing with water or replace assembly if necessary. Refer to Fig 61.

**Fig. 61. Inlet water filter**

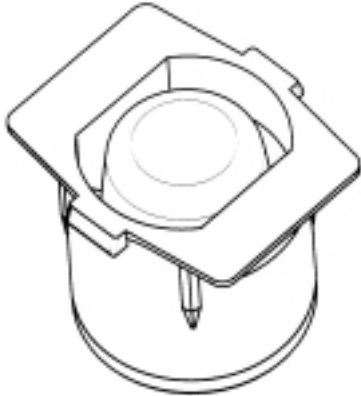

### 15.10 Control Board

Remove the clip-on facia cover, cabinet and the connections cover. Carefully disconnect all the electrical connections. Refer to Fig 35 and 48.

Remove the facia panel and unscrew the four screws and remove the cover from the rear of the facia. Refer to Fig 62. Lift out the control board. Refer to Fig 62


Pull out and transfer the transformer to the new board. Re-commission the appliance to check and set the burner pressures. Refer to Section 12, Commissioning.

### 15.11 Transformer

Unscrew the four screws and remove the cover from the rear of the facia as described in 15.10 preceding. Refer to Fig 62.

Pull out and transfer the transformer to the new board. Refer to Fig 62.

**Fig. 62. Control board**

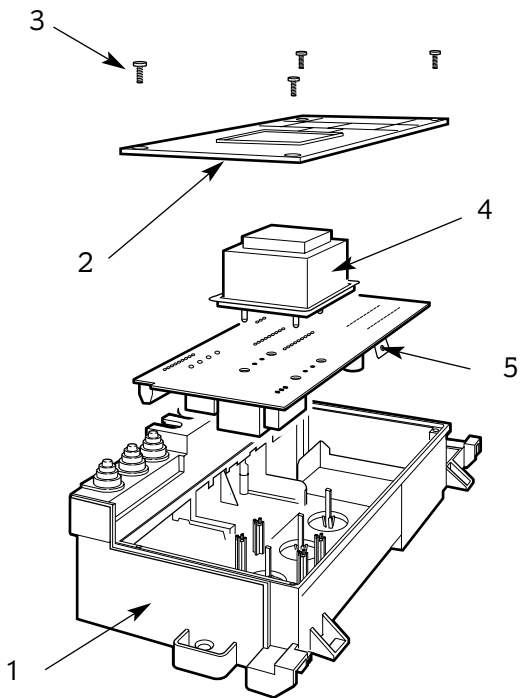


- 1. Control panel
- 2. Rear cover
- 3. Rear cover fixing screws (4)
- 4. Transformer
- 5. Control board

### 15.12 Clock/Programmer

Remove the facia by gently pulling it away from the boiler to release the clips.

Remove the clock/programmer assembly by releasing the clip at the top of the clock/programmer and ease away from the control panel being careful not to pull on the connector lead. Unplug the connector at the control board. Refer to Fig 63. Comprehensive instructions are sent with the new control.

**Fig. 63. Programmer connection**

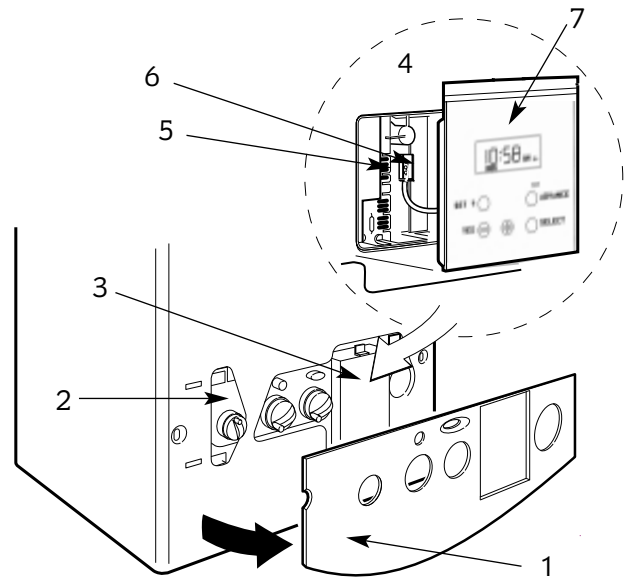

- 1. Facia (gently pull forward to un-clip and remove)
- 2. Control panel (boiler outer casing in place)
- 3. Programmer cover (un-clip to remove. See Fig. 34)
- 4. Programmer location in detail
- 5. Programmer connections (See Fig. 34)
- 6. Programmer connector plug
- 7. Programmer

### 15.13 Fan

Remove the inner casing cover. Remove the fan as described in Section 14.3, Inspection and Servicing.

Ensure that all the connections are correctly made to the new fan.

### 15.4 Air Flow Detector

Remove the fan as described in 15.13 preceding. Unscrew and withdraw, through the fan outlet, the airflow detector. Refer to Fig 50.

### 15.15 Primary [ch] Sensor

Remove the clip-on fascia cover, cabinet and inner casing cover. Carefully pull-off the connections. Release the clip and lift out the sensor. Refer to Figs 49 & 64.

Do not omit the heat transfer paste when fitting the replacement sensor.

### 15.16 Overheat Thermostat

Remove the clip-on fascia cover, cabinet and the inner casing cover. Refer to fig.67

Carefully pull-off the connections. Unscrew the two screws and remove the thermostat and fixing bracket. Refer to Fig 65. Apply a small quantity of heat transfer paste to the face of the replacement thermostat.

Carefully position the thermostat so that the connections are away from the flue hood.

### 15.17 DHW Sensor

Remove the clip-on fascia cover, cabinet and lower the fascia onto the lower support lugs.

Carefully pull off the connections. Unscrew the clip and remove the sensor. Refer to fig.53

Apply a small quantity of heat transfer paste to the face of the replacement sensor. Refer to Fig 66.

### 15.18 Pump

Check that the primary circuit has been fully drained.

Use a 4mm Allen key to release the four pump head fixing screws and remove the pump head. Refer to Fig 53.

Disconnect and transfer the electrical connections to the new pump head. Take care not to scratch the mating surfaces.

### 15.19 Expansion Vessel

It will be necessary to remove the appliance from the wall to replace the expansion vessel. Refer to fig.40

Alternatively the specified replacement can be fitted into the heating system return as close to the appliance as possible. Re-fill and pressurise the system as described in Section 13 Commissioning.

### 15.20 Auto Air Vent

Drain the primary circuit.

Unscrew and remove the auto air vent. Do not omit the sealing washer when fitting the replacement air vent. Remove the cap. Refer to Fig.40

### 15.21 Primary Heat Exchanger

Check that the appliance has been fully drained.

Remove the temperature sensors as described in 15.15, 16 and 17 preceding.

Remove the combustion chamber, fan and flue hood as described in Section 14.3, Inspection and Servicing and burner as described in 15.4. NOTE: The heat exchanger is unsupported when both the combustion chamber and flue hood are removed. Undo the four union connections and remove the heat exchanger. Do not omit the sealing washers when fitting the replacement heat exchanger. Refer to Fig 67.

Fig. 64. Primary (CH) sensor.



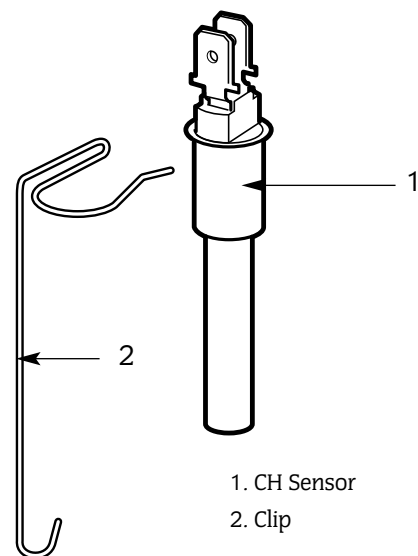


Fig. 65. Overheat thermostat

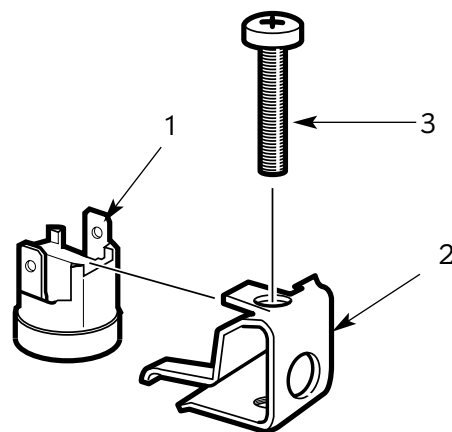

1. Overheat thermostat
2. Fixing bracket
3. Overheat thermostat fixing screw


Fig. 66. DHW sensor

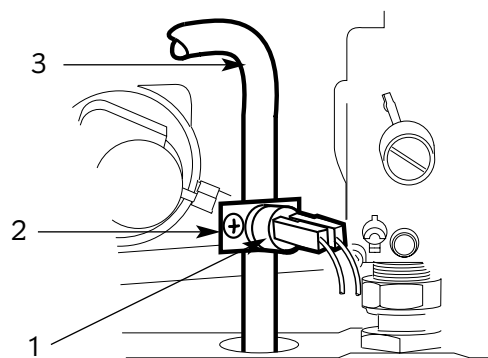

1. DHW sensor
2. DHW sensor fixing bracket and screw
3. DHW outlet pipe



**Fig. 67. Primary heat exchanger**

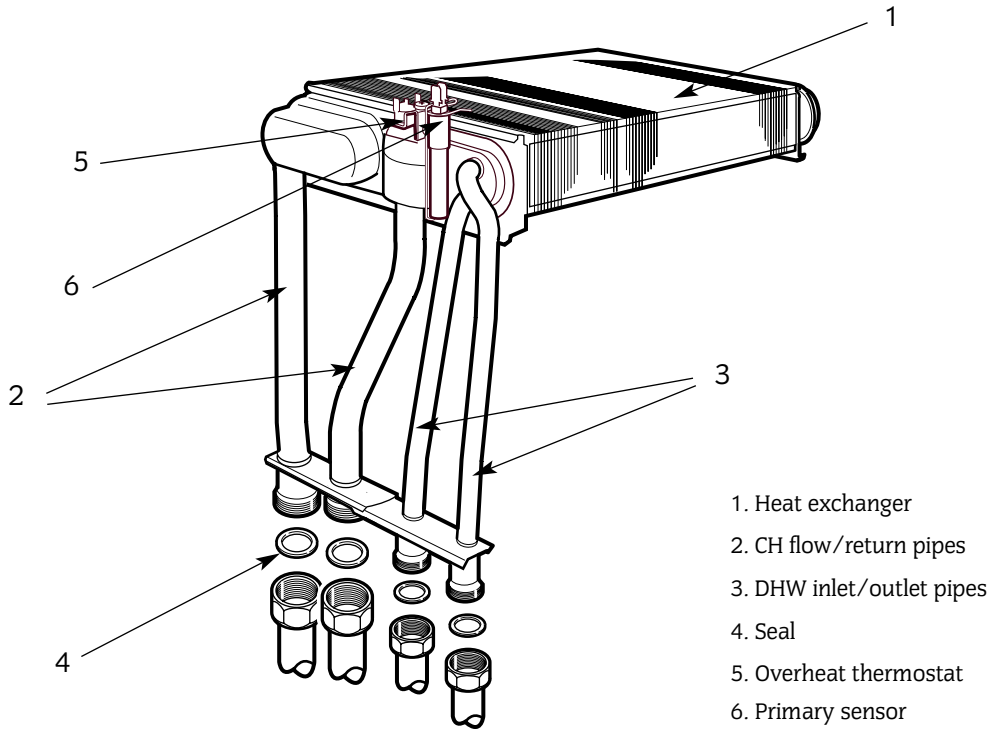

- 1. Heat exchanger
- 2. CH flow/return pipes
- 3. DHW inlet/outlet pipes
- 4. Seal
- 5. Overheat thermostat
- 6. Primary sensor


**22 Air pressure Switch**

Squeeze and push down the two plastic lugs and remove the pressure switch from under the bracket. See Fig 68.  
 Remove the fixing clip (see Fig 68) and fit to the new air pressure switch insuring that the orientation of the clip to the air connections is the same.  
 Remove the electrical connections to the old switch and fit to the new switch in the same position.  
 Place the replacement switch under the mounting bracket and locate the plastic lugs in the two holes in the bracket and push up until the lugs are fully home. Connect the RED tube to the +ve connector and the WHITE tube to the -ve connector.

**23 Sight Glass**


Remove and replace the inner casing cover complete.  
 Refer to Section 15.3, Inspection and Servicing. Refer to Fig 47.

**Fig. 68. Air flow pressure switch**

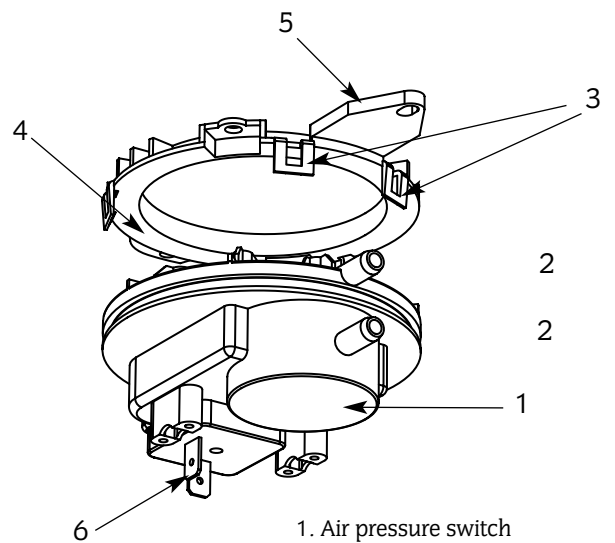

- 1. Air pressure switch
- 2. Tube connectors
- 3. Securing clips
- 4. Air pressure switch fixing clip
- 5. Fixing bracket
- 6. Electrical connections

**Fig. 67. Air flow pressure switch location**

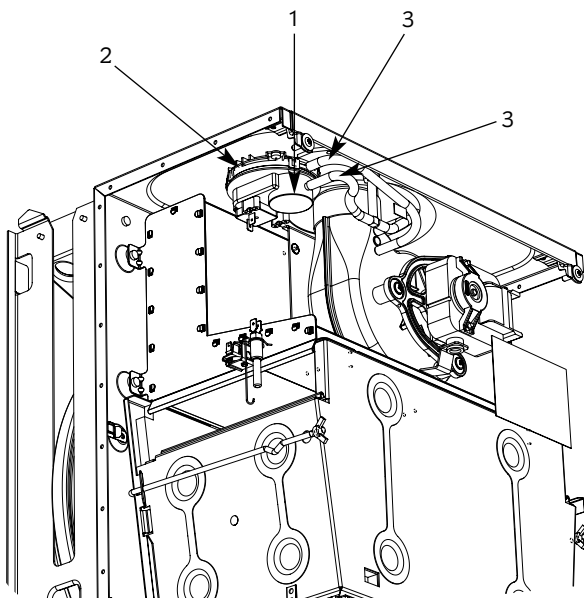

- 1. Air pressure switch
- 2. Air pressure switch fixing clip
- 3. Sensing tubes













## 16. Short Parts List

Key No.	G.C. No.	Part	Qty	WHS Part No.
1	E88-143	Burner 28 NG RSF	1	8 716 105 008 0
2	E88-145	Gas Valve CE428	1	8 747 003 601 0
3	E88-146	Air Pressure Switch	1	8 716 104 896 0
4	E88-169	Electrode Set (Flame and Ignition)	1	8 716 101 901 0
5	E88-170	Overheat Stat	1	8 717 206 200 0
6	375-696	NTC/Thermistor DHW	1	8 716 142 302 0
7	E88-171	NTC/Thermistor CH	1	8 714 500 029 0
8	378-809	Air Vent Manual 1/4 BSP	1	8 716 140 516 0
9	299-363	Air Flow Sensor	1	8 716 141 000 0
10	E88-173	Heat Exchanger 28 kW	1	8 715 406 814 0
11	E88-175	Insulation Pack 28 RSF	1	8 761 105 010 0
12	E88-176	Pressure Gauge	1	8 716 142 398 0
13	E27-580	Pressure Relief Valve	1	8 716 156 764 0
14	E88-177	Pump	1	8 716 143 116 0
15	E27-587	Expansion Vessel	1	8 715 407 154 0
16	E88-178	Control Board	1	8 748 300 417 0
17	E88-180	Fan Assembly	1	8 716 104 815 0
18	E88-181	Flow Sensor	1	8 716 146 164 0
19	E88-182	Seal-Door Extrusion	1	8 716 104 609 0
20	E88-183	Transformer	1	8 747 210 294 0
21	E88-185	Flow Regulator 28 kW	1	8 716 141 253 0
22	E88-189	Code Plug 28 RSF	1	8 714 421 133 0


## Accessories and Kits

	A001	Charging Link Assembly	1	7 716 192 281
	A002	Installer Pre-Filling Kit	1	7 716 192 282
	A006	Simplefit Telescopic Flue Kit - F105H500	1	7 716 191 068
	A007	Vertical Flue Kit	1	7 716 191 079
	A008	90° Flue Elbow - F106E90	1	7 716 191 013
	A009	45° Flue Elbow (Pair) - F 106E45	2	7 716 191 014
	A010	Vertical Flue Adaptor Kit	1	7 716 191 016
	A011	Security Kit	1	7 716 192 246
	A012	Mechanical Programmer	1	7 716 192 027
	A013	Digital Programmer	1	7 716 192 028

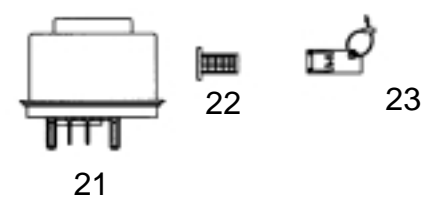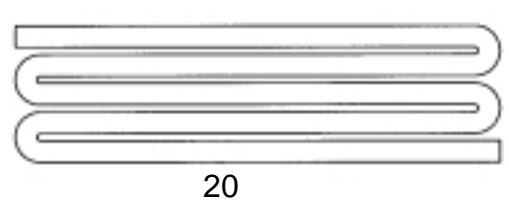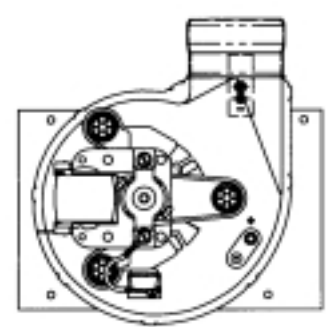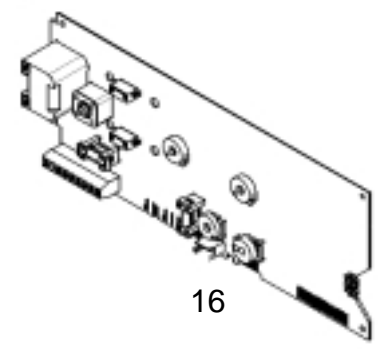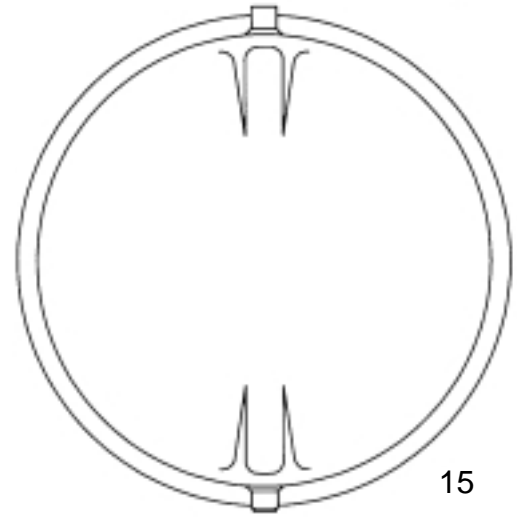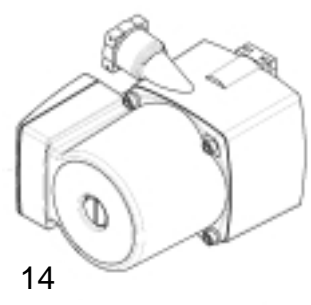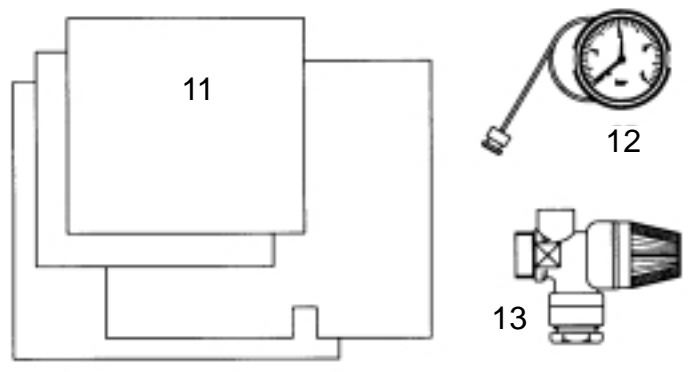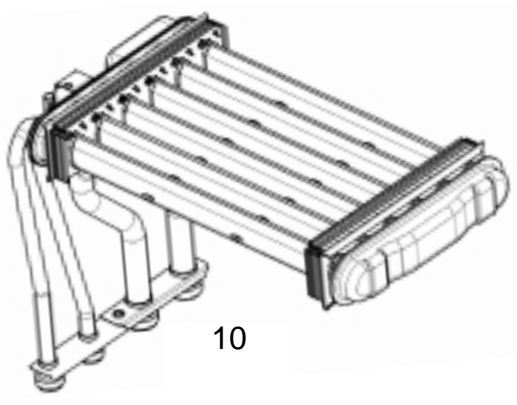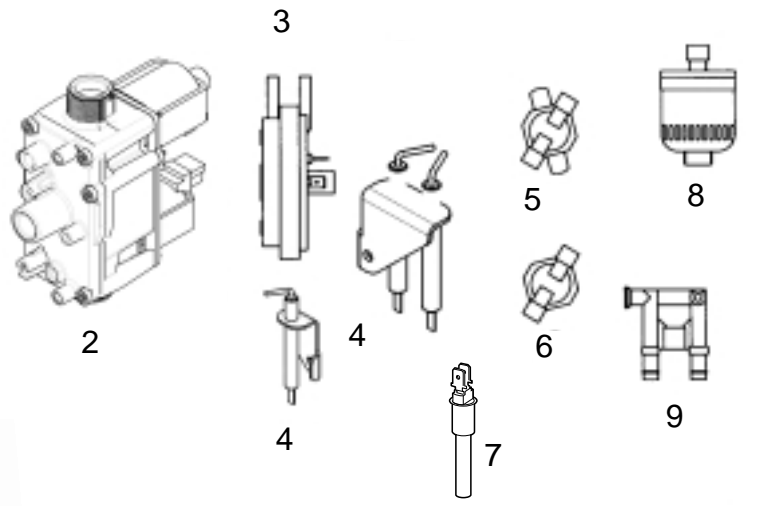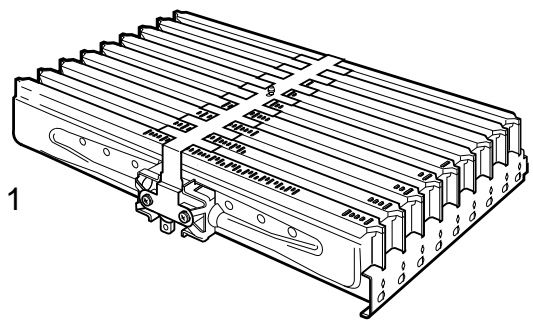


# 17. Operational Flow Diagrams


## CENTRAL HEATING FUNCTION

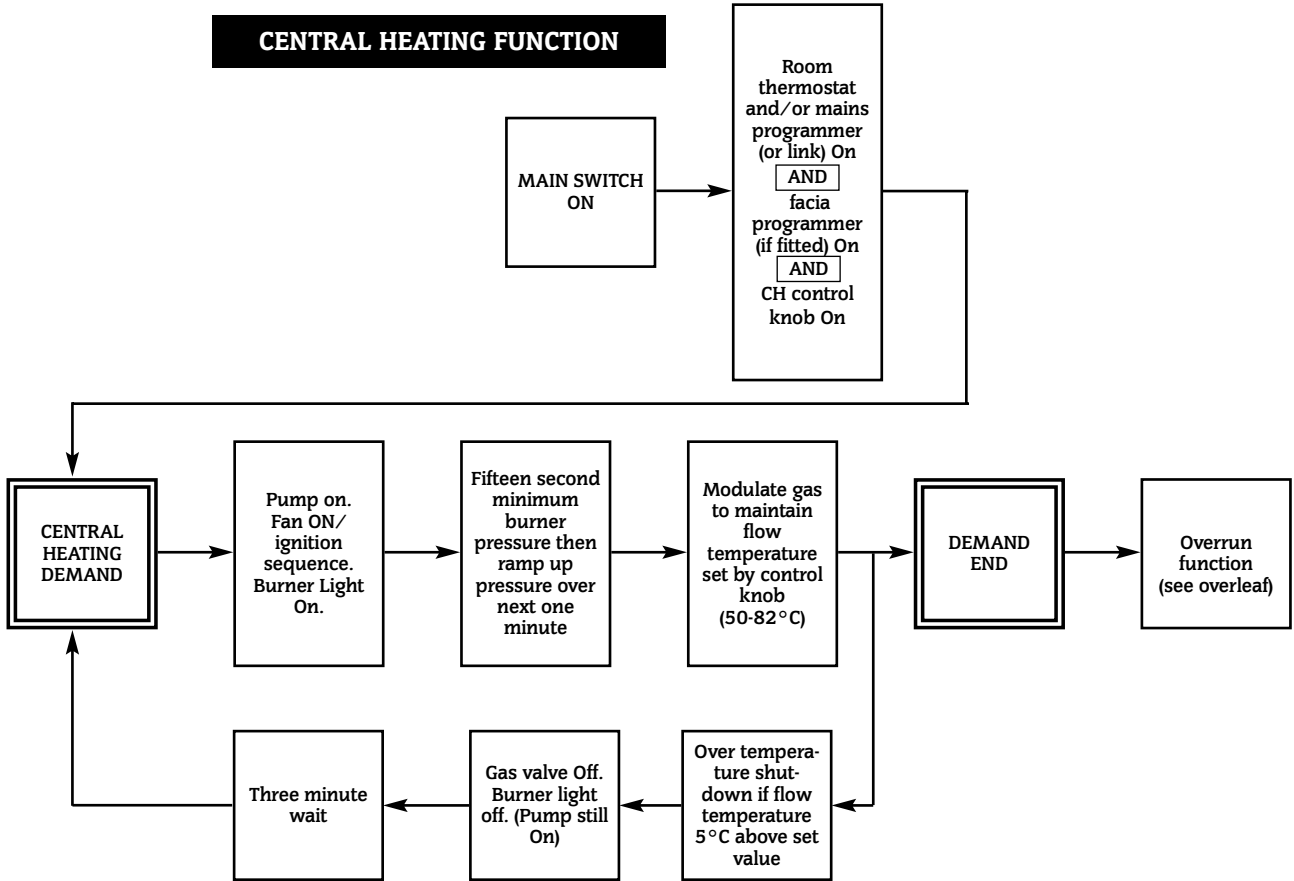


## DOMESTIC HOT WATER FUNCTION

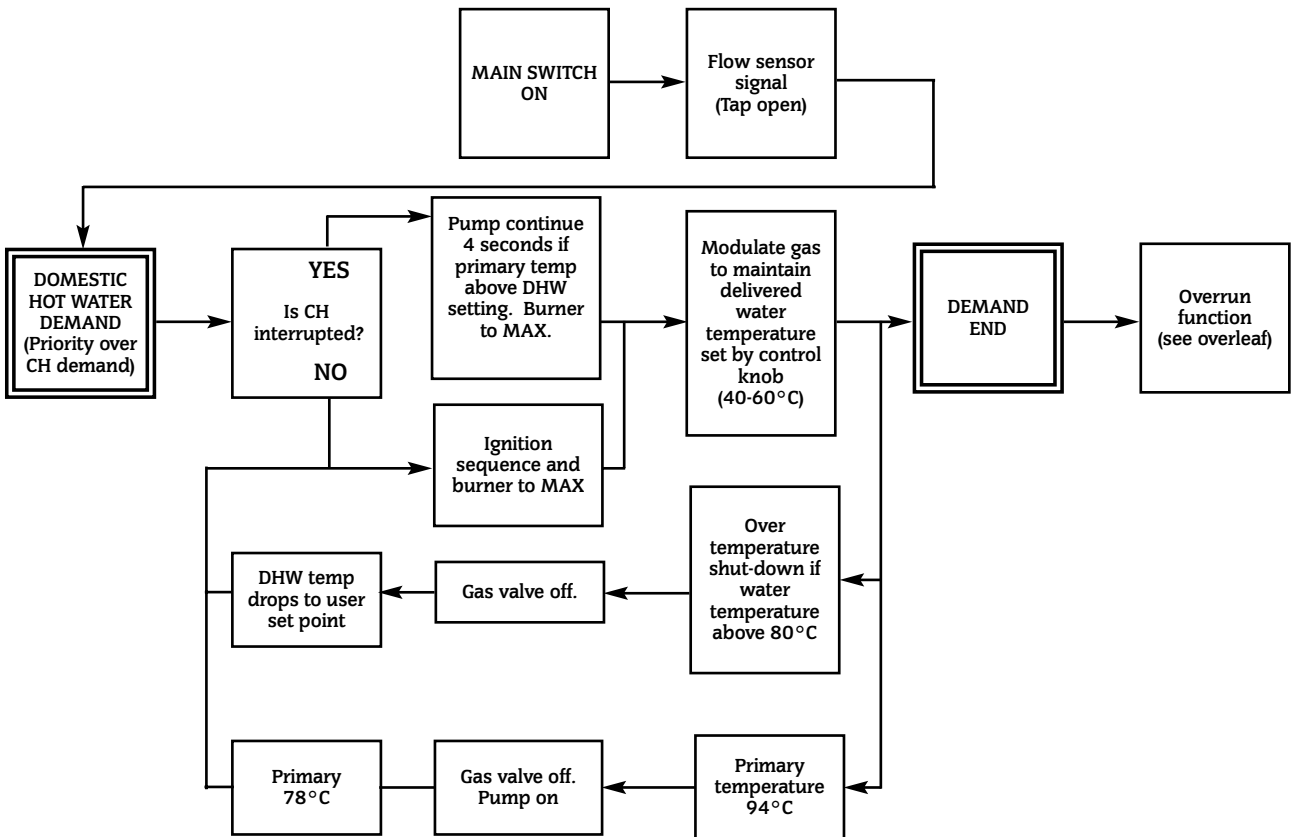

## OVERRUN FUNCTION

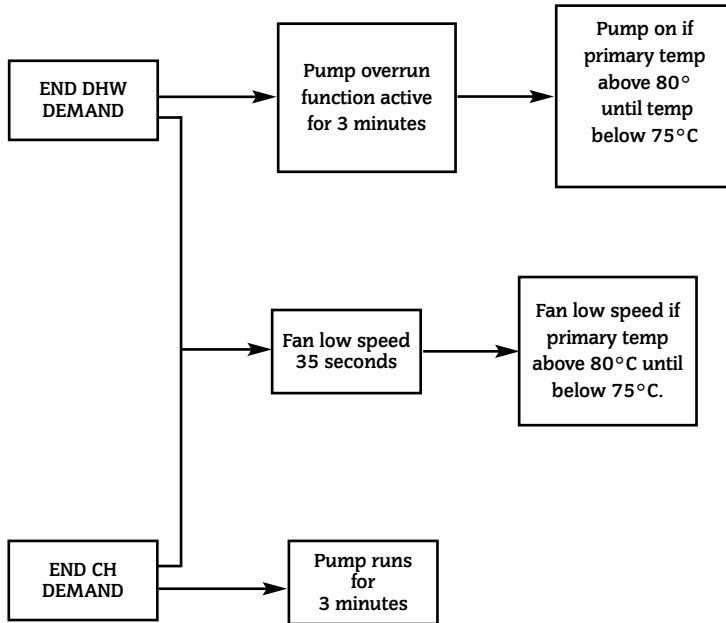

## AUTOFROSTAT FUNCTION

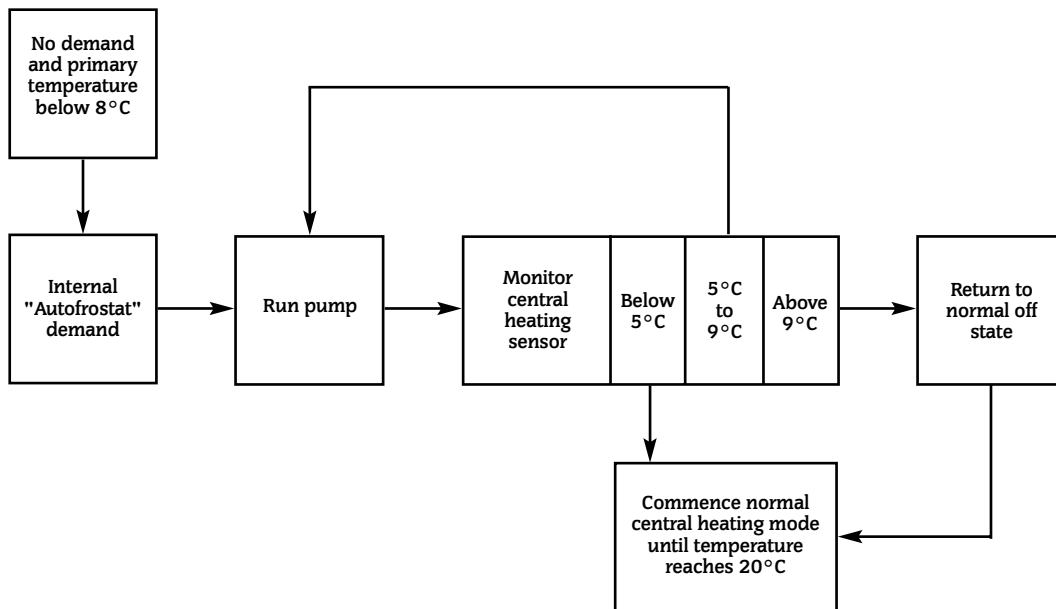

## 18. Fault Finding

**Note:** This fault-finding information is for guidance only. Worcester Heat Systems cannot be held responsible for costs incurred by persons not deemed to be competent.

By flashing at various rates, the oval shaped facia light will indicate specific fault conditions. If this is used with other observations during a fault, then every normal fault can be identified.



To use the fault finding system, use the table below to select the failure condition during your fault. The most common causes are listed, then refer to the test in the following section. This fault finding system assumes that the appliance has been operating normally until the time of failure (ie not a first installation fault).


### PRELIMINARY CHECKS

Preliminary electrical system checks are the first electrical checks to be carried out during a fault-finding procedure. On completion of the Service/Fault-Finding task which has required the breaking and remaking of electrical connections, check (a) EARTH CONTINUITY, (b) SHORT CIRCUIT CHECK, (c) POLARITY and (d) RESISTANCE TO EARTH.


### FAULT LIST

OBSERVED FAULT	COMMON CAUSES	SEE TEST
No lights and no functions (with demand)	No mains Voltage supply. Fuse F1 or F2 blown. Transformer or connector failed. Board fault. ADM (Appliance Diagnostic Module) fault.	<b>A</b>
No CH function (DHW OK)	No link at ST2 Ls to Lr, or failed external control input to Lr. Failed programmer. Board fault.	<b>B</b>
No DHW function (CH OK)	Flow sensor failure. DHW sensor (LED 4 flash/second). Board fault.	<b>C</b>
Flash once per second <i>Ignition lockout</i> <i>Overheat lockout</i> <i>Internal error</i> <i>(reset lockout by gently pressing reset button for 5 seconds)</i>	No gas or low gas pressure. Weak spark or spark not across electrodes. Gas valve leaking or failed. Low water pressure or boiler dry. Pump fail. Primary sensor position. Flame sensor fail or connector. Overheat stat tripped or disconnected or faulty. Blocked burner. Blocked heat exchanger. Faulty harness. Board fault. Diagnostic Module fault.	<b>D</b>
Flash 4 times per second	Code plug missing or failed. CH or DHW Sensor fault or out of position. Air pressure switch fault or condense in tubes. Fan fail or stiff. Blocked flue. Faulty harness. Board fault.	<b>E</b>
Flash 8 times per second <i>GV mode switch</i>	Gas Valve mode switch on min or max.	<b>F</b>
Burner on with no demand	Autofroststat. Board fault.	<b>G</b>
Water temperature too hot	Sensor off pipe.	<b>H</b>
Water temperature too cool	Low gas pressure. Pot P1 not turned up. Stiff/sticking gas valve. Stiff/sticking flow sensor. Board fault.	<b>I</b>

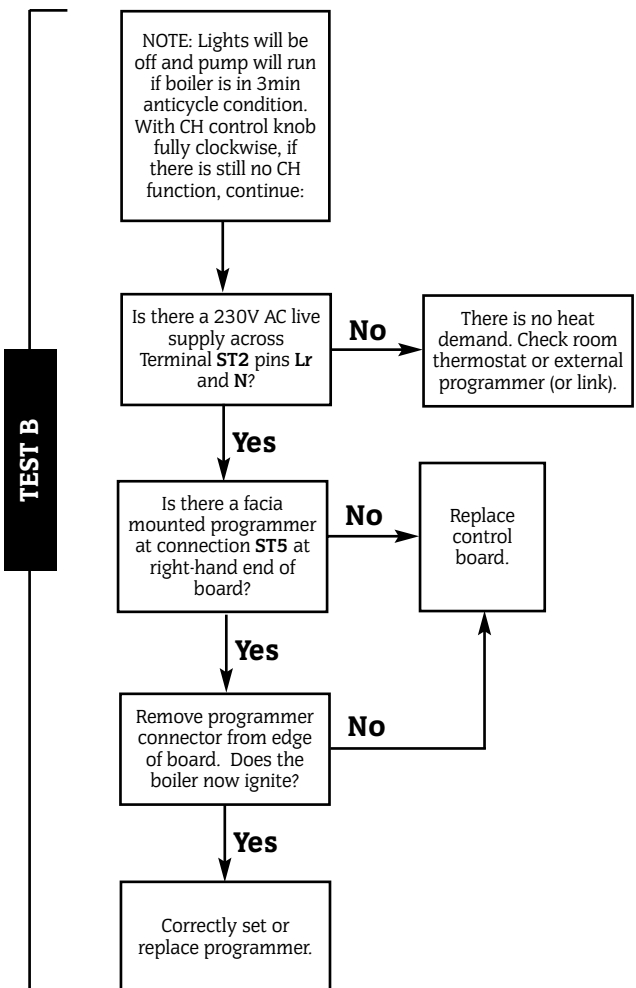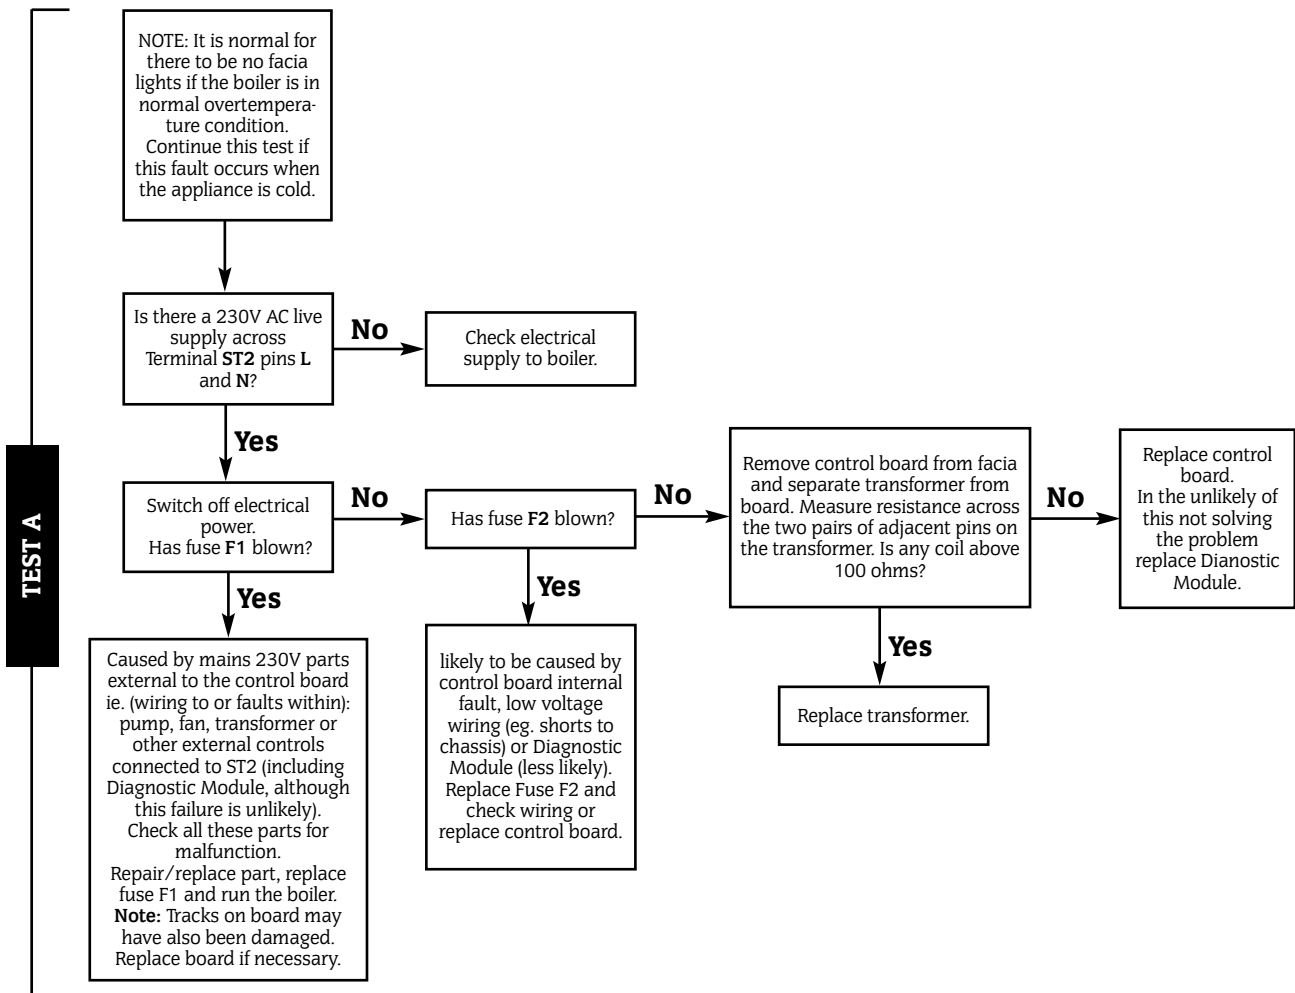


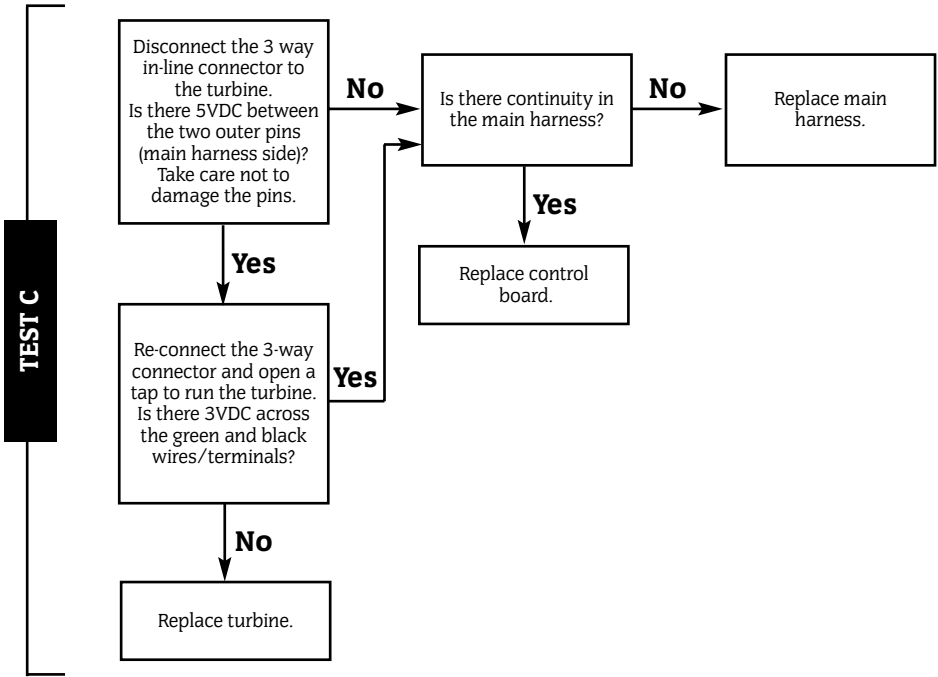



**TEST D**

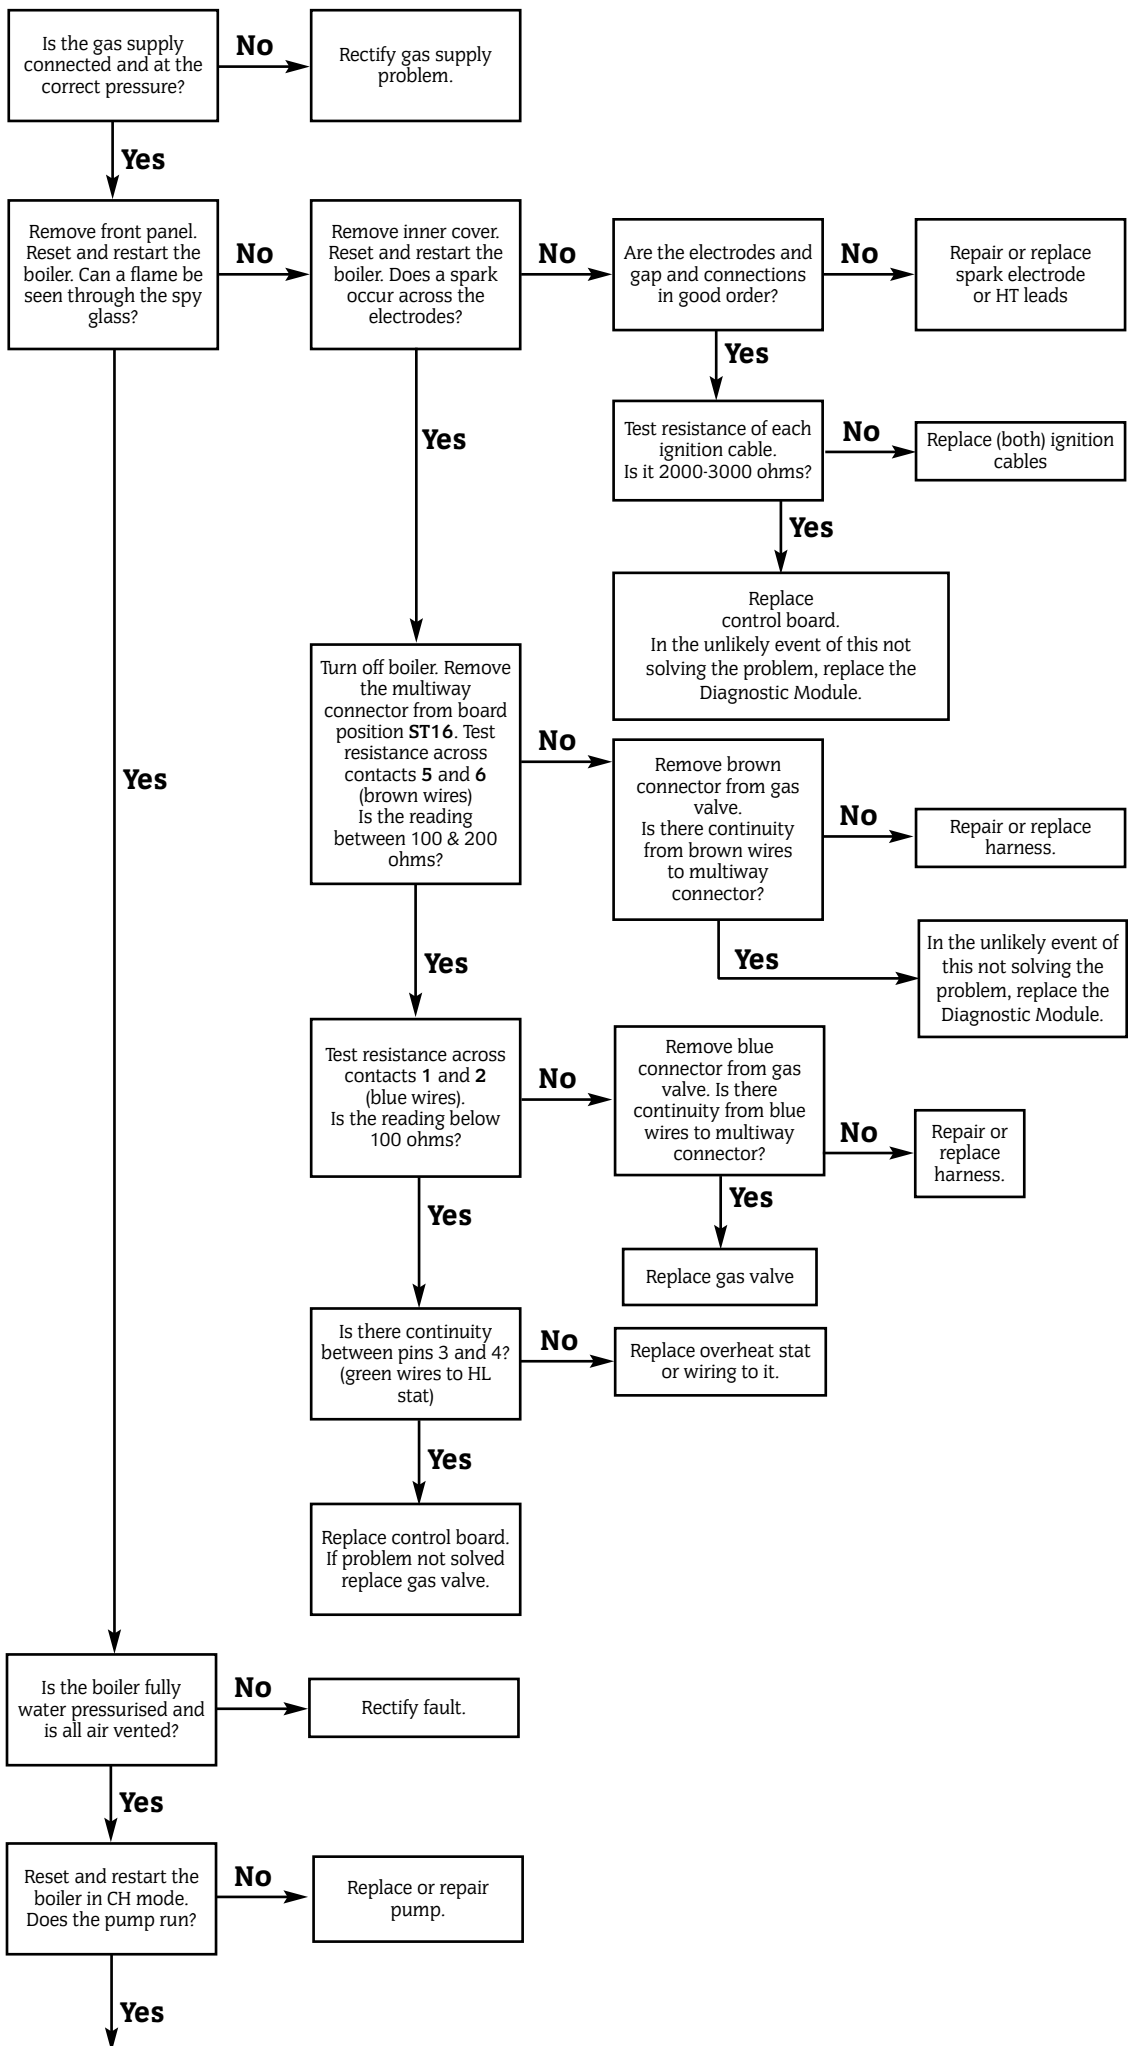






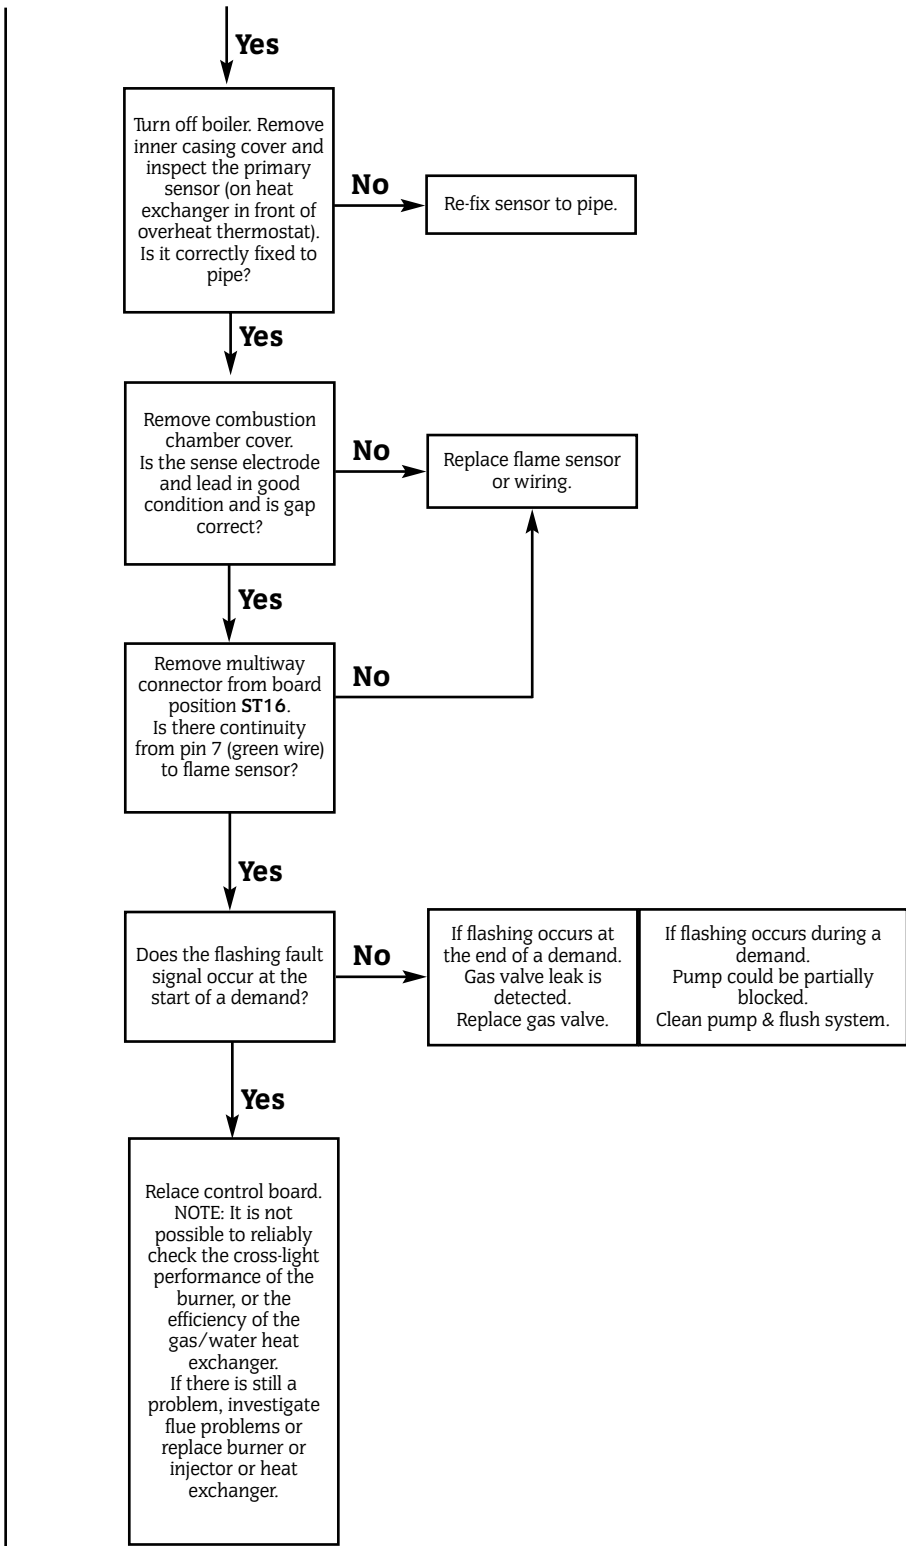


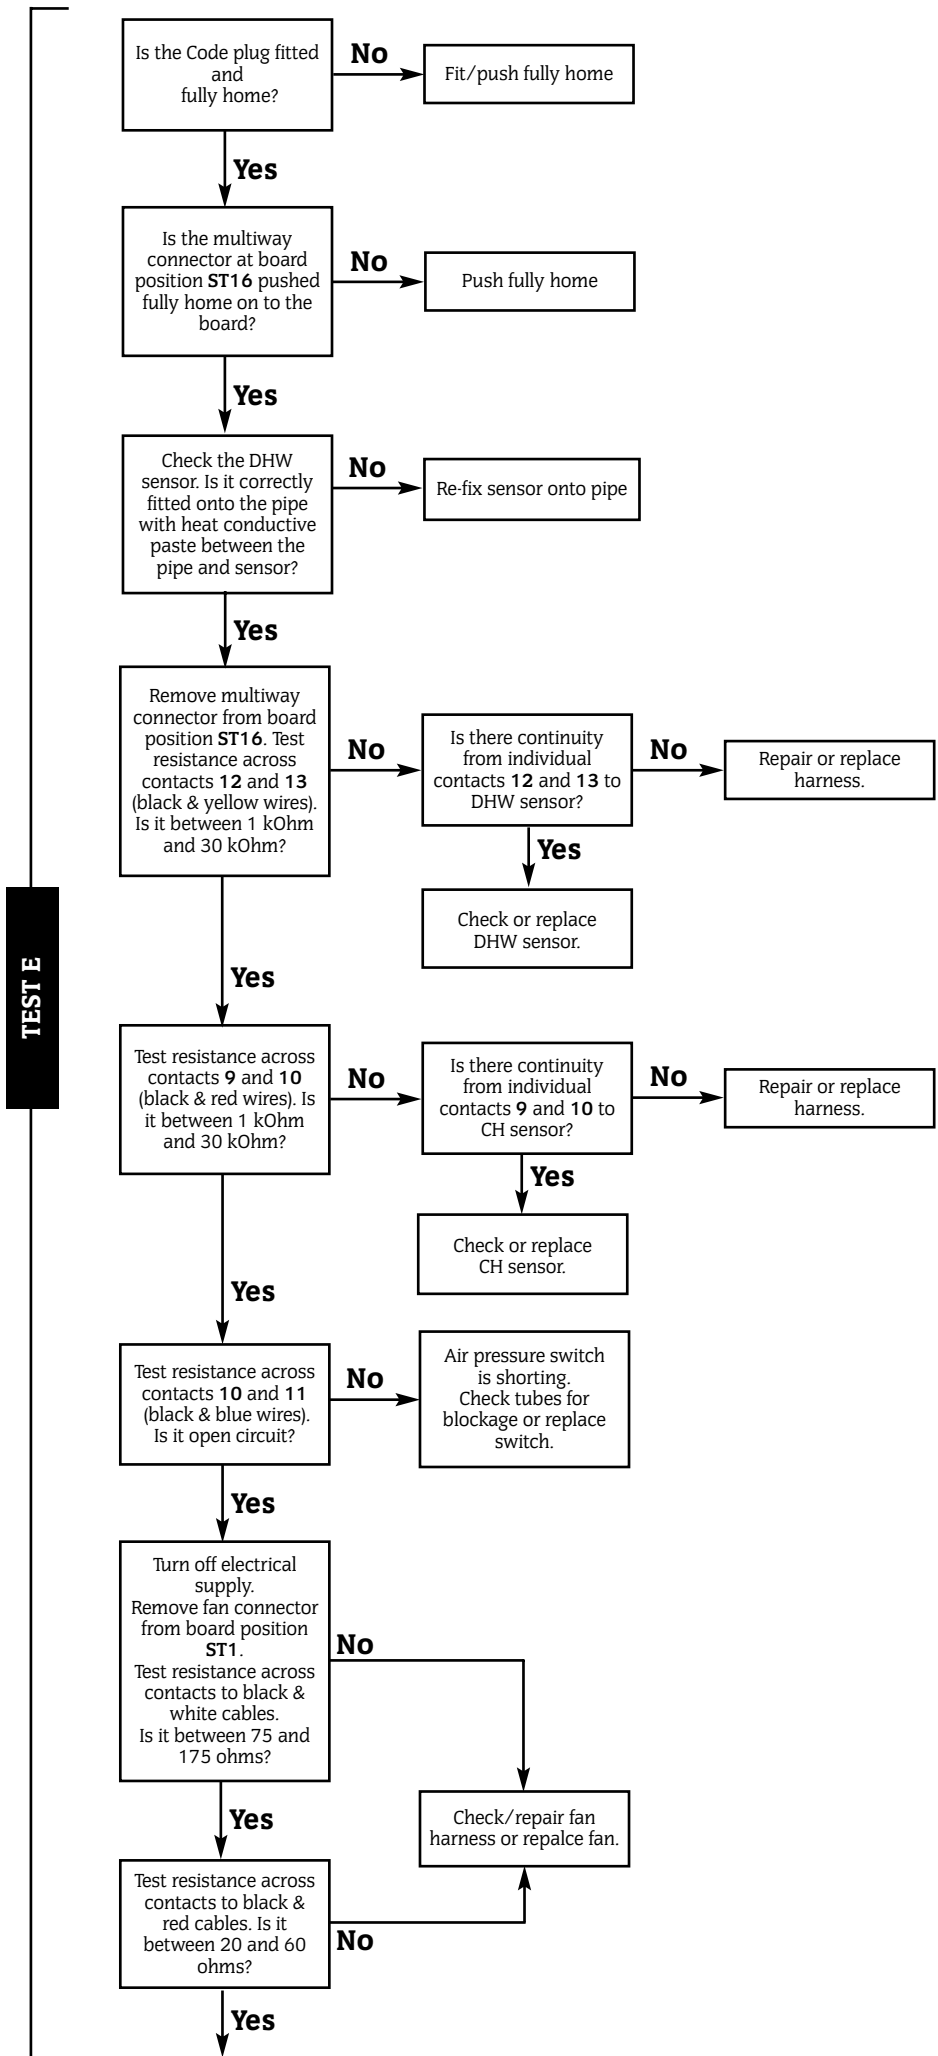

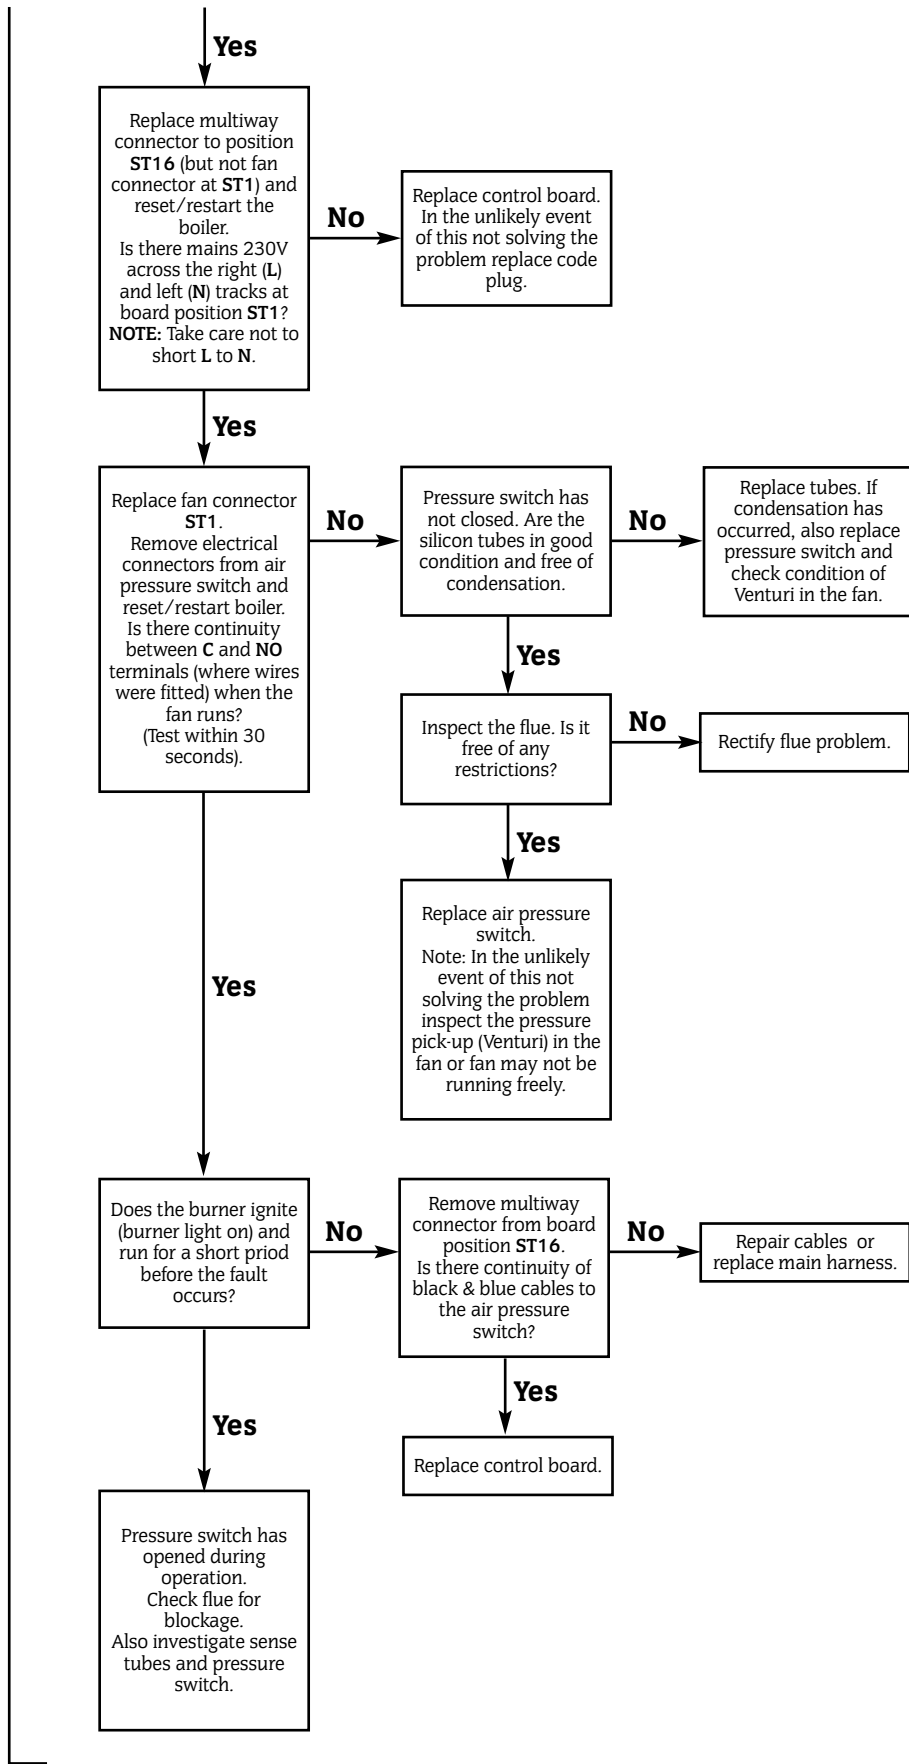

**TEST F**

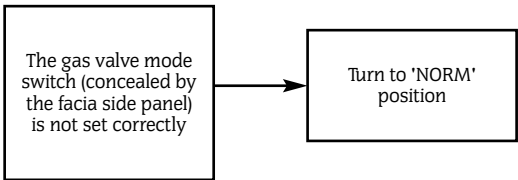

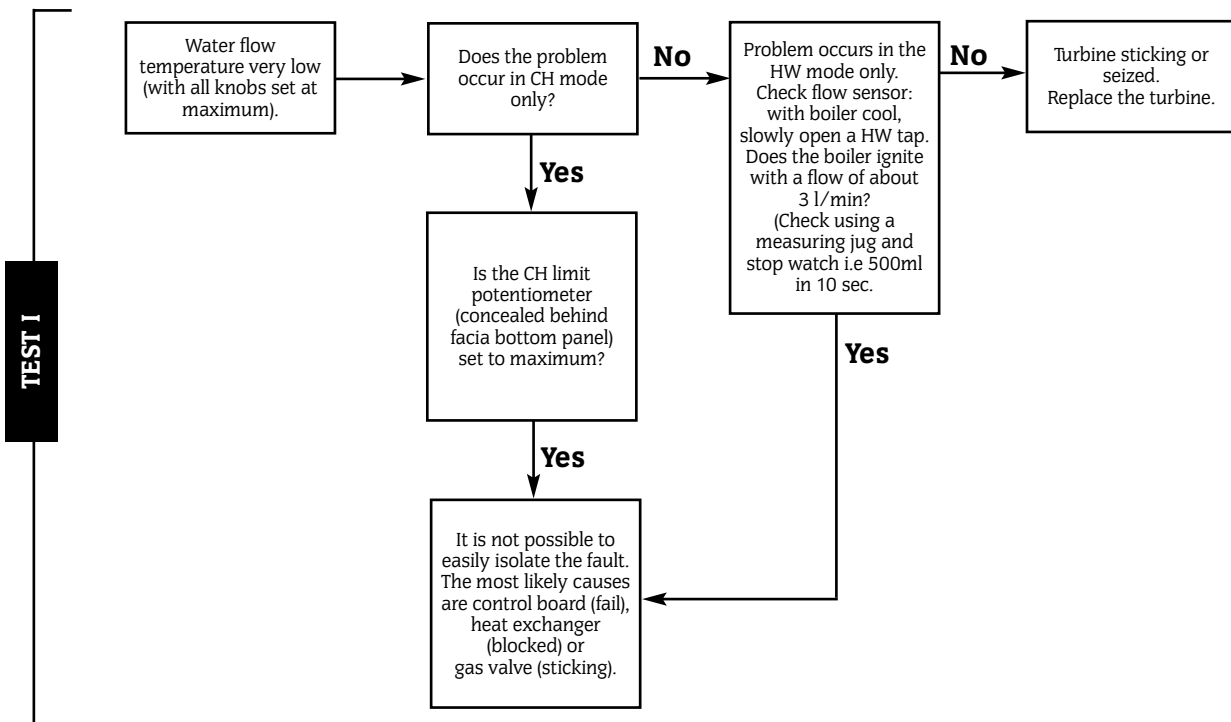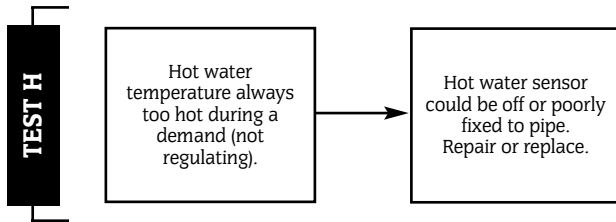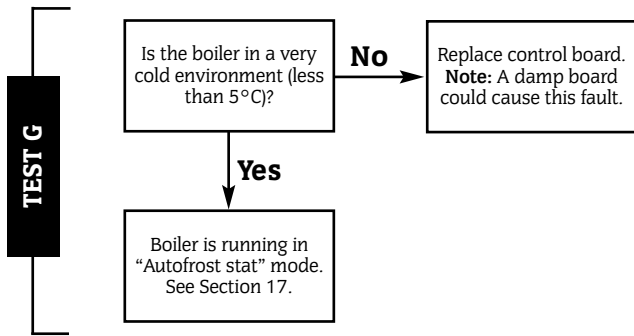







This manual is to be used in conjunction with the variant part number of the bar code below:



**8716105430**



---

# ROOM SEALED FLUE TERMINAL KIT

---

For use on the Danesmoor Front Service Room Sealed Oil Appliances

---

## INSTALLATION INSTRUCTIONS

---



**The appliance/flue system should be installed by a competent person**

## Contents

<b>1. Installation Regulations</b>	Page 1
<b>2. General Information</b>	Page 1
<b>3. Flue Lengths, Bends &amp; Extensions</b>	Page 1
<b>4. Measurement of Ducts</b>	Page 1
<b>5. Siting of Flue Terminal</b>	Page 4
<b>6. Installation</b>	Page 4
<b>7. Accessory/Spare Parts List</b>	Page 7

### 1. Installation Regulations

1.1. The appliance/flue system should be installed by a competent person. The person installing the appliance/flue system should be aware of the Health and Safety at Work Act and take appropriate action to ensure the regulations are adhered to. In order to give optimum efficiency and trouble free operation the appliance/flue system must be commissioned by an OFTEC registered engineer, as required by the building regulations.

1.2. The manufacturers notes must not be taken, in any way, as overriding statutory obligations.

1.3. The roomed sealed terminal has been designed to discharge the products of combustion without the need for a conventional chimney.

### 2. General Information

**IMPORTANT: In addition to the following notes, reference must be made to the appliance Installation and Servicing instructions.**

2.1. The flue system covered in these instructions can only be used with Danesmoor Front Service (FS) Oil Appliances.

2.2. These instructions cover both low level discharge and high level horizontal flue systems.

2.3. The method of installation of the flue system may be varied to suit the actual site conditions. The instructions for connection and fixing the ducts must be adhered to.

2.4. There are three sizes of telescopic flue system available:

1. **Short RS** flue kit for wall thickness of 100mm (4 inch) to 150mm (6 inch)
2. **Standard RS** flue kit for wall thickness of 230mm (9 inch) to 400mm (15 inch)
3. **Long RS** flue kit for wall thickness of 400mm (15 inch) to 730 (28.7 inch)

### 3. Flue Lengths, Bends and Extensions.

3.1. The maximum flue length allowable is 2.5 metres as shown in Figs 1 and 2.

3.2. Extension kits are available in 500mm and 1000mm sections.

3.3. 90° and 45° bends are available. In addition to the 90° bend supplied with the flue kit one extra 90° bend or two 45° bend may be used.

A 90° bend is equivalent to 1000mm of straight duct.

A 45° bend is equivalent to 500mm of straight duct.

Therefore, if one extra 90° or two 45° bends are used the maximum straight ducting must not exceed 1.5 metres.

It is not recommended to cut the flue extensions.

### 4. Measurement of the Ducts

Flueing options are shown in figures 1 and 2.

Choose the duct depending on the wall thickness (L) and or the flue length required. L is the distance from the outside of the appliance casing to the outside face of the wall.

#### 4.1. Rear Discharge Low Level Flues as shown in figure 1a and 1b.

Using the **Short RS** flue kit

If L is between 100 – 150mm – (no extensions)

Using the **Standard RS** flue kit

If L is between:

230 – 400mm – (no extensions)

730 – 900mm – (500mm extension)

1230 – 1400mm – (1000mm extension)

1730 – 1900mm – (1000mm and 500mm extensions)

2230 – 2400mm – (2 x 1000mm extensions)

Using the **Long RS** flue kit

If L is between:

400 – 730mm – (no extensions)

900 – 1230mm – (500mm extension)

1400 – 1730mm – (1000mm extension)

1900 – 2230mm – (1000mm and 500mm extensions)

2400 – 2500-(2 x 1000mm extensions)

#### 4.2. Rear Discharge High Level Horizontal flue with one 90° Bend as shown in figure 1c.

L is calculated by taking the dimension from Section 4.1 for Rear Discharge Low Level Flues and subtracting the vertical extension length L1

Fig. 1. Rear discharge flue systems.

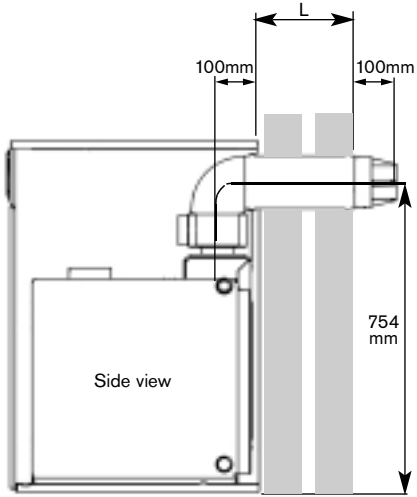


Fig. 1a. Low level horizontal flue with one 90° Bend

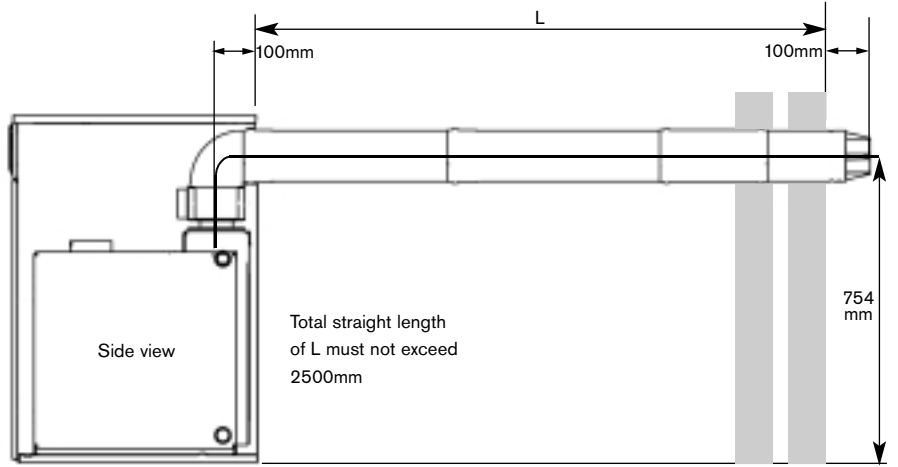


Fig. 1b. Low level horizontal flue with extensions and one 90° bend

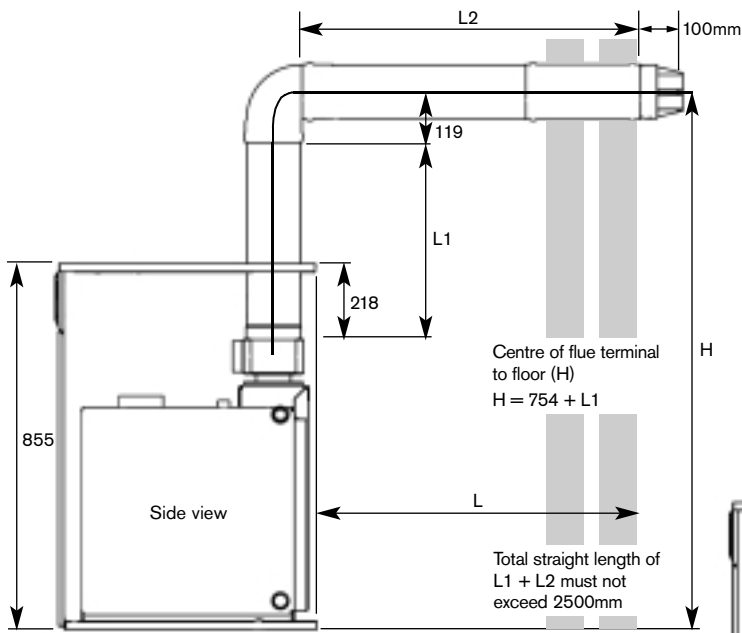


Fig. 1c. High level horizontal flue with one 90° bend

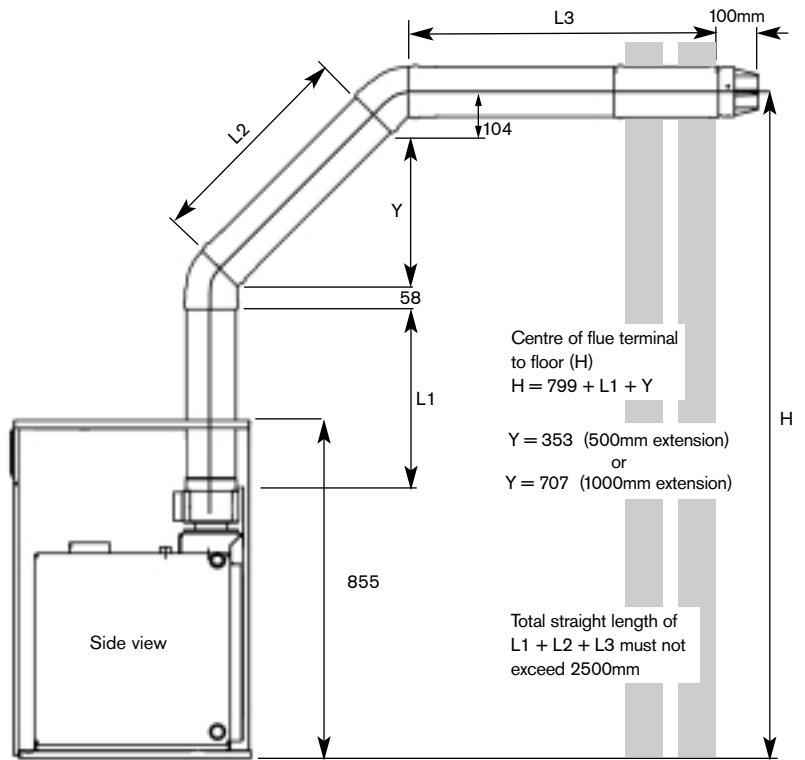


Fig. 1d. High level horizontal flue with two 45° bends

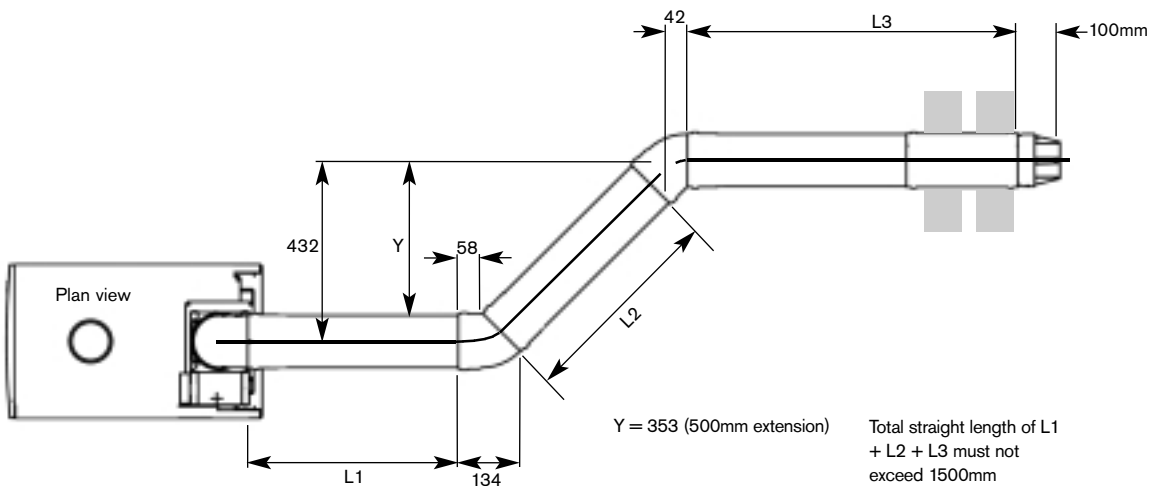


Fig. 1e.

Fig. 2. Side discharge flue systems.

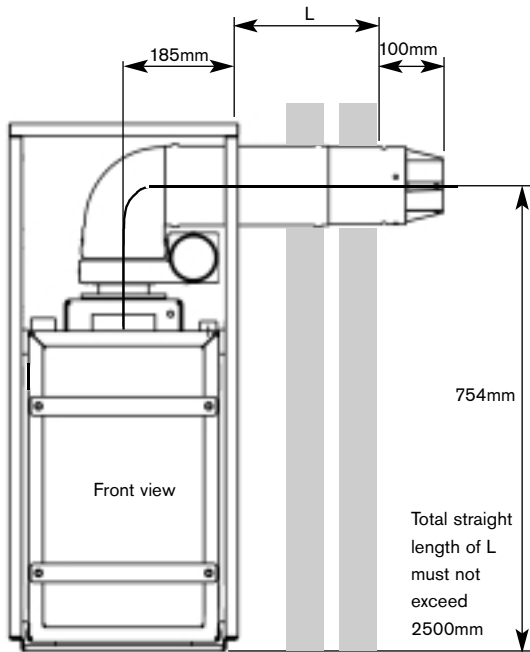


Fig. 2a. Low level horizontal flue with 90° bend

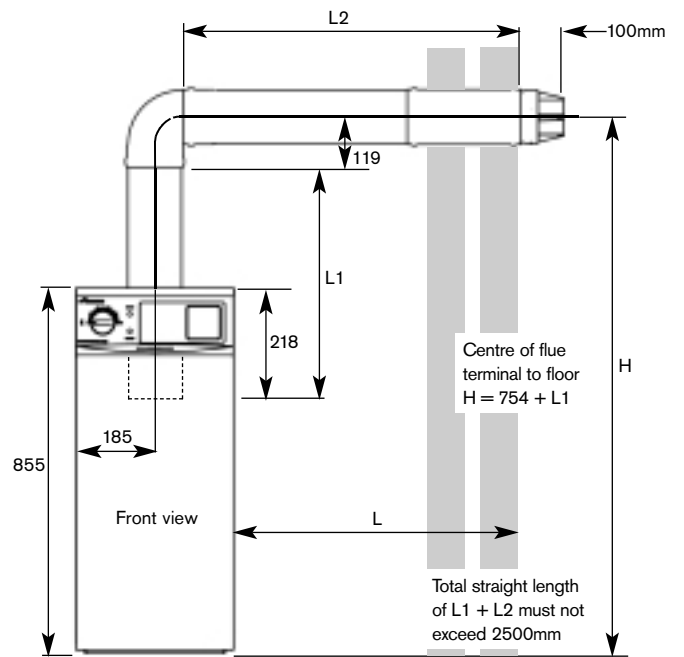


Fig. 2b. High level horizontal flue with one 90° bend

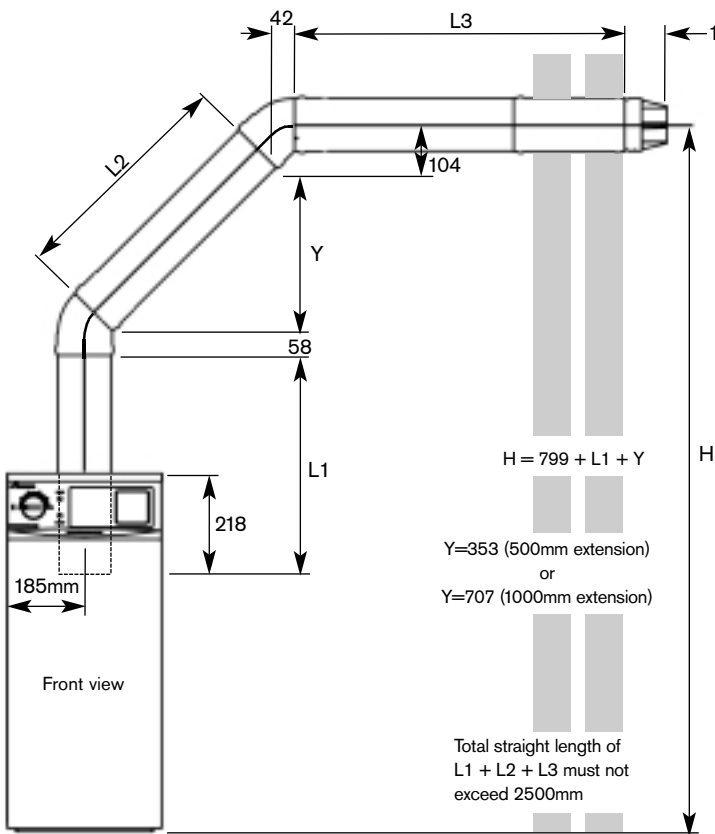


Fig. 2c. High level horizontal flue with two 45° bends

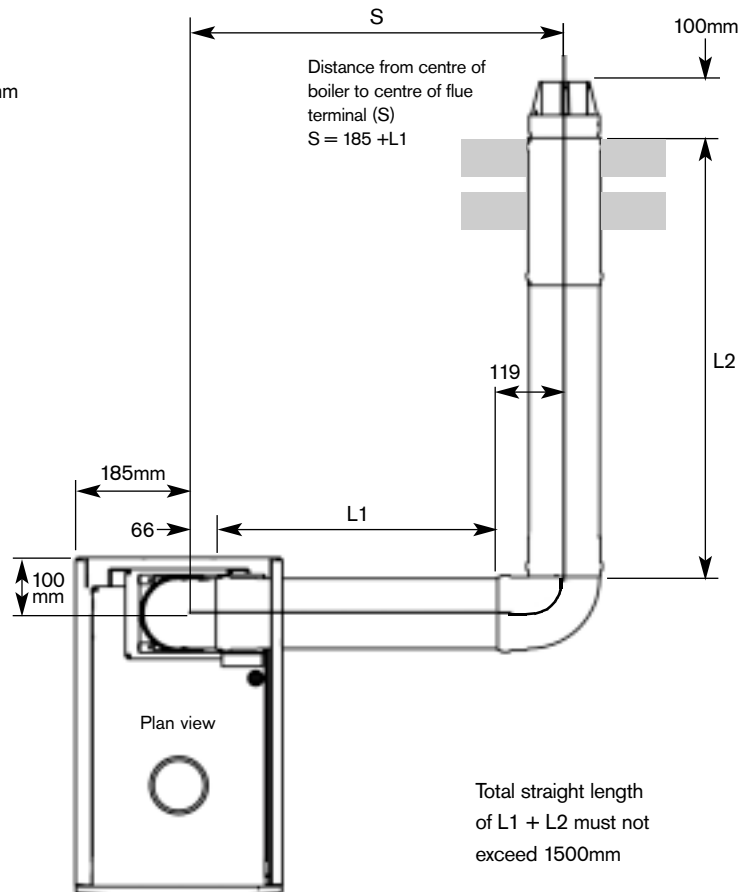


Fig. 2d. Side exit of flue with two 90° Bends

### 4.3. Left and Right Side Discharge Low Level Flues as shown in figure 2a

Using the **Standard RS** flue kit

If L is between :

- 145 – 315mm – (no extensions)
- 645 – 815mm – (500mm extension)
- 1145 – 1315mm – (1000mm extension)
- 1645 – 1815mm – (1000mm and 500mm extensions)
- 2145 – 2315mm – (2 x 1000mm extensions)

Using the **Long RS** flue kit

If L is between:

- 315 – 645mm – (no extensions)
- 815 – 1145mm – (500mm extension)
- 1315 – 1645mm – (1000mm extension)
- 1815 – 2145mm – (1000mm and 500mm extensions)
- 2315 – 2500mm – (2 x 1000mm extensions)

### 4.4. Left and Right Side Discharge High Level Horizontal flue with one 90° Bend as shown in figure 2b.

L is calculated by taking the dimension from Section 4.3 for left and right side Discharge Low Level Flues and subtracting the vertical extension length L1

## 5. Siting of the Flue Terminal

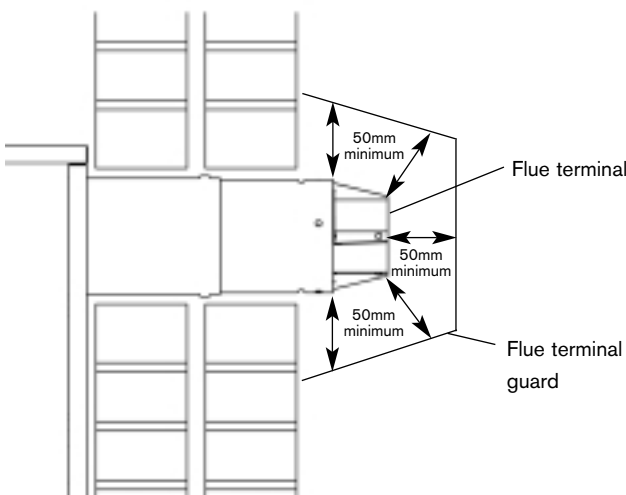


Fig. 3. Flue Terminal Guard

**5.1.** The flue terminal must be located in a suitable position, such that the products of combustion can be freely dispersed without the possibility of the gases entering the dwelling or that of a neighbouring dwelling.

**5.2.** Discharge of flue gases into carports or narrow

passageways is not recommended.

**5.3.** The terminal must not cause an obstruction or the discharge cause a nuisance as a result of either flue gases or terminal noise.

**5.4.** Where the flue terminal is fitted less than 2 metres above the surface to which people have access, fit a terminal guard. A suitable terminal guard is available from Worcester Heat Systems, Part Number 7 716 190 009, or alternatively a propriety terminal guard may be used provided it leaves at least 50mm clearance between the terminal and terminal guard as shown in Fig. 3.

**5.5.** If the terminal is fitted within 1 metre of a plastic or painted gutter or within 500mm of painted eaves then an aluminium or stainless steel shield at least 1 metre long should be fitted to protect the surface.

**5.6.** Take care to ensure the combustion products do not enter ventilated roof voids.

## 6. Installation

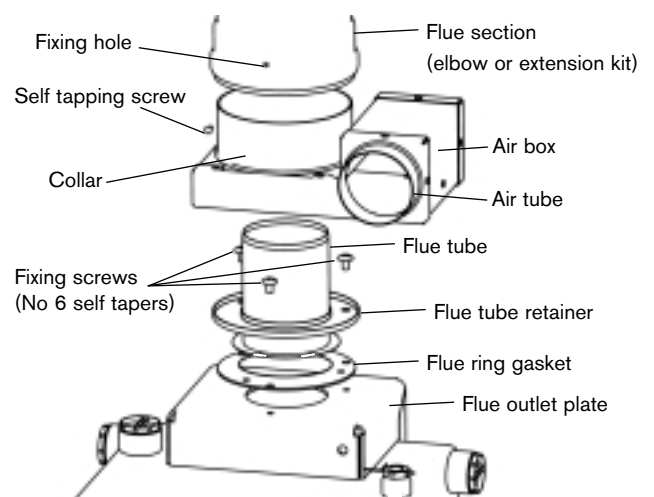


Fig. 4. Air Box Assembly

**6.1.** The method of installation will depend on the flue system layout, any installation restrictions and the preferred method chosen by the installer.

In all installation methods the basic assembly principle remains the same. The various flue sections push fit together until the flue hits the backstop in the previous flue. The flue/air seals must be coated with the silicon grease supplied, to allow easy assembly. Take care to avoid contaminating the grease with dirt as this will make fitting difficult!

Each flue section must be securely fastened together by drilling through the two pilot holes in each sec-

tion and screwing through with the self tapping screws provided.

Fig. 6a. Fitting of rubber sealing gasket


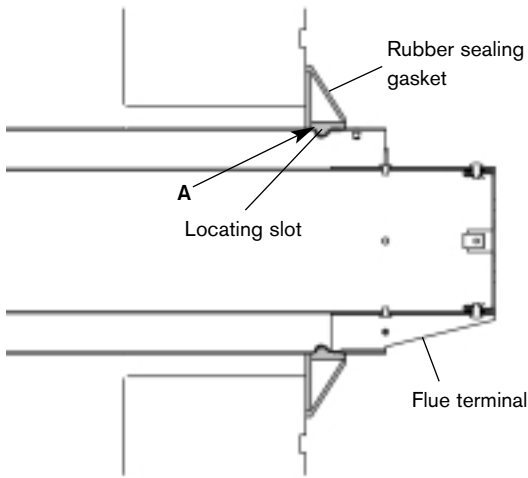


Fig. 6b. Fitting of rubber sealing gasket

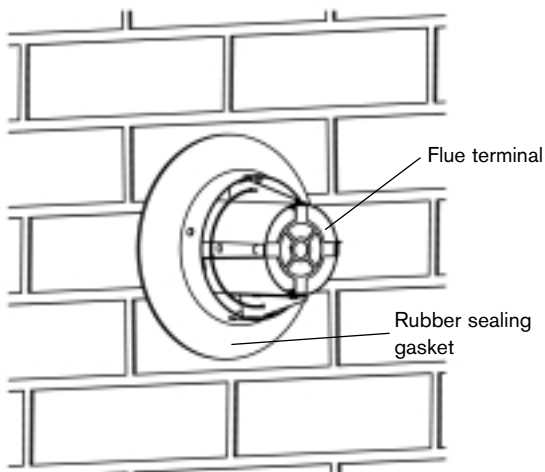

**6.2.** The following guide explains two possible methods of assembly.

The boiler can be fixed in position and the flue fed back through the wall (**Method 1**), or the flue can be assembled onto the boiler and the boiler /flue then pushed back against the wall to feed the flue through the wall (**Method 2**). In both cases the telescopic flue must be securely fastened at the required length using the two self tapping screws provided.

**Method 1.**

**6.3.** Remove the 4 inch (103mm) conventional flue spigot and gasket from the flue outlet plate by undoing the three screws.

**Note: To create a good seal between the boiler and air box assembly only use the flue ring gasket supplied within the RS flue kit.**

**6.4.** Position the new flue ring gasket on the flue outlet plate and clamp the flue tube in place using the flue tube retainer and screws as shown in fig 4.

**6.5.** When fitting an elbow directly to the air box, push the elbow fully down on the air box collar and rotate the elbow to the required position (left, rear or right) ensuring that the air tube is pointing to the front of the appliance as shown in fig 4.

**6.6.** Using the fixing holes as a guide, drill through with the 2.8mm drill bit provided in the kit and fasten the elbow to the air box collar using the two self tapping screws provided. Where access to a fixing hole is not possible (e.g. left and right flue options), drill a new securing hole position, at the same height, as far as possible from the other screw.

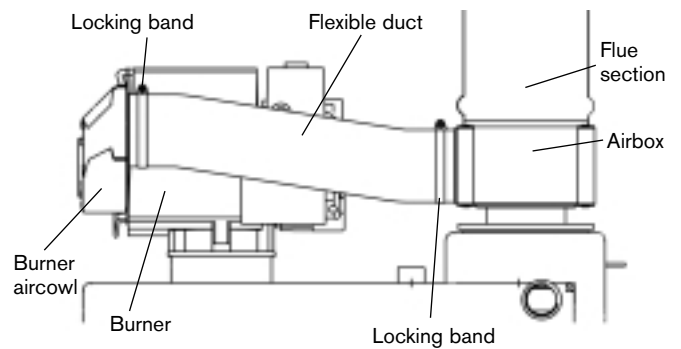


Fig. 7. Connection of the flexible air hose to the burner and air box

**6.7.** When fitting a vertical extension attach the extension to the air box and then attach the elbow to the extension in a similar manner to 6.5 to 6.6.

**6.8.** Add any further extensions/elbows in a similar manner to 6.5 to 6.7, until the last section before exiting the wall is reached.

**6.9.** Slide the air box/flue assembly onto the flue tube and push down until the assembly bottoms out on the flue tube. This must leave a minimum air gap of 15mm between the air box and the flue outlet plate. The nominal air gap will be 27mm when an elbow is fitted directly to the air box and 17mm when an extension is fitted.

**6.10.** Using the flue as a guide, mark the position of the hole required to accept the flue terminal or measure the flue centre position as shown in figs 1 and 2.

**6.11.** Remove the air box/flue assembly.

**6.12.** Cut a round hole in the wall of minimum diameter 150 mm.

- 6.13.** Check that the telescopic flue slides freely. Fasten together the flue terminal and any extension sections intended to pass through the wall, in a similar manner to 6.6. Do not fix the telescopic length at this stage!
- 6.14.** Push fit the flue terminal assembly onto the last flue section of the air box/flue assembly and drill the two securing holes. Do not screw together at this stage! Consideration must be given to the position of these securing screws on the section which will be fed back through the hole in the wall. Where access to a fixing screw will not be possible when the flue is installed, drill a new securing hole position, at the same height, as far as possible from the other screw.
- 6.15.** Remove the flue terminal assembly and push the telescopic end in to give the shortest length.
- 6.16.** Slide the air box/flue assembly onto the boiler flue tube and push down until the assembly bottoms out on the flue tube.
- 6.17.** Feed the flue terminal assembly back through the hole in the wall from outside the property and push fit onto the flue section within the property. Take care to prevent dirt falling onto the greased seals!
- 6.18.** Align the fixing holes previously drilled in 6.14 and temporarily fix with one screw.
- 6.19.** From outside the property pull the telescopic end to the required length so that the inside edge "A" (See fig 6a) of the terminal seal locating slot is flush with the outside of the wall. Take care to avoid sharp edges- wear gloves!
- 6.20.** Place temporary packing underneath the white section of the flue terminal to support it.
- 6.21.** Remove the fixing screw added in 6.18.
- 6.22.** Remove the flue terminal assembly by pushing the assembly forward, from within the property, to release it from the air box/flue assembly. Take care not to alter the set length!
- 6.23.** Fix the telescopic length. Using the fixing holes as a guide, drill through with the 2.8mm drill bit provided in the kit and fasten the terminal using the two self tapping screws provided.
- 6.24.** Re-fit the flue terminal assembly and secure using two self tapping screws.
- 6.25.** Continue fitting as described in 6.46.

## **Method 2.**

Note: The sliding section of the telescopic flue terminal must be fixed using the self tapping screws provided. The length can be set by measurement as described in 6.36 to 6.43 or by pushing the whole boiler/flue assembly into position and setting the sliding terminal to the correct length. The terminal can then be fixed by pulling the whole boiler/flue assembly back far enough to drill through the pilot holes and fasten with the self tapping screws as described in 6.23. When using this method ignore 6.36, 6.39, 6.42, 6.43.

**6.26.** Remove the 4 inch (103mm) conventional flue spigot and gasket from the flue outlet plate by undoing the three screws.

**Note: To create a good seal between the boiler and air box assembly only use the flue ring gasket supplied within the RS flue kit.**

**6.27.** Position the new flue ring gasket on the flue outlet plate and clamp the flue tube in place using the flue tube retainer and screws as shown in fig 4.

**6.28.** When fitting an elbow directly to the air box, push the elbow fully down on the air box collar and rotate the elbow to the required position (left, rear or right) ensuring that the air tube is pointing to the front of the appliance as shown in fig 4.

**6.29.** Using the fixing holes as a guide, drill through with the 2.8mm drill bit provided in the kit and fasten the elbow to the air box collar using the two self tapping screws provided.

**6.30.** Where access to a fixing hole is not possible (e.g. left and right flue options), drill a new securing hole position, at the same height, as far as possible from the other screw.

**6.31.** When fitting a vertical extension attach the extension to the air box and then attach the elbow to the extension in a similar manner to 6.28 to 6.30

**6.32.** Add any further extensions/elbows, in a similar manner to 6.28 to 6.30, until the last section before exiting the wall is reached.

**6.33.** Move the boiler to the desired position.

**6.34.** Slide the air box/flue assembly onto the flue tube and push down until the assembly bottoms out on the flue tube. This must leave a minimum air gap of 15mm between the air box and the flue outlet plate. The nominal air gap will be 27mm when an elbow is fitted directly to the air box and 17mm when

an extension is fitted.

**6.35.** Using the flue as a guide, mark the position of the hole required to accept the flue terminal or measure the flue centre position as shown in figs 1 and 2.

**6.36.** Measure and note the distance from the rear of the boiler to the wall for rear exit flues, or from the appliance cabinet side to the wall for left/right exit flues. This will be used to calculate the flue length "L".

**6.37.** Pull the boiler forward to allow fitting of the flue terminal.

**6.38.** Cut a round hole in the wall of minimum diameter 150 mm.

**6.39.** Measure and note the wall thickness through the hole. This will be used to calculate the flue length "L".

**6.40.** Fix any further extensions to the elbow in a similar manner to 6.28 to 6.30.

**6.41.** Check that the telescopic flue slides freely. Push the telescopic terminal section onto the last elbow/extension and fasten in a similar manner to 6.28 to 6.30.

**6.42.** Calculate the length "L" as shown in figs 1 & 2 in conjunction with Section 4 i.e. distance from rear of appliance to outside face of the wall, or distance from side of appliance cabinet to outside face of the wall.

**6.43.** Slide the telescopic terminal to set the length "L" from the outside of appliance to the inside edge "A" of the terminal seal locating slot. See fig 6a.

**6.44.** Using the fixing holes as a guide, drill through with the 2.8mm drill bit provided in the kit and fasten

the telescopic terminal section using the two self tapping screws provided.

**6.45.** Slide the boiler back into position carefully feeding the flue terminal through the hole in the wall.

**6.46.** Where vertical flue sections have been fitted raise the air box/flue assembly by 3mm per 1 metre flue extension, to allow for the flue tube expansion, and fix the assembly in place. the wall bracket is provided in the 1 metre extension kit.

**6.47.** To prevent rain running back into the terminal, it is recommended that the terminal exit slopes down by a few degrees. This can be achieved by holding the terminal strip down at the external end and placing packaging material between the topside of the terminal and the wall, inside the hole. Check the slope using the spirit level.

**6.48.** Make good the internal and external brickwork or rendering.

**6.49.** Push the rubber sealing gasket over the terminal. The locating rib of the rubber seal fits into the locating slot of the flue terminal as shown in Fig. 6a and 6b.

**6.50.** Undo the locking band on the burner air cowl and remove the air inlet silencer tube.

**6.51.** Fix the flexible duct between the burner and air box using the locking band provided within the kit and the locking band removed from the burner air cowl. Tighten sufficiently to form a good seal. See Fig. 7.

**Note: If the flue assembly is taken apart after the appliance has been running the 80mm flue tube seals within the flue tubes should be replaced.**

## 7. Accessory/spare parts List

Short RS flue kit	7 716 190 027
Standard RS flue kit	7 716 190 023
Long RS flue kit	7 716 190 024
RS 500mm Extension Flue Kit	7 716 190 025
RS 1000mm Extension Flue Kit	7 716 190 026
RS 90° Elbow Flue Kit	7 716 190 028
RS 45° Elbow Flue Kit	7 716 190 029
Wall Bracket Front Service Flue Kit	7 716 190 030
Seal flue tube 80mm	8 716 105 588 0
Seal air tube 125mm	8 716 105 590 0
Seal 80mm Air box	8 716 106 145 0
Flue ring gasket	8 716 142 226 0





Worcester Heat Systems Limited, Cotswold Way, Warndon, Worcester WR4 9SW.  
Telephone: (01905) 754624. Fax: (01905) 754619.  
Technical Helpline 08705 266241.

---

This booklet is accurate at the date of printing but will be superseded and should be disregarded if specifications and/or appearances are changed in the interests of continued improvement.


All goods sold are subject to our official Conditions of Sale, a copy of which may be obtained on application.

**PUBLICATION 8 716 106 034b 09/03**

**British Gas**



**Scottish Gas**

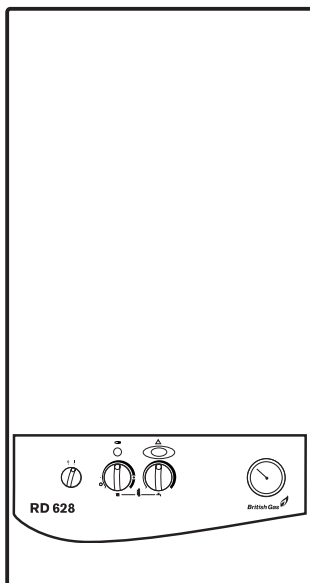

# **RD 628**

G.C. NUMBER: 47 108 14



# **USER INSTRUCTIONS & CUSTOMER CARE GUIDE**



# EXCELLENCE COMES AS STANDARD

Thank you for purchasing a RD 628 gas-fired combination appliance.

RD 628 appliances are made by Worcester Heat Systems and the strictest quality control standards are demanded throughout every stage of production.

The result is that your new RD 628 appliance offers you the very best of everything - quality, efficiency, economical running costs, proven reliability and value for money.

What's more, you also have the assurance of our no-nonsense 1 year parts and labour guarantee.

## CONTENTS

	Page No.
Operating Instructions .....	3-11
Fault and Breakdowns	12
Maintenance and Extended Warranty Information .....	13-14
Guarantee Details ...	15-16





# GENERAL INFORMATION

## GAS SAFETY (INSTALLATION AND USE) REGULATIONS 1998

It is the law that all gas appliances must be installed by a competent person in accordance with the above regulations. Failure to install appliances correctly could lead to prosecution. It is in your interest and that of safety to ensure compliance with the law. The manufacturers notes must not be taken, in any way, as over-riding statutory obligations.

**WARNING:** This appliance must be earthed and protected by a 3 amp fuse to BS 1362.

**ELECTRICITY SUPPLY:** 230V ~ 50Hz

**IMPORTANT:** To get the best from your RD 628 appliance please read these instructions carefully.

**NOTE:** In the event of a fault the appliance should not be used until the fault has been corrected by a competent person.

## BENCHMARK

The Benchmark initiative is a code of practice to encourage the correct installation, commissioning and servicing of domestic central heating boilers and system equipment.

A 'log book' is dispatched with every appliance. **This is a vital document that needs to be completed by the installer at the time of installation. It confirms that the boiler has been installed and commissioned according to the manufacturers instructions.**

All CORGI Registered Installers carry a CORGI ID card and have a registration number. Both should be recorded in your central heating log book. You can check that your installer is CORGI registered by calling CORGI on 01256 372300.

Without the completion of the log book, manufacturers may refuse to respond to a call-out request. It is important that your installer has given you the fully completed log book.

## GENERAL DESCRIPTION

(See Fig.1.)

The RD 628 is a combined domestic hot water and central heating appliance. It consists of a gas fired boiler having a varying output of between 8.1 and 28kW, and all the necessary controls to provide mains fed domestic hot water and central heating.


The appliances are fitted with a manual ON/OFF Switch.

The appliances can operate in one of two modes. Hot water only or hot water and central heating.

## Hot Water Mode:

When a demand is made for hot water by opening a tap or shower, the flow turbine will energise the boiler. The burner will light at its maximum setting and hot water will be delivered to the tap or shower.

When hot water is no longer required the appliance pump or fan may continue to operate to dissipate the excess heat within the boiler.

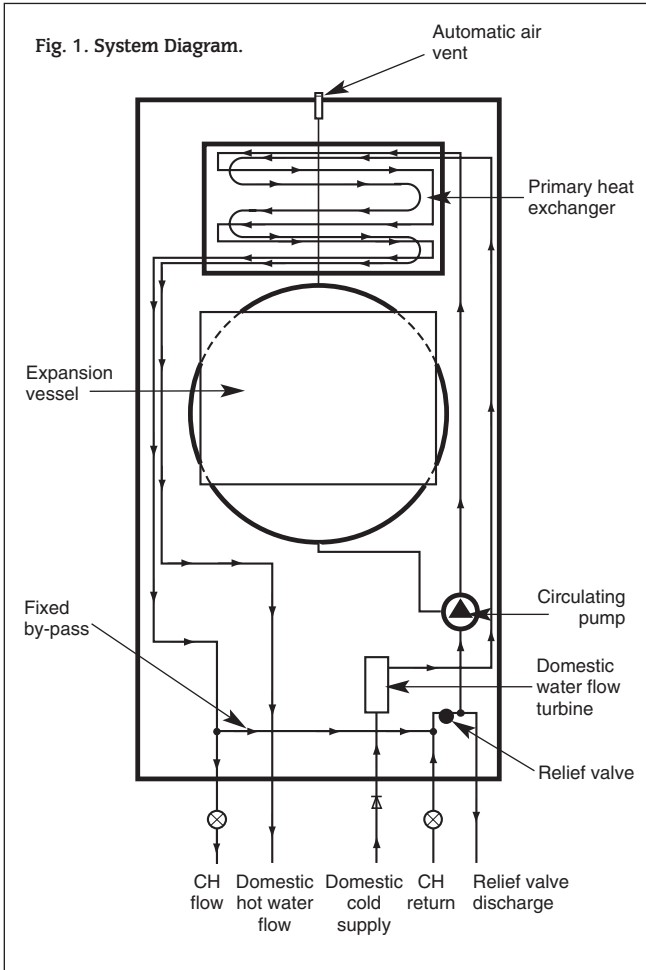



# GENERAL NOTES

## **CENTRAL HEATING SYSTEM**

During the first few hours of operation of the central heating system, check that all radiators are being heated at an even rate. Should the upper area of a radiator be at a lower temperature than the base of the radiator, it should be vented by releasing air through the venting screw at the top of each radiator. Make sure your installer shows you how to carry out the operation. Repeated venting will reduce the quantity of water in the system and this must be replenished for safe and satisfactory operation of the appliance. Should water leaks be found in the system or excessive venting be required from any radiator, a service engineer should be contacted and the system corrected.

## **SEALED HEATING SYSTEM**

The appliance must be fitted to a sealed heating system which is pre-pressurised. Your installer will advise you on the minimum and maximum pressure that should be indicated on the pressure gauge. See Fig. 2. Check regularly that this pressure is maintained and contact your installer or maintenance engineer if there is a permanent significant drop in pressure indicated on the gauge. If the system loses pressure it should be re-pressurised as instructed by the installer (**N.B. Maximum operating pressure 2.5 bar**).

## CLEARANCES

Your installer will have provided adequate space around the appliance for safety and servicing. Do not restrict this space by the addition of cupboards, shelves etc. close to the appliance.

	RSF	Unventilated compartment
Left-hand side	10	80
Right-hand side	10	80
In Front	600	240
Above the casing	180	30 above flue elbow or turret
Below	200	200

Minimum clearances in millimetres.

**NOTE: If the appliance is to be enclosed after the installation then the instructions given in Section 6, Air Supply, of the Installation Book MUST be followed.**

## ROOM THERMOSTAT

A room thermostat must be fitted for control of the central heating temperature. It will be located in one room of the home. The method of setting a room thermostat varies with the type and manufacture. Refer to the instructions supplied with the room thermostat.

## THERMOSTATIC RADIATOR VALVES

If thermostatic radiator valves are to be fitted to the system then they must conform to the requirements of BS2767 It is advisable to leave one valve permanently set at maximum to prevent the boiler short cycling.

## SHOWERS, BIDETS, TAPS AND MIXING VALVES

Standard hot and cold taps and mixing valves used with the appliance must be suitable for operating at mains pressure. Thermostatically controlled shower valves will guard against the flow of water at too high a temperature.

If using a pressure equalising valve, set the Domestic Hot Water temperature control knob to the 'MAX' position.

Hot and cold mains fed water can be supplied direct to an overrim flushing bidet subject to local water company requirements.

With all mains fed systems the flow of water from the individual taps will vary with the number of outlets operated simultaneously and the cold water mains supply pressure to the property. Flow balancing using 'Ball-o-Fix' type valves is recommended to avoid an excessive reduction in flow to individual outlets.

For further information contact Worcester Heat Systems technical Helpline.

## HOT AND COLD FLOW

If the flow of water demanded from both hot and cold service outlets is dependent upon mains supply, it may not be possible in some installations to operate all outlets simultaneously.

## WATER MAINS FAILURE

It is important to note that in the event of a mains water supply failure, no tap water will be available until the mains supply is restored. The appliance can still be used for heating provided that the system is of the sealed system type.

## **USE IN HARD WATER AREAS**

Normally there is no need for scale protection. However, in areas of exceptionally hard water supply it is recommended that an In-Line scale inhibitor be fitted.

Installation should be strictly in accordance with the requirements of the local Water Company. An isolating valve to facilitate servicing should be incorporated.

The water hardness may be determined using the standard test paper or by reference to the local Water Company.

For further information contact Worcester Heat Systems technical Helpline.

## **VENTILATION OF ROOM SEALED FANNED FLUE (RSF) APPLIANCES**

These are room sealed appliances and any ventilation openings in a wall or door must not be obstructed. Do not allow the flue terminal fitted on the outside wall to become obstructed or damaged.

**NOTE:** Do not place anything on top of the appliance.

If the appliance is fitted in a compartment do not use the compartment for storage purposes unless it conforms to the requirements of BS 6798:1987: Section 6. It is essential that the airing space is separated from the boiler space by a perforated non-combustible partition as described in BS 6798:1987.

## **CIRCULATING PUMP**

This may be fitted with a speed adjuster. If so it will be factory set at maximum and should not be changed.

## **FROST PRECAUTIONS**

If the appliance is not to be used for a long period of time and there is a likelihood of freezing, then the appliance should be drained.

The Worcester Heat Systems technical Helpline will advise you on suitable frost protection.

For short periods the built-in frost protection of the appliance will be adequate.

## **SERVICE**

Annual servicing is important in order to ensure continuing high efficiency and long life for your appliance. Three star service cover from British Gas can offer comprehensive cover for your central heating - please call 0845 9 60 50 40 for further details.

## **WARNING**

If a gas leak exists, or is suspected, turn off the gas supply to the appliance at the service cock and consult your local service engineer.

Do not touch any electrical switches to turn them either on or off. Open all windows and doors. Do not smoke. Extinguish all naked lights.

## **CLEANING**

Do not use abrasive cleaners on the outer casing. Use a damp cloth and a little detergent.

**UNDER NO CIRCUMSTANCES SHOULD ANY SEAL ON THE BOILER BE BROKEN.**





# OPERATION OF CONTROLS

The appliance is fitted with the following controls:

## OPERATING SWITCH

In the '0' position there is no mains electricity to the control board.

In the 'I' position mains electricity is connected to the control board.

## CENTRAL HEATING TEMPERATURE CONTROL

The position of this knob will determine the temperature of the water delivered to the radiators between fully clockwise and anti-clockwise to the ► mark. When the knob is turned anti-clockwise past the ► position towards the '☀' (Summer Position), then the appliance will operate in the HOT WATER mode only and no heat will be delivered to the radiators.

## DOMESTIC HOT WATER TEMPERATURE CONTROL

The position of this knob will determine the temperature of the water delivered at the domestic hot water taps between fully clockwise and anti-clockwise positions.

By slightly reducing the flow of domestic water from the tap, the delivery temperature of the water will be further increased. This is of particular advantage in the winter, for example to increase bath water temperature and to remove heavy grease deposits on plates, etc. Also this will provide an added advantage of reducing the delay before hot water is obtained.

## FACIA MOUNTED PROGRAMMER (if fitted)

Your installer may have mounted either a mechanical or an electronic programmer into the fascia of your appliance. Operating instructions are supplied with the programmer.

## RESET BUTTON

Press this button in for five seconds if the indicator light is flashing slowly.

If indicator lamp is flashing fast turn power OFF and ON at the boiler to reset.

## SYSTEM PRESSURE GAUGE

The black needle will show the actual pressure in the system. When operating the pressure indicated must not be greater than 2.5bar. If it is then contact your installer.

# INDICATOR LIGHTS

## Flame detection indicator:



**OFF:** Burner off  
**ON:** Burner on




## Fault indicator:

**FLASHING SLOW:** Ignition lockout or boiler overheat  
(once per second)

**FLASHING FAST:** Appliance fault  
(five times a second)

Fig. 2. Controls.

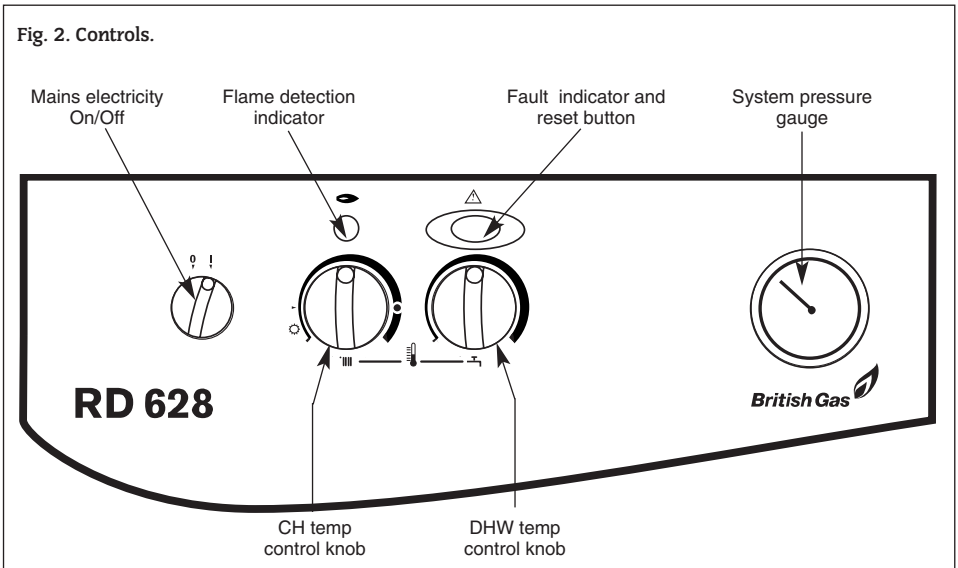



# TO LIGHT AND STOP THE APPLIANCE

## TO LIGHT THE APPLIANCE

Check that the water valves to the central heating circuit are open.  
Check that the black needle on the pressure gauge is not below the required pressure.

Switch on the mains electricity. Set the room thermostat to maximum. Turn the central heating temperature control knob fully clockwise.

The burner will light and the red flame detection indicator will light.  
Set the central heating and hot water temperature control knobs and the room thermostat, if fitted, to the desired temperature.

## TO STOP THE APPLIANCE

### For Short Periods

Turn the central heating temperature control knob fully anti-clockwise to the 'O' position.

### For Long Periods

Turn the operating switch to the 'O' position. Switch off the mains electricity.

A fascia mounted electronic programmer will retain its settings for about two weeks, after which it will return to the factory set programme. The time will be saved for approximately 7 hours. The display will disappear after approximately 1 hour.

A fascia mounted mechanical programmer will require resetting once the operating switch has been set to 'O', or the mains supply has been disconnected.

## ELECTRICITY SUPPLY FAILURE

If the electricity supply fails the appliance will not operate. Once the supply is restored the appliance will return to normal operation. If a programmer is fitted, check that the settings have been maintained.

## OVERHEAT CUT-OFF THERMOSTAT

The appliance will enter a lockout condition in the event of overheating.

An overheat cut-off thermostat is fitted to the appliance which will interrupt the electricity supply to the gas valve.

If the overheat cut-off has operated, the fault indicator will flash once a second. If this condition continues to occur, then call a service engineer.

The appliance can be reset by pressing the fault indicator button and holding in for 5 seconds when the appliance has cooled.

## IGNITION LOCKOUT

The appliance will enter a lockout condition in the event of the burner failing to ignite.

If the burner fails to light after 5 attempts the electricity supply to the gas valve will be interrupted.

If ignition lockout has occurred, the fault indicator will flash slowly (approximately once per second).

The appliance can be reset by pressing the reset button and holding in for 5 seconds. Check that the gas supply has not been interrupted.

If this condition continues to occur, then call a service engineer.

## **AIR FLOW DEVICE**

The appliance will enter a lockout condition in the event of an air flow fault.

If the controls fail to detect the correct air flow through the appliance the electricity supply to the gas valve will be interrupted.

If an air flow fault has occurred, the fault indicator will flash (approximately five times per second).

The appliance will try to re-light after a waiting period of approximately 5 minutes. Check that the flue terminal has not been obstructed or damaged.

If this condition continues to occur, then call a service engineer.



# APPLIANCE FAILS TO OPERATE

If your RD 628 appliance should fail to operate correctly, please call British Gas on:

**0845 9 60 50 40**

## **IMPORTANT**

Do not touch or adjust  
any sealed component



# MAINTAINING YOUR APPLIANCE

Your new RD 628 gas-fired appliance represents a long-term investment in a reliable, high quality product.

In order to realise its maximum working life, and to ensure it continues to operate at peak efficiency and performance, it is essential that your boiler receives regular, competent servicing and annual maintenance checks beyond the initial 12 month guarantee period.

To arrange for a British Gas Three Star Cover agreement please call 0845 9 60 50 40.





# YOUR RD 628 GUARANTEE

This appliance is guaranteed against faulty materials or workmanship for a period of twelve calendar months from the date of installation subject to the following conditions and exceptions.

1. That during the currency of this guarantee any components of the unit which are proved to be faulty or defective in manufacture will be exchanged or repaired free of material charges and free of labour charges by Worcester Heat Systems Limited.
2. That the householder may be asked to prove the date of installation, that the appliance was correctly commissioned and, where appropriate, the first 12 month service has been carried out to the satisfaction of Worcester Heat Systems Limited when requested.
3. That any product or part thereof returned for servicing under the guarantee must be accompanied by a claim stating the Model, Serial Number, Date of Installation.
4. That Worcester Heat Systems Limited will not accept responsibility for damage caused by faulty installation, neglect, misuse or accidental damage, the non-observance of the instructions contained in the installation and Operating Instructions Leaflets.
5. That the appliance has been used only for normal domestic purposes for which it was designed.
6. That this guarantee applies only to equipment purchased and used in mainland Great Britain.

This guarantee is given in addition to all your normal statutory rights.





# GUARANTEE REGISTRATION

You should complete and return the postpaid Guarantee Registration Card within 14 days of purchase.

The card will register you as the owner of your new RD 628 appliance and, while this will not affect your statutory rights in any way, it will assist us to maintain an effective and efficient customer service by establishing a reference and permanent record for your boiler.

**IMPORTANT:** SERIAL NUMBER. Copy the number off the Guarantee Card.


FOR YOUR OWN RECORD

MODEL

SERIAL NUMBER

TYPE/SIZE

DATE OF INSTALLATION

Do not forget to keep the  Log book in a safe place.

**British Gas**



**Scottish Gas**



**MANUFACTURED EXCLUSIVELY FOR BRITISH GAS BY**  
Worcester Heat Systems Limited. Cotswold Way, Warndon, Worcester WR4 9SW.

Telephone: (01905) 754624 Fax: (01905) 754619.

Technical Helpline (08705) 266241.